



常熟
开关




CW2 系列 智能型万能式断路器

CW2 SERIES INTELLIGENT AIR CIRCUIT BREAKER

常熟开关 持续超越

- 国家创新型试点企业
- 国家重点高新技术企业
- 全国企事业单位知识产权示范单位
- 全国守合同重信用企业
- 国家科学技术进步二等奖获得者

B031504B20 06

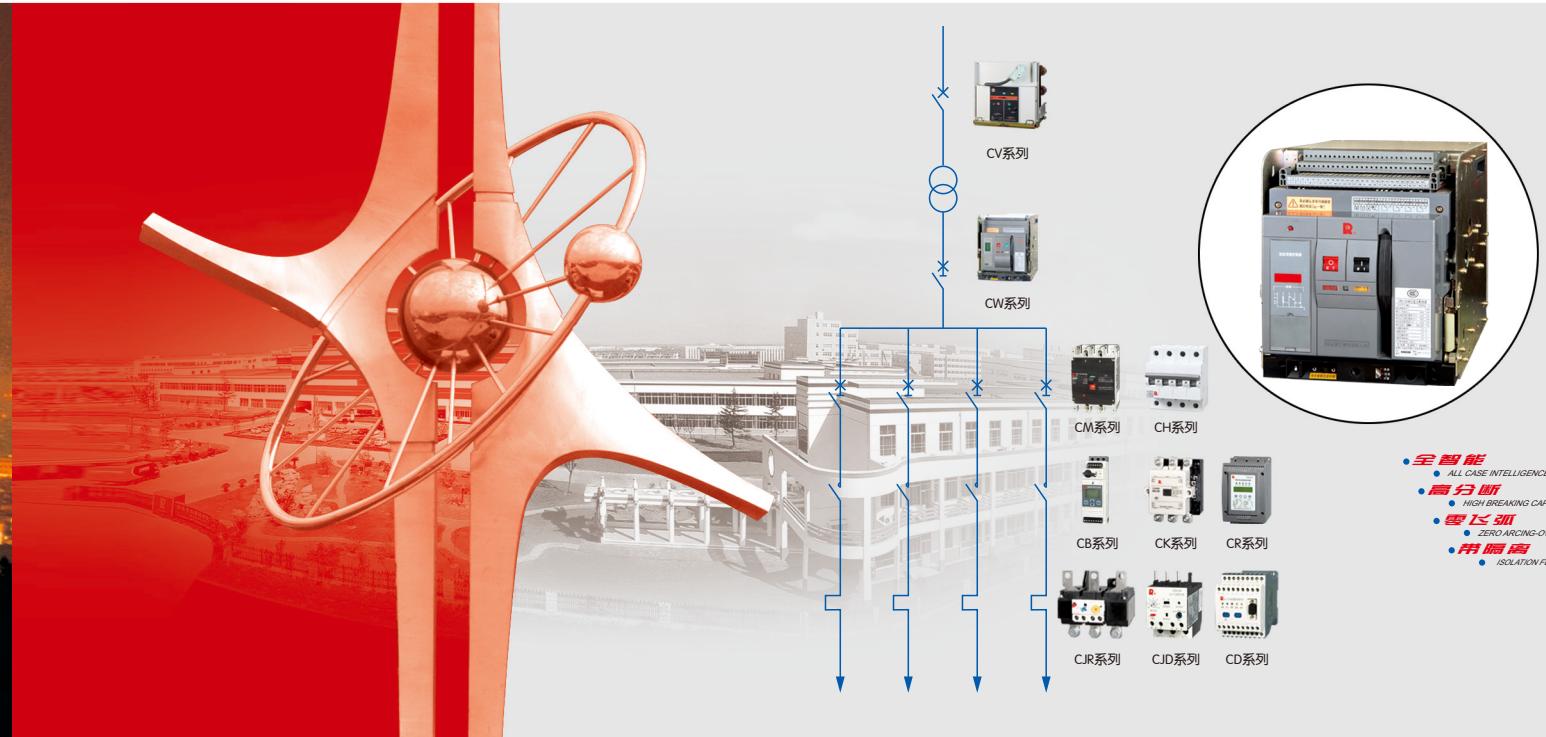

常熟开关制造有限公司(原常熟开关厂)
CHANGSHU SWITCHGEAR MFG. CO., LTD. (FORMER CHANGSHU SWITCHGEAR PLANT)

2020年版

公司地址：江苏省常熟市建业路8号

网 址：<http://www.riyue.com.cn>

电子信箱：csgk001@cs-kg.com

邮 编：215500

ADDRESS: NO.8 JIANYE ROAD CHANGSHU, JIANGSU, P.R.CHINA

URL:[HTTP://WWW.EN.RIYUE.COM.CN](http://WWW.EN.RIYUE.COM.CN)

E-MAIL:csgk001@cs-kg.com

POST CODE:215500



手机端网站



微信公众号

办公 室：0512-52842237 52846851

元件销售：0512-52840577 52840993 52844994 52845227

52840995 52841441 52841442 52841616

成套销售：0512-52846862 52846863 52840073 52845582

技术热线：0512-52841486 4008282528

售后服务热线：0512-52846867 52846869 52844091 52845956

传 真：0512-52841606 52841465 52841042

OFFICE :0512-52842237 52846851

SALES DEP. FOR ELECTRIC COMPONENTS:

0512-52840577 52840993 52844994 52840995

52841441 52841442 52845227 52841616

SALES DEP. FOR COMPLETE SWITCHGEAR EQUIPMENT :

0512-52846862 52846863 52840073 52845582

TECHNICAL SUPPORT HOTLINE : 0512-52841486 4008282528

SERVICE HOTLINE: 0512-52846867 52846869 52844091 52845956

FAX : 0512-52841606 52841465 52841042

新飞“印务承制 TEL:0512-52880427 印刷1500本

因产品技术需不断改进，所有数据应以本公司技术部门最新确认为准。

本产品样本的版权和解释权属常熟开关制造有限公司（原常熟开关厂）。

All technical data of products should be subject to final confirmation of our technical department.

Publishing of this product catalogue and explanation of all details will be reserved by Changshu Switchgear

Mfg. Co., Ltd. (former Changshu Switchgear Plant).

常熟开关制造有限公司
(原常熟开关厂)
CHANGSHU SWITCHGEAR MFG. CO., LTD.
(FORMER CHANGSHU SWITCHGEAR PLANT)

获得荣誉 Honors

企业类 Enterprise




- 国家创新型试点企业
National Innovative Pilot Enterprise
- 国家企业技术中心
National Enterprise Technology Center
- 检测中心获中国合格评定国家认可委员会认可
Laboratory Accreditation Certificate rewarded by China National Accreditation Service for Conformity Assessment (CNAS)
- 两次国家科学技术进步奖二等奖
National Awards for Science and Technology Progress
- 国家级企业管理现代化创新成果
The Innovation Achievement of Management Modernization of National Enterprise
- 中国机械工业质量管理奖
China Machinery Industry Quality Management Award

智造类 Manufacturing

- “国家工信部智能制造新模式专项”圆满完成项目验收
Special Project of Intelligent Manufacturing New Mode of Ministry of industry and Information Technology of China has been successfully completed project acceptance
- 被国家科技部评为“制造业信息化科技工程应用示范企业”
be Appraised as the Demonstration Enterprise of Manufacturing Information Technology engineering Application by the Ministry of Science and Technology
- 公司万能式断路器智能生产车间与塑壳断路器智能生产车间被省经信委评为“江苏省示范智能车间”
The workshop of universal circuit breakers and the workshop of moulded case circuit breaker are both rated as Jiangsu Demonstration Intelligent Workshop by Jiangsu Provincial Economic and Information Commission
- 被江苏省人民政府评为“江苏制造突出贡献奖智能制造先进企业”
Intelligent Manufacturing Advanced Enterprise of Jiangsu Manufacturing Outstanding Contribution Award by Jiangsu Province's Government

产品类 Products

- 智能型万能式断路器获“**工信部制造业单项冠军产品**”称号
ACBs award Individual Champion Product in Manufacture Industry
- CW3 系列智能型万能式断路器被授予
“**改革开放 40 周年机械工业杰出产品**”称号
CW3 series ACB was awarded Outstanding products of Machinery Industry for the 40th anniversary of Reform and Opening-up Policy
- CM5 系列塑料外壳式断路器被授予
“**中国机械工业科学技术二等奖**”
CM5 Series Moulded Case Circuit Breakers have won second Prize of Science and Technology Award of China Machinery Industry
- CW 系列万能式断路器、CM 系列塑料外壳式断路器被授予
“**全国机械工业用户满意产品**”
CW Series Intelligent Universal Circuit Breakers and CM Series Moulded Case Circuit Breakers both have been awarded Satisfied Products of National Machinery Industry Users
- 原国家机械工业部副部长沈烈初听取完新一代 6 系列万能式断路器、塑壳断路器介绍后，欣然题词
Shen Liechu, former Vice Minister of the Ministry of machinery industry of China, writes an inscription with good grace after listening to the introduction of the new generation of No.6 series universal circuit breakers and moulded case circuit breakers

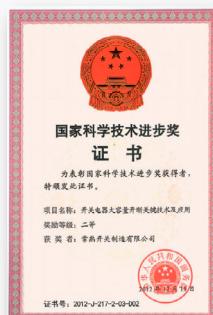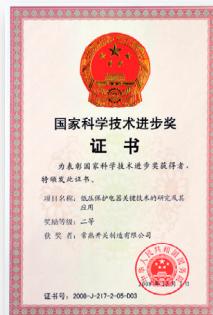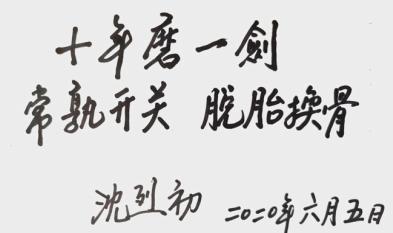

公司简介 Introduction

常熟开关制造有限公司是国有资产参股的高新技术企业，公司占地300亩，注册资本3.8亿元，现有员工1700多人，主要生产中低压配电电器、工业控制电器、中低压成套开关设备、光伏发电应用产品及智能配电系统等产品。

常熟开关秉持“客户至上”的宗旨，致力于研发、制造精品电器，为客户和社会创造更高价值。

常熟开关专注科技创新，建有“国家认定企业技术中心”、“博士后科研工作站”、“江苏省智能电网配用电关键技术研究重点实验室”、“江苏省电器控制工程技术研究中心”等创新平台，检测中心获中国合格评定国家认可委员会认可。公司拥有近400人的创新团队，各类创新成果多次获得省部级以上荣誉，其中“低压保护电器关键技术的研究应用”项目和“开关电器大容量开断关键技术及应用”项目荣获国务院颁发的国家科学技术进步二等奖。

常熟开关坚持质量第一，追求卓越管理，拥有行业领先的制造、检测、试验设备；通过信息化、网络化与自动化融合，推动智能制造新模式；建立了完善的管理体系，确保准时为客户提供性能优异、质量可靠的产品。公司各类产品深受用户好评，已广泛应用于电力、机械、交通、矿山、冶金、石化、建筑、船舶、核电和新能源等领域，多次获得省部级质量奖。

面向未来，常熟开关将一如既往与各界朋友携手共进，共创民族低压电器工业的辉煌未来！

Changshu Switchgear MFG. Co., Ltd. (Former Changshu Switchgear Plant), a national-leading enterprise with state-owned equity, covering an area of about 200000 m², registered capital of 0.38 billion RMB and more than 1700 staffs, mainly manufactures medium and low voltage power distribution electrical appliances, industrial control products, medium and low voltage complete sets of equipments, photovoltaic power generation application equipments and intelligent power distribution system products, etc.

Changshu Switchgear always upholds the tenet of “Customer First” and is committed to R & D and manufacturing high-quality electrical appliances and creating higher value for customers and the society.

Changshu Switchgear focuses on technological innovation and builds up innovation platforms, such as the National-level Enterprise Technique Center, the Post-doctoral Scientific Research Workstation, the Key Laboratory for Research on Key Technology of Intelligent Grid Power Distribution in Jiangsu Province and Jiangsu Electric Control Engineering Technology Research Center, etc. The Testing Center is recognized by the China National Accreditation Service for Conformity Assessment (CNAS).

Kinds of innovative achievements, developed by the innovation team consist of 400 engineers and technicians, have won a number of provincial and municipal honors, in which “The research and application on key technology of low voltage protection electrical device” and “The key technology and application of large capacity breaking of switching devices” have won the second prize of the National Science and Technology Progress Award.

Changshu Switchgear insists on Quality-first and is pursuing excellent management. Advanced equipments for manufacturing, inspection and testing have been brought in. Through integration of informatization, networking and automation, the company promotes a new mode of intelligent manufacturing. A perfect management system has been established to ensure that all kinds of products with excellent performance and reliable quality are well received by users. The products, which are well received by users, have been widely used in electric power, machinery, transportation, mining, metallurgy, petrochemical, construction, shipbuilding, nuclear power, new energy and other fields and have won provincial and ministerial quality awards for many times.

Facing the future, Changshu Switchgear will, as always, work hand in hand with friends from all walks of life to create a brilliant future for the national low-voltage electrical industry!





常熟开关制造有限公司
为您提供电气系统完整的解决方案

高压真空断路器



CV1-12/CVR1-12系列
高压真空断路器



CV2-12



CV1-24/CV2-24系列
高压真空断路器



CV1-40.5/CV2-40.5系列
高压真空断路器

智能型万能式断路器



CW1系列
智能型万能式断路器



CW2系列
智能型万能式断路器



CW3系列
智能型万能式断路器



CW3X-1600系列
智能型万能式断路器



CW3R系列
智能型万能式断路器



CW3F-2500系列
智能型万能式断路器



CW3V系列
智能型真空万能式断路器

塑料外壳式断路器



CM3系列
塑料外壳式断路器



CM3E系列
电子式塑壳断路器



CM3L系列
带剩余电流保护塑壳断路器



CM3Z系列
智能型塑壳断路器



CM3ZL系列
带剩余电流保护塑壳断路器



CM3ZL/ZH自动重合闸
带剩余电流保护塑壳断路器



CM5系列
塑料外壳式断路器



CM5Z系列
智能型塑壳断路器



CM5Z-1600
智能型塑壳断路器



CM5L系列
带剩余电流保护塑壳断路器



CM5ZL系列
带剩余电流保护智能型塑壳断路器



CM5X-125塑料外壳式断路器
CM5XL-125带剩余电流保护塑壳断路器



常熟开关制造有限公司

为您提供电气系统完整的解决方案

自动转换开关



CA1/CA1B系列自动
转换开关(CB级)



CAP1系列自动
转换开关(PC级)



CAP2系列自动
转换开关(PC级)



CAP3系列自动
转换开关

接触器和过载继电器



CK3/CK3B系列
接触器



CJR3/CJR3B系列
热过载继电器



CJD3系列
电子过载继电器

剩余电流动作继电器



CLJ3 剩余电
流动作继电器

电动机软起动器



CR1系列
电动机软起动器



CR2系列
智能型电动机软起动器

电动机保护器



CD3系列
电动机控制保护器



CD4系列
电动机控制保护器

控制和保护电器



CB1系列
控制和保护开关电器(CPS)

光伏发电用产品



CW3G系列
隔离开关 (AC, DC)



CW3DC系列
直流万能式断路器



CM3DC系列
直流塑壳断路器

小型断路器



CH系列小型断路器

电力质量和系统自动化器件



AD128系列信号灯
LA168系列按钮



CI1系列
远程智能I/O模块



CN1DP-MP
CN1DP-MD
CN1DP-MC
通信适配器
CN1EG以太网
适配器



FDM3
短消息通知模块



FWX1无线温度测量模块



智能化通信低压配电网络监控系统



Riyear-PowerNet配电监控系统



CEPA3智能配电一体机



优秀特色

- 具备满足风电等新能源领域应用的能力（低温至-40℃、湿热带TH型），配备AC1000V的断路器，可用于冶金、化工等场合
- 获得国际认可的CB证书
- 高性能、体积小、保护完善可靠、带隔离功能，CW2-1600宽度仅248mm而Icu=55kA，Ics=50kA
- 额定运行短路分断能力Ics =额定极限短路分断能力Icu，提高运行可靠性
额定极限短路分断能力Icu：400V：55kA ~ 120kA；690V：40kA ~ 85kA；1000V：36kA ~ 50kA
额定运行短路分断能力Ics：400V：50kA ~ 120kA；690V：36kA ~ 85kA；1000V：36kA ~ 50kA
额定短时耐受电流Icw：400V：42kA ~ 100kA；690V：36kA ~ 85kA；1000V：36kA ~ 50kA
- 智能保护功能丰富、监测功能齐全，可配功率测量、电量监测的智能控制器
- 安全使用、性能优越：面板具有直观的合闸准备就绪指示，抽屉式具有“连接”、“试验”、“分离”三位置指示和锁定装置（专利技术）
- 主回路接线端子连接方便，可实现水平连接、垂直连接、混合连接
- 可选区域选择性联锁功能，确保各级保护的完全选择性
- 基于Modbus-RTU协议的通信断路器，通过本公司的CN1DP适配器、CN1EG以太网适配器可应用于Modbus、Profibus、Devicenet、CAN总线和以太网通信网络，方便用户进行多种协议的应用管理
- 通过配置FDM3短消息通知模块，可实现断路器故障脱扣或报警信息无线监视
- 可配FWD1温度上传模块，可实现测量温度的上传；配置FWX1无线温度测量模块，实现测量温度的无线发送、显示和上传
- 光伏并网：带光伏并网专用欠电压脱扣器的CW2断路器满足国家电网公司Q/GDW1972、Q/GDW1973标准，实现检有压合闸功能



目 录


CONTENTS



概 述 OUTLINE	1
型号含义 TYPE AND ITS MEANING	2
正常工作条件和安装条件 REGULAR WORKING CONDITIONS AND MOUNTING CONDITIONS	2
断路器结构简介 SYNOPSIS OF STRUCTURE	3
主要技术指标 MAIN TECHNICAL INDEX	5
智能控制器 INTELLIGENT CONTROLLER	8
附件 ACCESSORIES	33
断路器功耗及降容系数 POWER CONSUMPTION AND CAPACITY LOWERING COEFFICIENT	44
高海拔降容 CAPACITY-REDUCING FOR HIGH-ELEVATION	45
断路器主回路接线铜排规格参考表 REFERENCE TABLE OF MAIN CIRCUIT WIRING COPPER BAR FOR CIRCUIT BREAKERS	46
主回路端子至外接铜排支架最大允许距离参考表 MAX. DISTANCE REFERENCE TABLE OF BREAKER'S TERMINALS TO EXTERNAL COPPER BAR HOLDER	47
自动电源转换系统 AUTOMATIC POWER SUPPLY SWITCH SYSTEM	49
断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS	58
断路器门框开孔尺寸 APERTURE DIMENSIONS OF THE DOOR FRAME	77
断路器安装安全间隙 MOUNTING SAFETY CLEARANCE	82
附件外形尺寸和安装尺寸 OUTLINE AND MOUNTING DIMENSIONS OF ACCESSORIES	83
自动电源转换系统外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS OF AUTOMATIC POWER SUPPLY SWITCH SYSTEM	86
断路器二次回路接线图 WIRING DIAGRAM OF SECONDARY CIRCUIT	88
自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM	92
组网与监控 NETWORKING AND MONITORING	108
温度模块 TEMPERATURE MODULE	118
断路器订货规范 ORDERING FORM OF BREAKER	122
CW2系列断路器AC1000V产品主要技术指标及说明 CW2 SERIES CIRCUIT BREAKER AC1000V PRODUCT TECHNICAL INDICATORS AND INSTRUCTION	127
通信可选元件及温度模块订货规范 ORDER FORM OF COMMUNICATION COMPONENT AND TEMPERATURE MODULE	132
CW2系列无过电流保护断路器 CW2 SERIES BREAKERS NOT FULFILLING THE REQUIREMENTS FOR OVERCURRENT PROTECTION	134



常熟开关制造有限公司按国家标准GB/T14048.2要求，推出新一代的智能型万能式断路器CW2系列。该系列产品设计人性化，使用简便，具有全智能、高分断、零飞弧、带隔离等特点，塑造了新一代断路器的全新形象。CW2系列智能型万能式断路器（以下简称断路器）适用于交流50Hz/60Hz，额定工作电压400V、690V，额定电流6300A及以下的配电网中，用来分配电能和保护线路及设备免受过载、短路、欠电压和接地故障等的危害。断路器采用具有精确选择性保护和多功能的智能控制器，特别适用于需要提高供电可靠性，避免不必要的停电的配电网中。

- 断路器具有三极和四极；
- 具有抽屉式和固定式；
- 可倒进线连接；
- 多种智能控制器，提供不同的保护功能；
- 具有隔离功能，符号为“”；
- 使用类别B；
- 可提供低温至-40℃断路器；
- 作为特殊需求，可提供额定工作电压AC1000V断路器（不适用于1000V IT系统），具体规格参见P127~P131；
- 可提供无过电流保护要求的断路器，符合GB/T14048.2附录L CBI分类Y级，具体规格参见P134~P137。
- 断路器符合以下标准：
 - IEC60947-1及GB/T14048.1-2012 总则
 - IEC60947-2及GB/T14048.2-2008 断路器
 - IEC60947-4-1及GB/T14048.4 机电式接触器和电动机起动器
- 断路器获国家强制性产品认证“CCC”标志。

By the requirements of National Standard GB/T14048.2 Changshu Switchgear Manufacturing Co., LTD (Former Changshu Switchgear Plant) has developed a new generation of Intelligent Universal Circuit Breakers (ACB): CW2 Series, which are characteristic of ergonomic design, convenient usage, all-case intelligence, high-breaking capacity, zero arcing distance and isolation functions etc. and which has shaped the brand-new image of the new generation. CW2 Series Intelligent Universal Circuit Breakers (hereafter simply referred to as circuit breakers) take the role of distributing power and protecting wires and equipments from being damaged by overload, short circuit, under-voltage and ground-fault etc. in the power-distribution circuit of AC50Hz/60Hz, rated working voltage 400V, 500V or 690V, rated working current 6300A or below. The circuit breakers particularly suits for the power-distribution circuit that the reliability of power supply should be increased as needed and the dispensable power failure should be avoided.


- Three or four poles
- Draw-out or fixed type
- Can be mounted in the adverse direction
- Various intelligent controllers offer various functions
 - The circuit breaker has disconnecting function and its corresponding symbol is shown as “”
 - Utilization category B
 - Can be provided breaker of temperature down to -40°C
 - Can provide AC1000V circuit breaker (don't suit for 1000V IT system), seeing P127~P131.
 - Can provide circuit-breakers not fulfilling the requirements for overcurrent protection, compliance with GB/T14048.2 annex L class Y of CBI classification, seeing P134~P137.
 - The circuit breakers comply with the demands of the following standards:
 - IEC60947-1 and GB/T14048.1-2012 General rules
 - IEC60947-2 and GB/T14048.2-2008 Circuit Breakers
 - IEC60947-4-1 and GB/T14048.4 Electro-mechanical contactor and motor starter
 - The circuit breakers have obtained the CCC mark of CQC.



型号含义 TYPE AND ITS MEANING

常熟开关制造有限公司
(原常熟开关厂)
Changshu switchgear manufacturing Co., Ltd
(Former Changshu switchgear plant)

万能式断路器
Universal circuit breaker

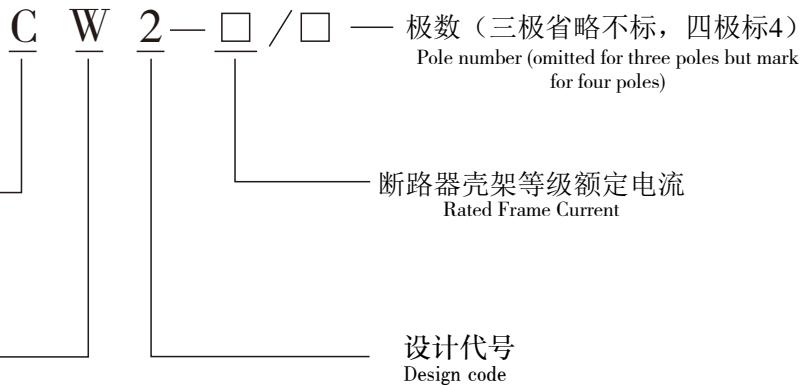

正常工作条件和安装条件 REGULAR WORKING CONDITIONS AND MOUNTING CONDITIONS

- 周围空气温度-5℃ ~ +40℃；
- 安装地点的海拔不超过2000m；
- 空气的相对湿度在最高温度为+40℃时不超过50%，在较低温度下可以有较高的相对湿度，例如20℃时达90%，对由于温度变化偶尔产生的凝露应采取特殊的措施；
- 污染等级为3级；
- 断路器主电路安装类别为Ⅳ，其余辅助电路、控制电路安装类别为Ⅲ；
- 断路器适用于电磁环境A；
- 湿热带型（TH型）断路器通过GB/T2423.4、GB/T2423.18试验要求，能耐受潮湿空气、盐雾、油雾、霉菌的影响；
- 断路器安装的垂直倾斜度不超过5°；
- 断路器应安装在无爆炸危险和无导电尘埃、无足以腐蚀金属和破坏绝缘的地方；
- 断路器安装在柜体小室内，且加装门框，防护等级达IP40；
- 可运行条件：

断路器通过GB/T 2423.1和GB/T2423.2的试验要求，周围空气温度可低至-25℃、高至+70℃（超过+40℃降容使用，详见本样本中的断路器功耗及降容系数）；

断路器通过GB/T 2423.4试验Db（温度+55℃、相对湿度95%）要求；

海拔超过2000m降容使用，详见本样本中的高海拔降容；

● 储存条件：周围空气温度为-25℃~ +70℃。

- Ambient temperature: -5℃ ~ +40℃ ;
- Elevation $\leq 2000\text{m}$;
- Relative humidity: not exceed 50% at the maximum ambient temperature of +40℃, but higher relative humidity at the lower temperature, for example, 90% at 20℃. Special measures should be taken considering the dews on product surface due to temperature change;
- Pollution protection: 3 grade;
- Installing categories: IV for the main circuit; III for other auxiliary and control circuits;
 - The breaker is suitable in electromagnetic environment A;
 - Damp heat type (TH) breakers are tested by GB/T2423.4、GB/T2423.18,can bear the influence of moisture in the air of salt fog and oil fog or mould.
 - The vertical gradient isn't more than 5° ;
 - There must be not any explosive medium, and there must be not any gas which would corrode metal or any conducting dust which would destroy the insulation;
 - The circuit breaker should be installed in the compartment of switchgear cabinet and doorframe should be fixed additionally. Protection grade up to IP40.
 - Sevice condition:
The breakers are tested by GB/T 2423.1 and GB/T2423.2,ambient temperature lower -25℃,higher +70℃ (temperature over +40℃,the breakers are used by reducing capacity;please seeing "power consumption and capacity lowering coefficient");
The breakers are tested by GB/T 2423.4 test Db (temperature +55℃, relative humidity 95%) ;
Elevation over 2000m,the breakers are used by reducing capacity,please seeing "capacity-reducing for high-elevation" .
 - Storage condiction:ambient temperature -25℃~+70℃.



- 固定式 Fixed



说 明:

- 1 铭牌
- 2 贮能释能指示
- 3 合闸按钮
- 4 手动贮能手柄
- 5 商标
- 6 二次回路接线端子
- 7 断路器“分闸”锁定装置
- 8 脱扣指示和复位按钮
- 9 智能控制器
- 10 分闸按钮
- 11 合闸“*I*”、分闸“*O*”指示
- 12 合闸准备就绪时指示“OK”
- 13 抽屉式断路器“分离”、“试验”、“连接”三位置“解锁按钮”
- 14 抽屉式断路器“分离”位置安全挂锁装置
- 15 抽屉式断路器摇杆工作孔
- 16 抽屉式断路器摇杆存放孔
- 17 抽屉式断路器“分离”、“试验”、“连接”三位置指示


Illustrations:

- 1 Data plate
- 2 Indications of energy-storage and energy-release
- 3 Switching-on button
- 4 Manual energy-storage handle
- 5 Brand
- 6 Terminals of secondary circuit (fixed)
- 7 “Switching-off” lock mechanism
- 8 Release indication and resetting button
- 9 Intelligent controller
- 10 Switching-off button
- 11 Indications of switching-on (“I”) and switching-off (“O”)
- 12 Indication of ready-for-switching-on (“OK”)
- 13 “Unlock button” of the three positions (“separated”, “test” and “connected”) for draw-out circuit breakers
- 14 Safety padlock mechanism as the draw-out circuit breaker indicates the position of “separated”
- 15 Rocker operating hole of the draw-out circuit breaker
- 16 Rocker storage hole of the draw-out circuit breaker
- 17 Indications of the three positions (“separated”, “test” and “connected”) of the draw-out circuit breaker



断路器结构简介 SYNOP OF STRUCTURE

- 抽屉式 Draw-out

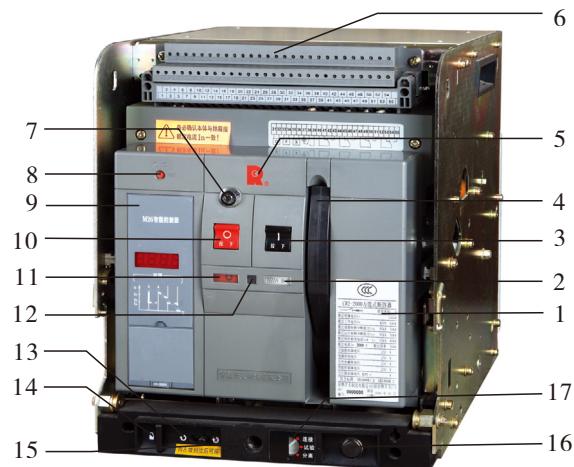

注:

- 1 “分离”：指示主回路与二次回路均为隔离状态；
“试验”：指示主回路为隔离状态，二次回路为连接状态；
“连接”：指示主回路与二次回路均为连接状态。
- 2 当断路器本体被摇至“分离”或“试验”或“连接”位置时即可被自动锁定（摇杆不可再摇动），可通过向左拨动“解锁按钮”解锁。

Note:

- 1 "Separated": indicates that main circuit and secondary circuit are both in isolation.
"Test": indicates that main circuit is in isolation and secondary circuit is in connection.
"Connected": indicates that main circuit and secondary circuit are both in connection.
- 2 The circuit breaker can be automatically locked (rocker can not be turned at this point) when its main part is at the position of "separated", "test" or "connected" by tuning the rocker, and can be unlocked by pushing "unlock button" to the left side.

- 抽屉式断路器的抽屉座 Draw-out socket of draw-out circuit breaker

抽屉式断路器的抽屉座具有隔离主回路母排的挡板，当断路器抽出时起安全保护作用。

The draw-out socket has the back plate for isolating the copper bar of the main circuit, which take the role of safety protection when the circuit breaker is drew out.



说明:

- | | |
|-------------|--|
| 18 安装孔 | 18 Installation hole |
| 19 安全挡板 | 19 Safety back plat |
| 20 二次回路接线端子 | 20 Wiring terminals of secondary circuit |
| 21 侧板 | 21 Side plate |
| 22 主回路母排 | 22 Copper bar of the main circuit |
| 23 抽屉座底架 | 23 Draw-out socket |
| 24 抽屉座接地点 | 24 Earthing point at draw-out socket |

Illustrations:

- | | |
|-------------|--|
| 18 安装孔 | 18 Installation hole |
| 19 安全挡板 | 19 Safety back plat |
| 20 二次回路接线端子 | 20 Wiring terminals of secondary circuit |
| 21 侧板 | 21 Side plate |
| 22 主回路母排 | 22 Copper bar of the main circuit |
| 23 抽屉座底架 | 23 Draw-out socket |
| 24 抽屉座接地点 | 24 Earthing point at draw-out socket |



主要技术指标 MAIN TECHNICAL INDEX

型 号 Type		CW2-1600								
壳架等级额定电流Inm (A)	Rated frame current	1600								
额定电流In (A)	Rated working current	200、400、630、800、1000、1250、1600								
额定工作电压Ue (V)	Rated working voltage	AC50Hz/60Hz,400、690								
额定绝缘电压Ui (V)	Rated insulation voltage	1000								
额定冲击耐受电压Uimp (kV) Rated impulse withstand voltage		12								
工频耐受电压U (V) 1min Working frequency withstand voltage		3500								
极数 Pole number		3、4								
N极额定电流IN (A)	Rated current of N pole	100%In								
额定极限短路分断能力Icu(kA)(有效值) Limiting rated short circuit breaking capacity (effective value)	AC400V	55								
	AC690V	40								
额定运行短路分断能力Ics(kA) (有效值) Operating /Rated short circuit breaking capacity (effective value)	AC400V	50								
	AC690V	36								
额定短路接通能力Icm(kA) (峰值) Rated short time connecting capacity (peak value)	AC400V	121								
	AC690V	84								
额定短时耐受电流 (1s) Icw(kA) (有效值) Rated short time withstand current (effective value)	AC400V	42								
	AC690V	36								
分断时间 (ms) Breaking time		<30								
闭合时间 (ms) Closing time		<70								
智能控制器 Intelligent controller	L25型 Type L25	○								
	M25/MY25型 Type M25/MY25	○								
	M26/MY26型 Type M26/MY26	○								
	H26/HY26型 Type H26/HY26	○								
	P25型 Type P25	○								
	P26型 Type P26	○								
电气寿命* (次 times) Electrical durability	AC400V		In=200A~630A: 15000							
			In=800A~1250A: 9000							
			In=1600A: 6500							
	AC690V		In=200A~630A: 15000							
			In=800A~1250A: 5000							
			In=1600A: 3000							
机械寿命* (次 times) Mechanical durability	免维护 Non-maintenance	15000								
	有维护 Maintenance	30000								
外形尺寸 Outline dimensions	宽×高×深 W × H × D (mm) Width × height × depth		W		H					
	抽屉式 Draw-out	水平连接 Horizontal	3P	后置 Back set	248	351.5				
		4P	后置 Back set	318	351.5	297				
		垂直连接 Vertical	3P	后置 Back set	248	351.5				
		4P	后置 Back set	318	351.5	297				
	固定式 Fixed	水平连接 Horizontal	3P	后置 Back set	254	320				
		4P	后置 Back set	324	320	197				
		垂直连接 Vertical	3P	后置 Back set	254	320				
		4P	后置 Back set	324	320	197				


*注：免维护寿命指电器在修理或更换部件前能完成的操作循环次数的期望值。

*Note:non-maintenance durability expresses the expectancy of the number of operating cycles which can be performed by the equipment before repair or replacement of parts.



主要技术指标 MAIN TECHNICAL INDEX

型 号 Type		CW2-2000C		CW2-2000		CW2-2500			
壳架等级额定电流Inm (A) Rated frame current		2000		2500					
额定电流In (A) Rated working current		630、800、1000、1250、1600、2000		1250、1600、2000、2500					
额定工作电压Ue (V) Rated working voltage		AC50Hz/60Hz,400、690							
额定绝缘电压Ui (V) Rated insulation voltage		1000							
额定冲击耐受电压Uimp (kV) Rated impulse withstand voltage		12							
工频耐受电压U (V) 1min Working frequency withstand voltage		3500							
极数 Pole number		3、4							
N极额定电流IN (A) Rated current of N pole		100%In							
额定极限短路分断能力Icu(kA)(有效值) Limiting rated short circuit breaking capacity (effective value)	AC400V	70	80	85	85	85	85		
	AC690V	50	50	65	65	65	65		
额定运行短路分断能力Ics(kA) (有效值) Operating/Rated short circuit breaking capacity (effective value)	AC400V	70	80	85	85	85	85		
	AC690V	50	50	65	65	65	65		
额定短路接通能力Icm(kA) (峰值) Rated short time connecting capacity (peak value)	AC400V	154	176	187	187	187	187		
	AC690V	105	105	143	143	143	143		
额定短时耐受电流 (1s) Icw(kA) (有效值) Rated short time withstand current (effective value)	AC400V	66	66	65	65	65	65		
	AC690V	40	40	65	65	65	65		
分段时间 (ms) Breaking time		<30							
闭合时间 (ms) Closing time		<70							
智能控制器 Intelligent controller	L25型 Type L25	○							
	M25/MY25型 Type M25/MY25	○							
	M26/MY26型 Type M26/MY26	○							
	H26/HY26型 Type H26/HY26	○							
	P25型 Type P25	○							
	P26型 Type P26	○							
电气寿命(次 times) Electrical durability	AC400V	In=630A~1000A: 15000		In=1250A: 12500					
		In=1250A~1600A: 10000		In=1600A~2000A: 10000					
		In=2000A: 8000		In=2500A: 8000					
	AC690V	In=630A~1000A: 10000		In=1250A: 12500					
		In=1250A~1600A: 6500		In=1600A~2000A: 7000					
		In=2000A: 5000		In=2500A: 5000					
机械寿命(次 times) Mechanical durability	免维护 Non-maintenance	15000		15000					
	有维护 Maintenance	30000		30000					
外形尺寸 Outline dimensions	宽×高×深 W × H × D (mm) Width × height × depth	W		H		D			
	抽屉式 Draw-out	水平连接 Horiz-ontal	3P 后置 Back set	347	438	390	347	438	395
		4P 后置 Back set	442	438	390	442	438	395	
		垂直连接 Vertical	3P 后置 Back set	347	438	390	347	438	395
		4P 后置 Back set	442	438	390	442	438	395	
	固定式 Fixed	水平连接 Horiz-ontal	3P 后置 Back set	362	395	290	362	395	290
		4P 后置 Back set	457	395	290	457	395	290	
		垂直连接 Vertical	3P 后置 Back set	362	395	290			
		4P 后置 Back set	457	395	290				

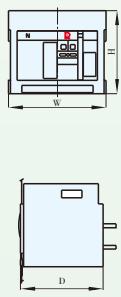



主要技术指标 MAIN TECHNICAL INDEX

型 号 Type		CW2-4000						CW2-6300					
壳架等级额定电流Inm (A)	Rated frame current	4000						6300					
额定电流In (A)	Rated working current	2000	2500	2900	3200	3600	4000	4000	5000	6300			
额定工作电压Ue (V)	Rated working voltage	AC50Hz/60Hz,400、690											
额定绝缘电压Ui (V)	Rated insulation voltage	1000											
额定冲击耐受电压Uimp (kV)	Rated impulse withstand voltage	12											
工频耐受电压U (V) 1min	Working frequency withstand voltage	3500											
极数 Pole number		3、4											
N极额定电流IN (A)	Rated current of N pole	100%In											
额定极限短路分断能力Icu(kA)(有效值)	AC400V	100						120					
Limiting rated short circuit breaking capacity (effective value)	AC690V	75						85					
额定运行短路分断能力Ics(kA)(有效值)	AC400V	100						120					
Operating /Rated short circuit breaking capacity (effective value)	AC690V	75						85					
额定短路接通能力Icm(kA) (峰值)	AC400V	220						264					
Rated short time connecting capacity (peak value)	AC690V	165						187					
额定短时耐受电流 (1s) Icw(kA) (有效值)	AC400V	85						100					
Rated short time withstand current (effective value)	AC690V	75						85					
分断时间 (ms) Breaking time		<30											
闭合时间 (ms) Closing time		<70											
智能控制器 Intelligent controller	L25型 Type L25	○											
	M25/MY25型 Type M25/MY25	○											
	M26/MY26型 Type M26/MY26	○											
	H26/HY26型 Type H26/HY26	○											
	P25型 Type P25	○											
	P26型 Type P26	○											
电气寿命(次 times) Electrical durability	AC400V	In=2000A~2900A: 8000				In=4000A: 5000							
		In=3200A~3600A: 5000				In=5000A: 3000							
		In=4000A: 4000				In=6300A: 1500							
	AC690V	In=2000A~2900A: 4000				In=4000A: 2500							
		In=3200A~3600A: 2500				In=5000A: 1500							
		In=4000A: 2000				In=6300A: 800							
机械寿命(次 times) Mechanical durability	免维护 Non-maintenance	10000							5000				
	有维护 Maintenance	20000							10000				
外形尺寸 Outline dimensions	宽×高×深 W×H×D (mm)	W × H × D				W × H × D							
	抽屉式 Draw-out	水平连接 Horiz-ontal	3P	后置 Back set	401	438	395	767	475.5	395			
			4P	后置 Back set	514	438	395	993	475.5	395			
		垂直连接 Vertical	3P	后置 Back set	401	438	395	767	475.5	395			
			4P	后置 Back set	514	438	395	993	475.5	395			
		固定式 Fixed	水平连接 Horiz-ontal	3P	后置 Back set	414	395	290	782	395	290		
				4P	后置 Back set	527	395	290	1008	395	290		

注: CW2-6300, In=6300A, 抽屉式断路器供应连接方式为垂直连接。

Note: CW2-6300 circuit breakers of the draw-out type with rated current (In) of 6300A can be installed vertically.




智能控制器 INTELLIGENT CONTROLLER

(一) 智能控制器的选择

智能控制器分为以下九种：

- L25型，具有过载长延时、短路短延时、短路瞬时三段保护功能，电流光柱格显示，拨盘设定。

- Type L25, With such performances as: three-level protection of overload long-time delay, short circuit short-time delay and instantaneous short circuit, light columnar indication of current, and setting the value by knob.

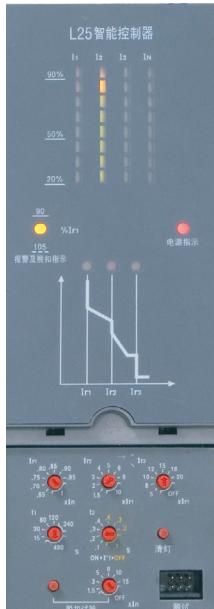

Selecting the intelligent controller

The intelligent controller can be classified into nine types:

- M25型，具有过载长延时、短路短延时、短路瞬时三段保护功能，电流LED数字显示，参数连续设定，并可选择电压显示等功能。

- Type M25, With such performances as: three-level protection of overload long-time delay, short circuit short-time delay and instantaneous short circuit, LED digital indication of current, and consecutive parameter-setting. And if necessary, it has voltage indication function.







- M26型，除了具有M25所有功能外，增加了接地故障保护功能，并可选电压显示等功能。

- Type M26, adds ground-fault protection except the function of M25 and if necessary, it has voltage indication function.

- H26型，具有过载长延时、短路短延时、短路瞬时三段保护功能及接地故障保护功能，并具有通信功能，电流，电压LED数字显示，参数连续设定。

- Type H26, With such performances as: three-level protection of overload long-time delay, short circuit short-time delay and instantaneous short circuit, ground-fault protection, communicative, LED digital indication of current and voltage, and consecutive parameter-setting.

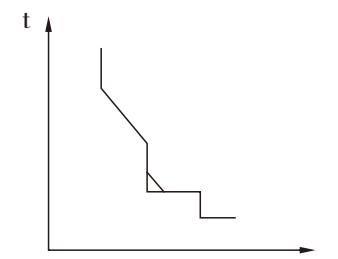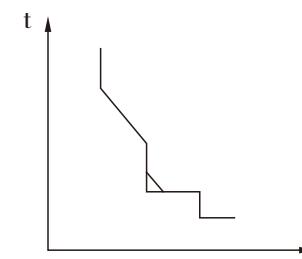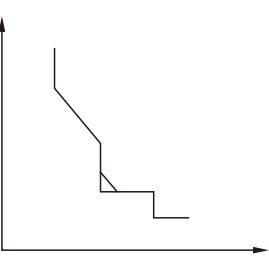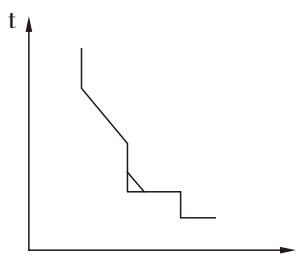





● P25型，具有过载长延时、短路短延时、短路瞬时三段保护功能，过载长延时特性可提供多曲线匹配保护，并具有电流、电压、功率、功率因数、频率、电能等测量功能，参数菜单式连续设定，液晶（LCD）显示，根据需要还可选择谐波分析功能、电流不平衡报警及通信功能。

● Type P25, With such performances as: three-level protection of overload long-time delay, short circuit short-time delay and instantaneous short circuit, (the characteristic of overload long-time delay can provide multicurve protection matching); measurement function of current、voltage、power、power-factor、frequency、electric quantity etc.、LCD indication and consecutive parameter-setting. If necessary, it has harmonic analysis function、alarm of current-imbalance and communication function.

● P26型，除了具有P25所有功能外，增加了接地故障保护功能。

● Type P26 adds ground-fault protection except the function of P25.

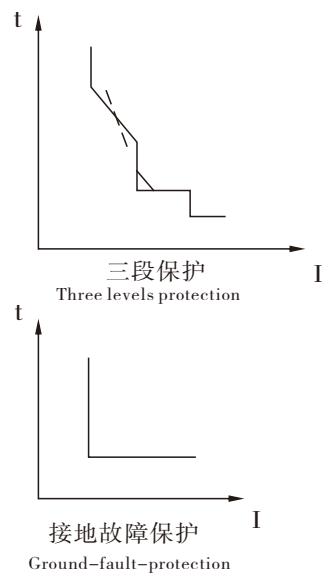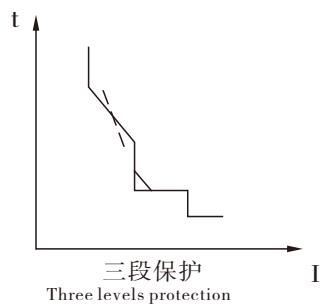



智能控制器 INTELLIGENT CONTROLLER

- MY25型，具有过载长延时、短路短延时、短路瞬时三段保护功能，电流LCD数字显示，参数连续设定，并可选择电压、功率显示等功能。







- Type MY25, With such performances as: three-level protection of overload long-time delay, short circuit short-time delay and instantaneous short circuit, LCD digital indication of current, and consecutive parameter-setting. And if necessary, it has voltage indication function.

- MY26型，除了具有M25所有功能外，增加了接地故障保护功能，并可选电压、功率显示等功能。

- Type My26, adds ground-fault protection except the function of M25 and if necessary, it has voltage indication function.

- HY26型，具有过载长延时、短路短延时、短路瞬时三段保护功能及接地故障保护功能，并具有通信功能，电流，电压LCD数字显示和可选功率显示，参数连续设定。

- Type HY26, With such performances as: three-level protection of overload long-time delay, short circuit short-time delay and instantaneous short circuit, ground-fault protection, communicative, LCD digital indication of current and voltage, and consecutive parameter-setting.

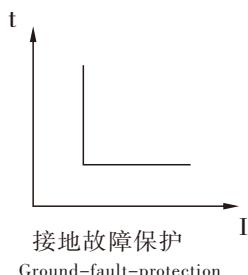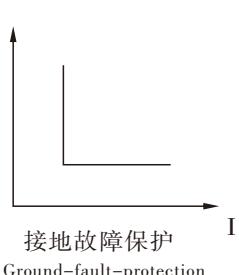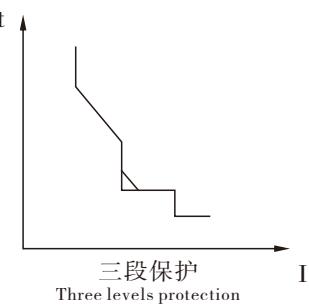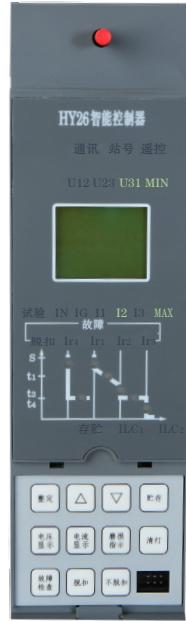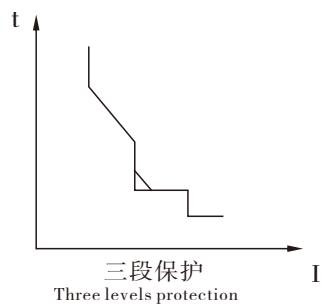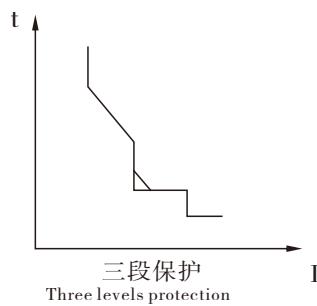



(二) 智能控制器功能一览表 Function Table of Intelligent Controller

功能名称 The name of intelligent controller		L25型 Type L25	M25型 Type M25	MY25型 Type MY25	M26型 Type M26	MY26型 Type MY26	H26型 Type H26	HY26型 Type HY26	P25型 Type P25	P26型 Type P26
过电流保护 (长延时、短延时、瞬时) Over-current protection (long-time delay, short-time delay, instantaneous)		√	√	√	√	√	√	√	√	√
接地故障保护 Ground fault protection		—	—	—	√	√	√	√	—	√
负载监控功能 Load monitoring function		—	○	○	○	○	○	○	○	○
电流不平衡/断相保护 Current unbalance/loss phase		—	○	○	○	○	○	○	○	○
电流显示 Current indication	光柱格显示 Light columnar indication	√	—	—	—	—	—	—	—	—
	数字显示 Digital indication of voltage	—	√	—	√	—	√	—	—	—
	LCD	—	—	√	—	√	—	√	√	√
电压数字显示 Digital indication of voltage	LED	—	○	—	○	—	√	—	—	—
	LCD	—	—	○	—	○	—	√	√	√
功率 Power		—	—	○	—	○	—	○	√	√
电能、功率因数、频率显示 electric quantity、power-factor、frequency indication		—	—	—	—	—	—	—	√	√
报警功能 Alarm function	预报警 Pre-alarm	√	—	—	—	—	—	—	—	—
	过载报警 Overload alarm	√	√	√	√	√	√	√	√	√
试验功能 Test Function		√	√	√	√	√	√	√	√	√
触头磨损指示 Contact Wearing indication		—	√	√	√	√	√	√	√	√
自诊断功能 Self-diagnosis Function		—	√	√	√	√	√	√	√	√
MCR功能 MCR function		√	√	√	√	√	√	√	√	√
故障记忆功能 Fault-memory function		—	√	√	√	√	√	√	√	√
热模拟功能 Thermo-analogue function		√	√	√	√	√	√	√	√	√
谐波分析功能 Harmonic analysis function		—	—	—	—	—	—	—	○	○
ZSI功能 ZSI function		—	○	○	○	○	○	○	○	○
通信功能 Communication function		—	—	—	—	—	√	√	○	○

注： √表示基本功能

Note: Represents fundamental functions

○表示选择功能

Represents selective functions

—表示无此功能

Represent no such functions



(三) 智能控制器功能 Functions of intelligent controller

- 过电流保护功能

过电流保护由相线过电流保护和中性线（N线）过电流保护（四极断路器及三极断路器带外接中性线电流互感器具有中性线过电流保护）组成，相线过电流保护的电流、时间参数一般由制造厂按用户订货要求整定（用户自己也可自行整定）；中性线过电流保护的电流、时间参数按比例自动跟踪相线整定值，具体分以下两种情况：

- 三极断路器+外接中性线电流互感器

- 对L25、M25/MY25、M26/MY26、H26/HY26型智能控制器，中性线整定电流用户在订货时须确定保护参数，有50%In或100%In两种。

- 对P25、P26型智能控制器，中性线整定电流用户可由菜单设定四种方式：关闭（OFF）、50%In、100%In、200%In。200%In中性线保护（如3次谐波含量高的情况下）时，配电系统的中性线截面应为2倍相线截面。但对CW2-6300三极断路器，无200%In中性线保护。

- 四极断路器

- 对L25、M25/MY25、M26/MY26、H26/HY26型智能控制器，中性线整定电流用户在订货时也须确定保护参数，有50%In或100%In两种。

- 对P25、P26型智能控制器，中性线整定电流用户可由菜单设定三种方式：关闭（OFF）、50%In、100%In。

- 过载保护

- 过载长延时反时限保护，整定电流Ir1可调；
- 过载长延时延时时间t1可调；
- P25、P26型智能控制器的过载长延时特性，多曲线可调，分别有通用型(I^2t)、非常反时限型(It)、高压熔丝配合型(I^4t)，以满足上下级过载保护选择性的匹配需要。

对于L25型、M25/MY25型、M26/MY26型、H26/HY26型过载长延时特性功能按通用型 I^2t 曲线动作，电流Ir1、时间t1可调。

- 短路短延时保护（可关断-OFF）

- 短路短延时反时限保护(I^2t ON)，整定电流Ir2可调；

- 短路短延时定时限保护(I^2t OFF)，整定电流Ir2可调；

- 短路短延时延时时间t2可调。

- 短路瞬时保护

- 短路瞬时（可关断—OFF）整定电流Ir3可调。

- Over-current protection

The over-current protection is composed of phase and neutral line protection (Four pole breaker and three pole breaker with current transformer linking externally to neutral N) from over-current. The parameters of current and time of phase line over-current protection can be set by the company in terms of the requirements of users (can be set by customers themselves); the parameters of current and time of neutral line over-current protection can be set by tracking the phase lines automatically in proportion, all these mainly divided into the following two situations:

- Three pole breaker current mutual with the neutral connected externally

- To type L25、M25/MY25、M26/MY26、H26/HY26 intelligent controller, when ordering the goods the neutral line setting current customers should have to confirm the protecting data, it has two type of 50%In and 100%In.

- To type P25、P26 intelligent controller, the customers can setup into four types from menu: turn off、50%In、100%In、200%In. When 200%In neutral lime protecting (if it has a high triple frequency harmonic), the neutral line cross-section should be double leg of a circuit cross-section in the electrical power distribution system. But to CW2-6300 three circuit breaker, there is no neutral line protecting.

- Four pole breaker

- To type L25、M25/MY25、M26/MY26、H26/HY26 intelligent controller, the customers should have to confirm the protecting data, it has two types of 50%In and 100%In.

- To type P25、P26 intelligent controller, the customers can setup into three types from menu: turn off、50%In、100%In.

- Overload protection

- Inverse long-time delay overload protection, and its setting current Ir1 can be adjusted.

- The delay time t1 of overload long-time delay can be adjusted.

- The long-time delay overload characteristic of the type P25、P26, the curves can be adjusted. There have common type (I^2t)、uncommon inverse-time type (It)、high-voltage fuse concert type (I^4t) can be adjusted, which can matching higher-up and lower-lever's overload protection' needs.

The long-time delay overload characteristic of the type L25、M25/MY25、M26/MY26、H26/HY26, its running according to the common type (I^2t) curves, current Ir1、time t1 can be adjusted.

- Short-time short circuit protection (can be OFF)


- Inverse short-time delay short circuit protection (I^2t ON), and its setting current Ir2 can be adjusted.

- Definite short-time delay short circuit protection (I^2t OFF), and its setting current Ir2 can be adjusted.


- The delay time t2 of short circuit short-time delay can be adjusted.

- Instantaneous short circuit protection

- The setting current Ir3 of instantaneous short circuit (can be OFF) can be adjusted.

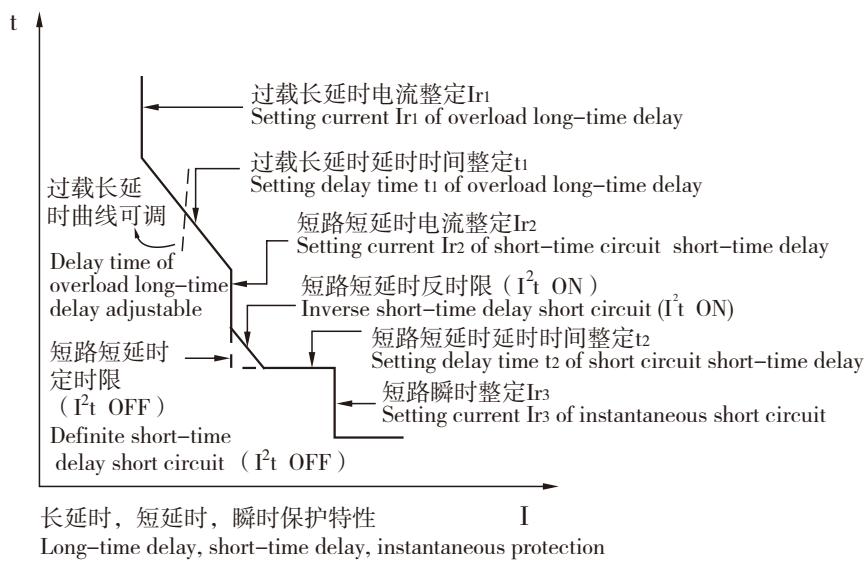


- 接地故障保护（可关断—OFF）
Ground-fault protection (can be off)

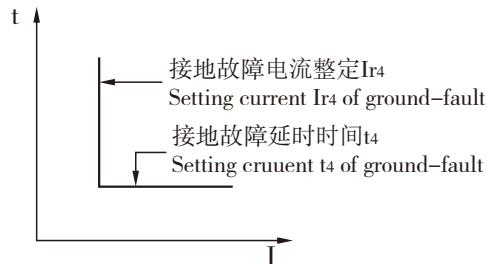

- 接地故障定时限保护，整定电流Ir4可调；
- 延时时间t4可调；
- OFF后只报警，不分断。

- Definite ground-fault protection, and its setting current Ir4 can be adjusted
- Delay time t4 can be adjusted
- Alarm but not break after being off

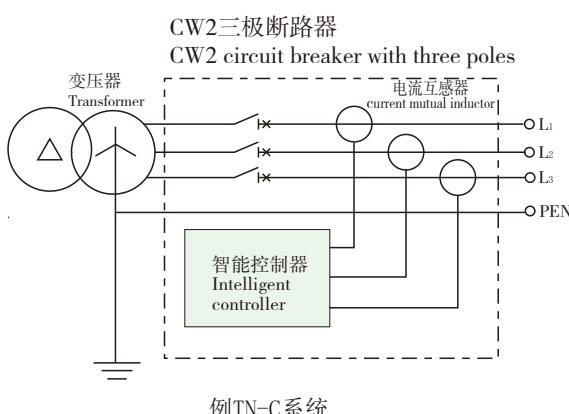


- 接地故障保护方式
- TN-C、TN-C-S、TN-S配电系统中选用CW2三极断路器未接外接中性线N电流互感器
- 接地故障保护信号只取三相电流的矢量和
- 保护特性为定时限保护
- Protection ways of ground-fault
- CW2 circuit breakers are used in the power distribution system of TN-C, TN-C-S, and TN-S without additional current mutual inductor of neutral line N
- The signal of ground-fault protection stems from the vector sum of three phases of current
- Characteristic of definite protection


注：当系统不平衡电流超过接地保护值时会引起断路器误跳闸。
Note: the breaker is trip when imbalance current of distribution system is over ground fault setting value.



- TN-S配电系统中选用CW2四极断路器
- 接地故障保护信号取三相电流及N相电流矢量和
- 保护特性为定时限保护
- CW2 circuit breakers with four poles are used in the power distribution system of TN-S
- The signal of ground fault protection stems from the vector sum of three phases of current and N phase current
- Characteristic of definite protection

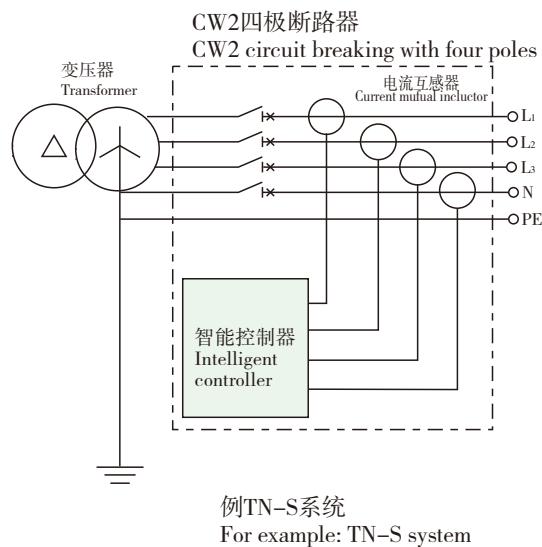

- TN-S配电系统中选用CW2三极断路器
- 外接中性线N电流互感器作接地故障保护用（接6号、7号二次回路接线端子），互感器安装地点距离断路器最大为2米。
- 接地故障保护信号取三相电流及N相电流的矢量和
- 保护特性为定时限保护
- CW2 circuit breakers with three poles are used in the power distribution system of TN-S
- N line current mutual inductor connected externally, which is installed 2 meters at maximum from the circuit breaker, takes the role of ground-fault protection (in connection with No.6 and No.7 wiring terminals of secondary circuit)
- The signal of ground-fault protection stems from the vector sum of three phases of current and N phase current
- Characteristic of definite protection

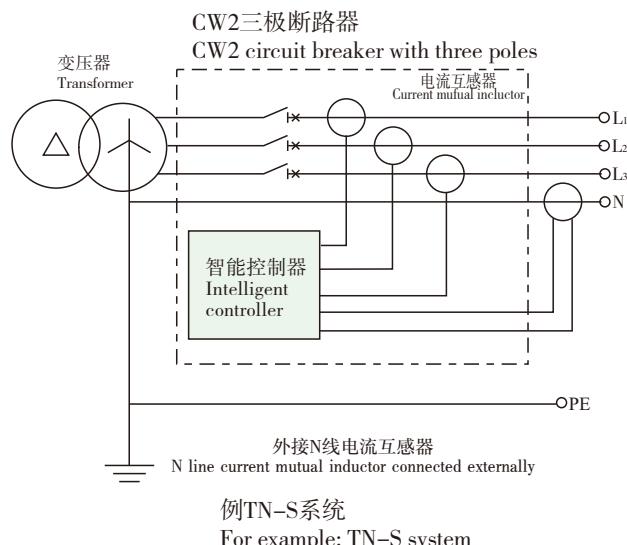



注：图中电流互感器为有效值采样。
Note: current transformer in diagrams is r.m.s. responsive.

注：可提供剩余电流(漏电)保护功能断路器,请咨询本公司。

Note: Can provide breaker with residual current (leakage current) protection, please call us.



- 负载监控功能 Load monitoring function
- 用于监控下级不重要负载，保证主系统供电；
- 负载监控有两种方式可选，用户任选其一。负载监控电流整定值为 I_{LC1} 及 I_{LC2} ，一般取 $I_{LC1} \geq I_{LC2}$ 。
- 负载监控反时限特性与过载长延时动作特性相同，即曲线平行。
- To monitor the subordinate unimportant load so as to ensure power supply of main system
- There are two patterns of load monitoring from which users can choose one at random. The setting value of load-monitoring current are I_{LC1} and I_{LC2} , normally I_{LC1} is larger than or equal to I_{LC2}
- Inverse characteristic of load-monitoring is the same of inverse long-time delay overload characteristic.

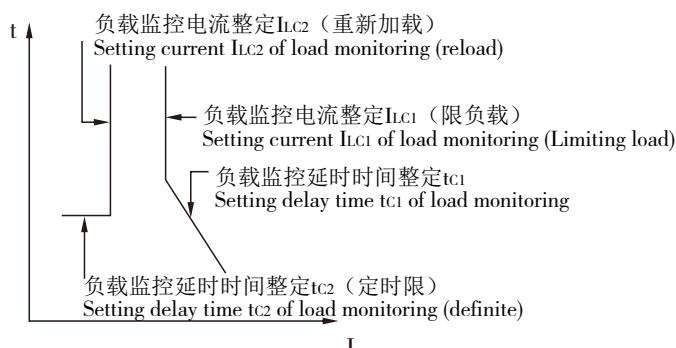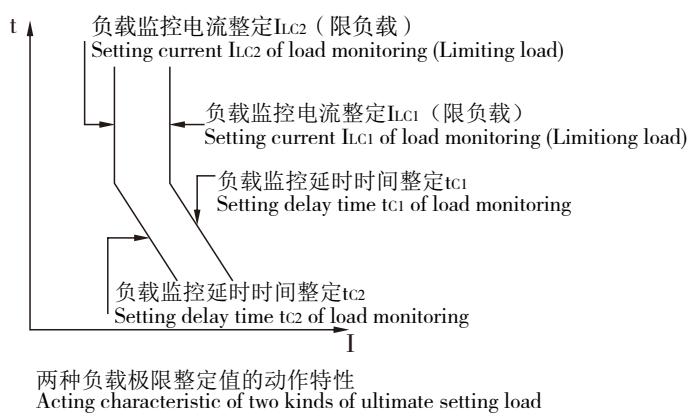

● 与 I_{LC1} 、 I_{LC2} 相对应的负载监控信号(1)、(2)分别通过断路器二次回路接线端子13、14和15、16输出接点信号，信号发出时同时由智能控制器的发光二极管指示。(控制器负载监控信号输出接点闭合0.5s后断开，接点容量AC230V5A)

● 方式一：可控制两路下级负载，当主电路运行电流先后超过 I_{LC1} 、 I_{LC2} 时，分别延时 t_{C1} 、 t_{C2} 后发出接点信号，控制器指令分断两路受控负载，恢复受控负载供电需手动控制。

● Pattern 1: Two circuits of subordinate load can be controlled. When the operating current of the main circuit rises over the setting value of I_{LC1} and I_{LC2} , contact signal will be sent out after time durations of t_{C1} and t_{C2} respectively. Then this two circuits with monitored load are broken off by receiving the instructions from the intelligent controller. Recovery requires human intervention.

● 方式二：只控制一路下级负载，当主电路运行电流超过 I_{LC1} 时，延时 t_{C1} 后发出接点信号，控制器指令分断此路负载。如果分断此路负载后，主电路运行电流低于 I_{LC2} 且持续时间 t_{C2} 后，控制器可再发出信号，指令接通已分断负载（重新加载），恢复该负载供电。

● Pattern 2: Only one circuit with subordinate load can be controlled. When the operating current of the main circuit rises over the setting value of I_{LC1} , contact signal will be sent out after time duration of t_{C1} , and the this circuit is broken off by receiving the instructions from the intelligent controller. If the operating current of the main circuit decreases lower than the setting value of I_{LC2} after this circuit is broken off, the signal will be sent out again after time duration of t_{C2} for the open loading circuit to be closed (reloaded) and so the power supply of this circuit is restored.

● Load monitoring signals "(1)" and "(2)" corresponding to I_{LC1} and I_{LC2} respectively are transmitted into contact signals via the wiring terminals 13, 14 and 15, 16 of the secondary circuit. There will be LED indication at the time when signals are transmitted. (The load monitoring signals from the intelligent controller will be cut off in half second after the signal of contact closing is transmitted, and the capacity of contact is AC230V5A)



智能控制器 INTELLIGENT CONTROLLER

- 显示和测量功能 Indication and measurement function
- P25、P26型智能控制器 Intelligent of P25 and P26

项目 Item	显示方式 Display usage	具体内容 Content	显示和测量范围 Indication and measurement range	准确度 Accuracy	
电流 Current	LCD显示 LCD indication	I ₁ 、I ₂ 、I ₃ 、I _N (中性极 Neutral)	(0.2I _n ~ 1.2I _n) A	± 1.5%	
		I ₁ 、I ₂ 、I ₃ 、I _N (中性极 Neutral)、			
		I _c (接地 Grounding)	0.1I _n ~ 2000A	± 2.5%	
电压 Voltage		线电压U12、U23、U31 相电压U1N、U2N、U3N Line voltage U12、U23、U31 Phase voltage U1N、U2N、U3N	30V ~ 690V	± 0.5%	
		三相有功功率P Three-phase active power	-120MW ~ +120MW	± 2.5%	
功率 Power		三相无功功率Q Three-phase reactive power	-120Mvar ~ +120Mvar		
		三相视在功率S Three-phase apparent power	-120MVA ~ +120MVA		
		功率因数PF Power-factor	-1.00 ~ +1.00	± 2.5%	
电能 Electric quantity		三相有功电能E.P Three-phase active electric quantity	-10 ¹⁰ GWh ~ +10 ¹⁰ GWh	± 2.5%	
		三相无功电能E.Q Three-phase reactive electric quantity	-10 ¹⁰ Gvarh ~ +10 ¹⁰ Gvarh		
		三相视在电能E.S Three-phase apparent electric quantity	-10 ¹⁰ GVAh ~ +10 ¹⁰ GVAh		
频率 Frequency		f	45 ~ 65Hz	± 0.1Hz	
		I ₁₋₁ 、I ₂₋₁ 、I ₃₋₁ 、I _{N-1}	(0.2I _n ~ 1.2I _n) A	± 1.5%	
谐波电参量 (选项) Harmonic electric quantity		U ₁₂₋₁ 、U ₂₃₋₁ 、U ₃₁₋₁	30V ~ 690V	± 0.5%	
		U _{1N-1} 、U _{2N-1} 、U _{3N-1}			
		P _t	-120MW ~ +120MW	± 2.5%	
		Q _t	-120Mvar ~ +120Mvar		
		S _t	-120MVA ~ +120MVA		
		电流 HR _{1h} Current	0 ~ 1000%	± 5%	
		电压 HR _{Uh} Voltage			
		电流 THD _i 、thdi Current			
		电压 THD _u 、thdu Voltage			

- L25、M25/MY25、M26/MY26、H26/HY26型智能控制器 Intelligent of L25、M25/MY25、M26/MY26 and H26/HY26

项目 Item	智能控制器类型 Type of controller	显示方式 Display usage	具体内容 Content	显示和准确度测量范围 Indication and accuracy measurement range	准确度 Accuracy
电流 Current	L25型 Type L25	光柱显示 Light columnar indication	I ₁ 、I ₂ 、I ₃ 、I _N (中性极 Neutral)	(0.2I _n ~ 1.2I _n) A	± 5%
	M25/MY25型 Type M25/MY25		I ₁ 、I ₂ 、I ₃ 、I _N (中性极 Neutral)、I _{max}		
	M26/MY26、H26/HY26型 Type M26/MY26、H26/HY26		I ₁ 、I ₂ 、I ₃ 、I _N (中性极 Neutral)、I _c (接地 Grounding)、I _{max}		
电压 Voltage	M25/MY25、M26/MY26型为选项、H26/HY26型为必备 Type M25/MY25、M26/MY26 is optional、Type H26/HY26 is basic function	LED/LCD显示 LED/LCD indication	U ₁₂ 、U ₂₃ 、U ₃₁ 、U _{min}	U _e ≤690V: 30V ~ 690V	± 3%
				U _e =1000V: 125V ~ 1000V	
功率 Power	MY25、MY26、HY26型 Type MY25、MY26、HY26	LCD显示 Indication	三相有功功率P Three-phase active power	-9999kW ~ +9999kW	± 5%
			三相无功功率Q Three-phase reactive power	-9999kvar ~ +9999kvar	
			三相视在功率S Three-phase apparent power	-9999kVA ~ +9999kVA	



● 报警及指示功能 Alarm and prompt function

过电流故障报警 Over-current alarm	L25型 Type L25	面板上相应发光二极管亮 Corresponding LED on the panel will be "ON"	过载或脱扣后“报警及脱扣指示”灯亮（各为黄色或红色） Alarm and release indication lights will be on after the circuit breaker's being overloaded or released (yellow or red)
	M25/MY25型 Type M25/MY25		过载长延时、短路短延时、短路瞬时脱扣后相应报警指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding alarm will be on.
	M26/MY26、 H26/HY26型 Type M26/MY26、 H26/HY26		过载长延时、短路短延时、短路瞬时、接地故障脱扣后相应报警指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit, instantaneous short circuit and ground-fault, indication lights of corresponding alarm will be on.
	P25型 Type P25		过载长延时、短路短延时、短路瞬时脱扣后相应指示灯闪烁 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding alarm will be on.
	P26型 Type P26		过载长延时、短路短延时、短路瞬时、接地故障脱扣后相应指示灯闪烁 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding alarm will be on.
故障类型指示 Fault indication	L25型 Type L25	面板上相应发光二极管亮 Corresponding LED on the panel will be "ON"	过载长延时、短路短延时、短路瞬时脱扣后相应故障类型指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding fault type will be on.
	M25/MY25型 Type M25/MY25		过载长延时、短路短延时、短路瞬时脱扣后相应故障类型指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding fault type will be on.
	M26/MY26、 H26/HY26型 Type M26/MY26、 H26/HY26		过载长延时、短路短延时、短路瞬时、接地故障脱扣后相应故障类型指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit, instantaneous short circuit and ground-fault, indication lights of corresponding fault type will be on.
	P25型 Type P25		过载长延时、短路短延时、短路瞬时脱扣后相应故障类型指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding alarm will be on.
	P26型 Type P26		过载长延时、短路短延时、短路瞬时、接地故障脱扣后相应故障类型指示灯亮 After the circuit breaker's being released by long-time delay overload, short-time delay short circuit and instantaneous short circuit, indication lights of corresponding alarm will be on.
故障相、故障电流、 时间显示 Indication of faulty phase, current and time	M25、M26、H26型 Type M25、M26、H26	LED显示 Indication	显示最近一次故障相/分断故障电流值、分断时间 Indication of faulty phase, breaking value of fault current and breaking time
	MY25、MY26、HY26型 Type M26/MY26、H26/HY26	LCD显示 Indication	可显示最近10次故障类别及发生时间，故障相、分断故障电流值、分断时间 It can indicate the latest ten times fault categories and occurrence time, faulty phase, breaking value of fault current and breaking time.
	P25、P26型 Type P25、P26	LCD显示 Indication	

● 试验功能 Test function

面板按键 或菜单操作 Panel button or menu operates	L25、M25/MY25、M26/MY26、 H26/HY26、P25、P26型 Type L25、M25/MY25、 M26/MY26、H26/HY26、P25、P26	脱扣 Release	检验智能控制器的时间/电流特性及断路器执行机构的完好情况 Inspection of T-I characteristic of the intelligent controller and he conditions of operating mechanism
	M25/MY25、M26/MY26、 H26/HY26、P25、P26型 Type M25/MY25、M26/MY26、 H26/HY26、P25、P26		检验智能型控制器的时间/电流特性 Inspection of T-I characteristic of the intelligent controller



- 触头磨损指示功能 (M25/MY25、M26/MY26、H26/HY26、P25、P26型配置)

智能控制器具有触头磨损指示功能，即按“磨损指示”键，可显示断路器主触头当量磨损次数占断路器电气寿命次数的百分比数值。

- 自诊断功能 (M25/MY25、M26/MY26、H26/HY26、P25、P26型配置)

当智能控制器微处理器发生故障或微处理器周围环境温度超过 $80^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ，能立即发出报警信号。

- MCR功能

在闭合操作时，如接通电流超过预定值，断路器无任何人为延时断开，且当断路器处于闭合位置时不动作。

- 故障记忆功能 (M25/MY25、M26/MY26、H26/HY26、P25、P26型配置)

断路器遇故障分断后，智能控制器能显示出故障类别、故障相及故障电流值、分断动作时间值。

- 谐波分析功能 (P25、P26型选项)

选择谐波分析功能的P25、P26型智能控制器能测量基波电流、基波线电压、基波相电压、基波功率及3~31次各次奇次谐波电流含有率(HRI_h)、谐波电压含有率(HRU_h)、谐波电流总畸变率[THDi、thdi]、谐波电压总畸变率[THDu、thdu]。

- 谐波含有率 (HR)

周期性交流量中含有的第h次谐波分量的方均根值与基波分量的方均根值之比（用百分数表示）。

- 第h次谐波电流含有率以HRI_h表示。

$$\text{HRI}_h = \frac{I_h}{I_{1-1}} \times 100\%$$

注：式中I_h为A相第h次谐波电流（方均根值）；

- Contact wearing indication (for M25/MY25、M26/MY26、H26/HY26、P25 and P26)

The intelligent controller has the function of contact wearing indication. Accordingly, the percentage of the equivalent to wearing times of main contact to electrical life-span times of the circuit breaker can be indicated by pushing the button of "wearing indication".

- Self-diagnosis function (for M25/MY25、M26/MY26、H26/HY26、P25 and P26)

When the microprocessor of the intelligent controller breaks down or the ambient temperature of the microprocessor rises over $80^{\circ}\text{C} \pm 5^{\circ}\text{C}$, alarm signals can be sent out immediately.

- MCR function

During a closing operation, if making current exceeds a predetermined value, circuit breaker is opened without any intentional time-delay, and which is rendered inoperative when circuit breaker is in the closed position.

- Fault-memory function (for M25/MY25、M26/MY26、H26/HY26、P25 and P26)

The types and phases of fault, value of faulty current and breaking time would be indicated on the intelligent controller if the circuit breaker broke off as a result of faults.

- Harmonic analysis function (selective function for P25 and P26)

P25 or P26 intelligent controller with harmonic analysis function can measure fundamental current、fundamental line voltage、fundamental phase voltage、fundamental power、odd harmonic current ratio (HRI_h) from the third to thirty-first、harmonic voltage ratio (HRU_h)、total harmonic distortion of current (THDi、thdi) and total harmonic distortion of voltage (THDu、thdu).

- Harmonic ratio (HR)

The ratio of RMS of hth harmonic component in the periodical alternating quantum to RMS of fundamental component (express by percent).

- Harmonic current ratio of hth expresses HRI_h.

$$\text{HRI}_h = \frac{I_h}{I_{1-1}} \times 100\%$$

Note: I_h-harmonic current of hth of phase A (RMS)
Harmonic voltage ratio of hth expresses HRU_h.



- 第h次谐波电压含有率以 HRU_h 表示。

$$HRU_h = \frac{U_h}{U_{12-1}} \times 100\%$$

注：式中 U_h 为A-B相间第h次谐波线电压。

- 总谐波畸变率（THD、thd）
- 周期性交流量中的谐波含量与其基波分量的方均根值之比（THD）用百分数表示。

$$THD_i = \frac{\sqrt{\sum_{h=2}^{\infty} I_h^2}}{I_{1-1}} \times 100\%$$

$$THD_u = \frac{\sqrt{\sum_{h=2}^{\infty} U_h^2}}{U_{12-1}} \times 100\%$$

注：式中 I_h 为A相第h次谐波电流（方均根值）； U_h 为A-B相间第h次谐波线电压（方均根值）。

- 周期性交流量中的谐波含量与该周期性交流量的方均根值之比（thd）（用百分数表示）。

$$thd_i = \frac{\sqrt{\sum_{h=2}^{\infty} I_h^2}}{I_1} \times 100\%$$

$$thd_u = \frac{\sqrt{\sum_{h=2}^{\infty} U_h^2}}{U_{12}} \times 100\%$$

注：式中 I_h 为A相第h次谐波电流（方均根值）； U_h 为A-B相间第h次谐波线电压（方均根值）。

- 谐波电流比hth表达式 $HR Ih$ 。

$$HRU_h = \frac{U_h}{U_{12-1}} \times 100\%$$

Note U_h =harmonic line voltage of hth between phase A and B.

- 总谐波畸变率（THD、thd）
- 周期性交流量中的谐波含量与其基波分量的方均根值之比（THD）用百分数表示。

$$THD_i = \frac{\sqrt{\sum_{h=2}^{\infty} I_h^2}}{I_{1-1}} \times 100\%$$

$$THD_u = \frac{\sqrt{\sum_{h=2}^{\infty} U_h^2}}{U_{12-1}} \times 100\%$$

Ntoe: I_h =harmonic current of hth of phase A (RMS)

U_h =harmonic line voltage of hth between phase A and B (RMS)

- 周期性交流量中的谐波含量与该周期性交流量的方均根值之比（thd）（用百分数表示）。

$$thd_i = \frac{\sqrt{\sum_{h=2}^{\infty} I_h^2}}{I_1} \times 100\%$$

$$thd_u = \frac{\sqrt{\sum_{h=2}^{\infty} U_h^2}}{U_{12}} \times 100\%$$

Ntoe: I_h =harmonic current of hth of phase A (RMS)


U_h =harmonic line voltage of hth between phase A and B (RMS)



- 区域选择性联锁 Zone selective interlock

区域选择性联锁 (ZSI功能) (M25/MY25、M26/MY26、H26/HY26、P25、P26型配置, 选项)

Zone selective interlock (ZSI function) (for M25/MY25、M26/MY26、H26/HY26、P25 and P26, optional)

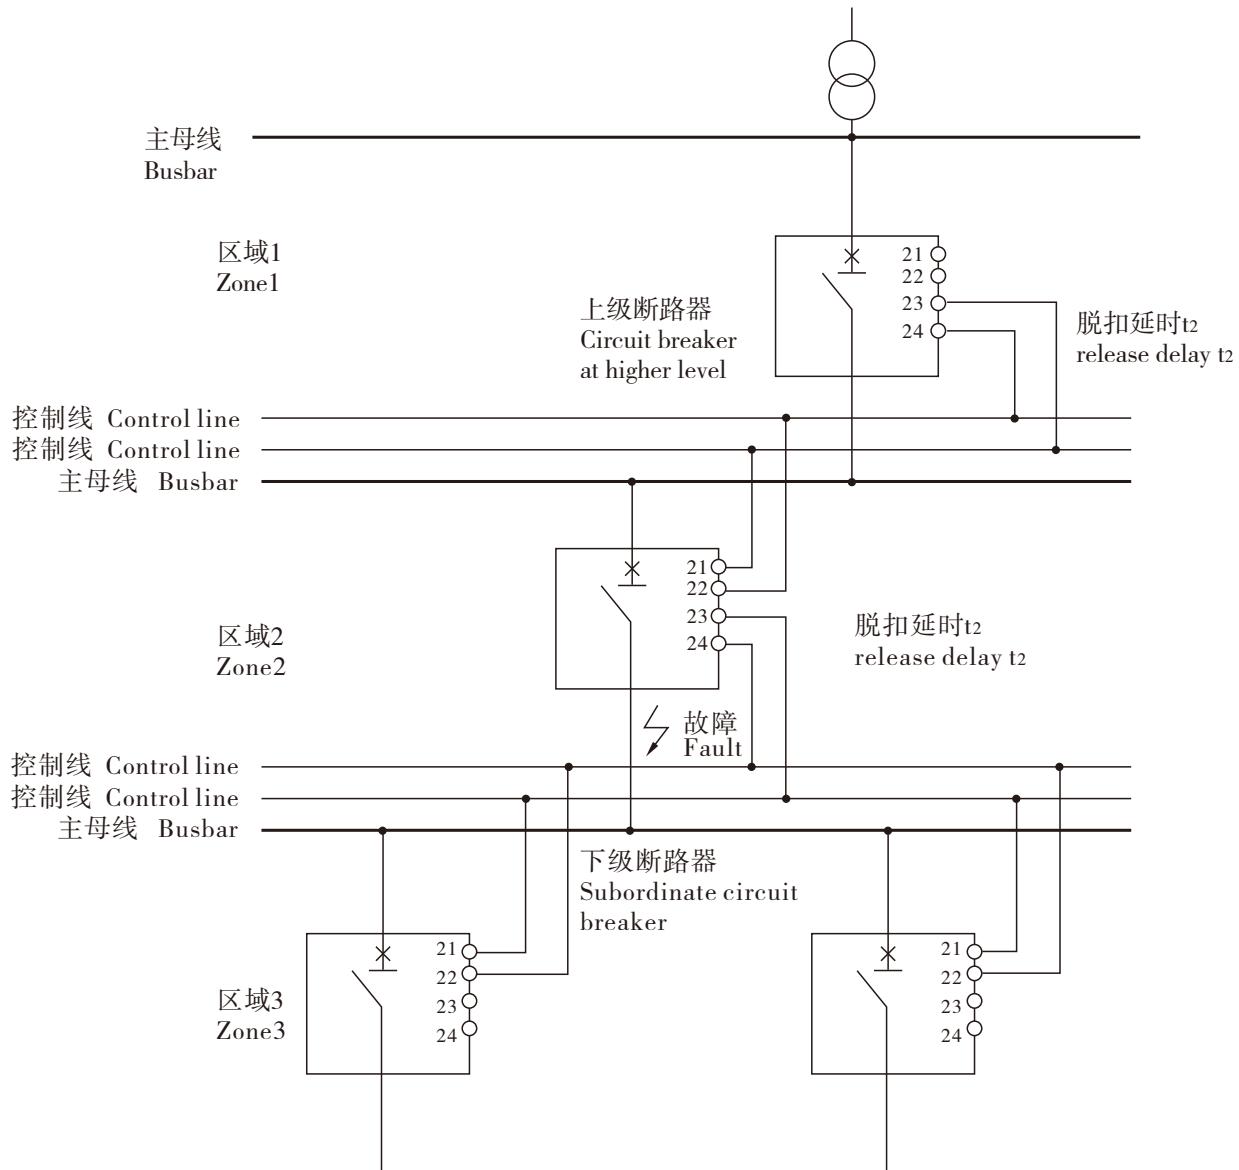

注: 21, 22, 23, 24为断路器二次回路接线端子。

Note: 21,22,23,24 serve as the wiring terminals of secondary circuit.



当多台CW2断路器上下连接在一起时，选择区域选择性联锁（ZSI）功能可确保断路器上下级完全选择性保护，这样减少了故障动作范围，并缩短了断路器的分断时间。此功能适用于断路器短路短延时（ I^2t OFF）和接地故障保护。

如上图所示，控制线可联锁多个断路器。

检测到故障的智能控制器（区域2）送一个信号给上级断路器（区域1）并检查下级断路器（区域3）到达的信号。如果有下级断路器送过来的信号，断路器将在脱扣延时期间保持合闸。如果下级没有送过来信号，断路器将瞬时断开，不管脱扣保护是否有延时。

注：末级23，24应短接。

When pieces of circuit breakers are linked together up and down, zone selective interlock (ZSI) can ensure fully-selective protection of circuit breakers at higher or lower level so as to reduce the range of action by fault and the breaking time of circuit breakers. This function serves for short-time delay short circuit (I^2t OFF) and ground-fault protection of circuit breakers.

As the sketch shown above, control lines can interlock with pieces of circuit breakers.

After detecting the fault, the intelligent controller (zone 2) will send out a signal to circuit breakers (zone 1) at higher level and check whether the signal of circuit breakers (zone 3) at lower level arrives. If circuit breakers at lower level send out a signal, the circuit breaker will be on at the time duration of release delay; if circuit breakers at lower level don't send out a signal, the circuit breaker will break off instantly no matter whether the release has the protection of delay.

Note: The end 23 and 24 should be short-circuited.



(四) 特性参数及曲线 Characteristic parameters and curve

● 特性参数 Characteristic parameters

● 过载长延时反时限动作特性 Characteristic of inverse long-time delay overload

注：过载长延时反时限动作以 $1.5I_{r1}$ 的动作时间 t_1 为基准。Note: Acting of inverse long-time delay overload is based on acting time t_1 of $1.5I_{r1}$ ● 通用 I^2t 长延时反时限动作特性 ● Characteristic of inverse long-time delay general I^2t

动作时间允差 $\pm 10\%$ Tolerance of acting time	整定电流 I_{r1} 调整范围 Adjustment range of the setting current I_{r1}	L25型 Type L25		(0.65 ~ 1) I_n 按每级5% I_n 递变调整 Adjust successively with 5 percent in for each step						
	M25/MY25、M26/MY26、H26/HY26、P25、P26型 Type M25/MY25、M26/MY26、H26/HY26、P25、P26	(0.4 ~ 1) I_n 按每级10A递变调整 Adjust successively with 10A for each step								
	电流 Current	动作时间 Acting time								
	1.05 I_{r1}	2小时内不动作 Not acting								
	1.3 I_{r1}	$\leq 1h$ 动作 Acting								
	1.5 I_{r1}	整定时间 $t_1(s)$ Setting time	15	30	60	120	240	480		
	2.0 I_{r1}	动作时间 $T_1(s)$ Acting time	8.4	16.9	33.7	67.5	135	270		
	6.0 I_{r1}	动作时间 $T_1(s)$ Acting time	0.94	1.88	3.75	7.5	15	30		
	7.2 I_{r1}	动作时间 $T_1(s)$ Acting time	0.65	1.30	2.60	5.20	10	21		
脱扣级别* Release rate		-	-	10A	10	20	30			
热模拟功能 Thermo-analogue function		$\leq 10min$ (断电可清除) (Can be cleared out in case of power failure)								

*注：脱扣级别对应于电动机保护型断路器。

*Note: Release rate corresponding to the circuit breakers with motor protection.

● 非常反时限 I_t 动作特性● Characteristic of inverse time delay special I_t

动作时间允差 $\pm 10\%$ Tolerance of acting time	整定电流 I_{r1} 调整范围 Adjustment range of the setting current I_{r1}	P25、P26型 Type P25、P26		(0.4 ~ 1) I_n 按每级10A递变调整 Adjust successively with 10A for each step									
	电流 Current	动作时间 Acting time											
	1.05 I_{r1}	2小时内不动作 Not acting											
	1.3 I_{r1}	$\leq 1h$ 动作 Acting											
	1.5 I_{r1}	整定时间 $t_1(s)$ Setting time	10	15	30	60	90	120					
	2.0 I_{r1}	动作时间 $T_1(s)$ Acting time	5	7.5	15	30	45	60					
	6.0 I_{r1}	动作时间 $T_1(s)$ Acting time	1	1.5	3	6	9	12					
	7.2 I_{r1}	动作时间 $T_1(s)$ Acting time	0.81	1.21	2.42	4.84	7.26	9.68					
脱扣级别* Release rate		-	-	10A	10	20	30						
热模拟功能 Thermo-analogue function		$\leq 10min$ (断电可清除) (Can be cleared out in case of power failure)											

*注：脱扣级别对应于电动机保护型断路器。

*Note: Release rate corresponding to the circuit breakers with motor protection.



- 高压熔丝 I^4t 配合动作特性
- Interoperation characteristic of high-voltage fuse I^4t

整定电流 Ir_1 调整范围 Adjustment range of the setting current Ir_1		P25、P26型 Type P25、P26		(0.4~1) In 按每级10A递变调整 Adjust successively with 10A for each step					
动作时间允差 $\pm 10\%$ Tolerance of acting time	电流 Current	动作时间 Acting time							
	1.05 Ir_1	2小时内不动作 Not acting							
	1.3 Ir_1	$\leq 1h$ 动作 Acting							
	1.5 Ir_1	整定时间 $t_1(s)$ Setting time	60	120	240	480	960	1440	
	2.0 Ir_1	动作时间 $T_1(s)$ Acting time	16.25	32.5	65	130	260	390	
	6.0 Ir_1	动作时间 $T_1(s)$ Acting time	*	*	0.75	1.51	3.01	4.52	
	7.2 Ir_1	动作时间 $T_1(s)$ Acting time	*	*	*	0.73	1.45	2.18	
热模拟功能 Thermo-analogue function		$\leq 10min$ (断电可清除) (Can be cleared out in case of power failure)							

*注：动作时间 $T_1 \leq t_2$ 时，按短延时整定时间 t_2 动作。

*Note: When acting time T_1 is no more than t_2 , the acting time is short-time delay setting time t_2 .

- 短路短延时动作特性(可OFF)

在低倍数电流时为反时限特性；当过载电流大于8 Ir_1 时自动转换为定时限特性。短延时 I^2t 特性可“OFF”，此时呈定时限特性。

- Acting characteristic of short-time delay short circuit (can be OFF)

Inverse acting characteristics in low-multipled current; To switch into definite acting characteristic automatically when the over-current is above 8 Ir_1 ; definite acting characteristic manifests when short delay acting characteristic I^2t can be "OFF".

整定电流 Ir_2 调整范围 Adjustment range of the setting current Ir_2		L25型 Type L25	(1.5~10) Ir_1 +OFF按1.5、2、3、4、5、6、8、10倍 Ir_1 递变调整 (1.5~10) Ir_1 +OFF Adjust successively with 1.5、2、3、4、5、6、8、10 times of Ir_1						
		M25/MY25、M26/MY26、H26/HY26、P25、P26型 Type M25/MY25、M26/MY26、H26/HY26、P25、P26	(0.4~15) In +OFF 按每级20A递变调整 (0.4~15) In +OFF Adjust successively with 20A for each step						
电流允差 $\pm 10\%$ Tolerance of current $\pm 10\%$ 动作时间允差 $\pm 10\%$ 注：固有误差最大+20ms Note: Max. inherent tolerance +20ms	电流Current	动作时间 Acting time							
	$I \geq Ir_2, I \leq 8Ir_1$	反时限 Inverse		$T_2 = (8Ir_1)^2 t_2 / I^2$					
	$I \geq Ir_2, I > 8Ir_1$ 或 $I \geq Ir_2, I \leq 8Ir_1$ 反时限OFF时 $I \geq Ir_2, I > 8Ir_1$ 或 $I \geq Ir_2, I \leq 8Ir_1$ Be OFF for inverse	定时限 Definite	整定时间 $t_2(s)$ Setting line	0.1	0.2	0.3	0.4		
			可返回时间 (s) Returnable time	0.06	0.14	0.23	0.35		
热模拟功能 Thermo-analogue function		$\leq 5min$ (断电可清除) (Can be cleared out)							



● 短路瞬时动作特性（可OFF） Acting characteristic of instantaneous short circuit (can be OFF)

整定电流Ir3调整范围 Adjustment range of the setting current Ir3 电流允差 ± 15% Tolerance of current ± 15%	L25型 Type l25	(3~15) Ir1 (CW2系列) 按3、4、5、8、10、12、15倍Ir1递变调整 (3~15) Ir1 (CW2 series) Adjust successively with 3、4、5、8、10、12、15 and 15 time of Ir1
	M25/MY25、M26/MY26、H26/HY26、P25、P26型 Type M25/MY25、M26/MY26、H26/HY26、P25、P26	1.6kA ~ 35kA(CW2-1600)+OFF 2kA ~ 50kA(CW2-2000C/2000)+OFF 2.5kA ~ 50kA(CW2-2500)+OFF 4kA ~ 65kA(CW2-4000)+OFF 6.3kA ~ 80kA(CW2-6300)+OFF 按每级100A递变调整 Adjust successively with 100A for each step

● 接地故障动作特性（M26/MY26、H26/HY26、P26型配置，并可OFF）

Acting characteristic of ground-fault (only for M26/MY26、H26/HY26 and P26 controllers, this fuction can be OFF)

整定电流Ir4调整范围 Adjustment range of the setting current Ir4 注：固有误差最大+20ms Note: Max. inherent tolerance +20ms	CW2-1600	CW2-2000C/2000、CW2-2500	CW2-4000	CW2-6300
	0.4In ~ 0.8In或 1000A(取小者) 0.4In ~ 0.8In or 1000A (To chose the smaller)	0.2In或160A(取大者)~ 0.8In或1200A (取小者) 0.2In or 160A (To choose the larger) 0.8In or 1200A (To choose the smaller)	0.2In ~ 0.6In或 1600A (取小者) 0.2In~0.6In or 1600A (To choose the small)	0.2In ~ 0.5In或 2000A (取小者) 0.2In~0.5In or 2000A (To choose the small)
	按每级10A递变调整 Adjust successively with 10A for each step			
电流允差 ± 10% Tolerance of current ± 10% 动作时间允差 ± 10% 注：固有误差最大+20ms Note: Max. inherent tolerance +20ms	动作时间 Acting time			
定时限 Definite	整定时间t4(s) Setting time t4(s)	0.1	0.2	0.3
	可返回时间 (s) Returnable time	0.06	0.14	0.23
	0.4	0.35		

● 负载监控动作特性（M25/MY25、M26/MY26、H26/HY26、P25、P26型配置，选项，并与电流不平衡/断相保护两者选一）

Acting characteristic of load-monitoring (optional for type M25/MY25、M26/MY26、H26/HY26、P25 and P26 controllers, and two selecting one for current unbalance/loss phase)

方式一 Pattern one	整定电流I _{LC1} 、I _{LC2} 调整范围 电流允差 ± 10% Adjustment range of the setting current I _{LC1} 、I _{LC2} Tolerance of current ± 10%	(0.2~1.0) In 按每级20A递变调整 (0.2~1.0) In Adjust successively with 20A for each step
	延时特性 Delay characteristic	反时限特性 (自动跟踪t ₁) : t _{c1} =0.5t ₁ , t _{c2} =0.25t ₁ Inverse characteristic (automatic tracing T ₁): t _{c1} =0.5t ₁ , t _{c2} =0.25t ₁
方式二 Pattern two	整定电流I _{LC1} 、I _{LC2} 调整范围 电流允差 ± 10% Adjustment range of the setting current I _{LC1} 、I _{LC2} Tolerance of current ± 10%	(0.2~1.0) In 按每级20A递变调整 (0.2~1.0) In Adjust successively with 20A for each step
	延时特性 Delay characteristic	反时限特性 (自动跟踪t ₁) : t _{c1} =0.5t ₁ Inverse characteristic (automatic tracing T ₁) : t _{c1} =0.5t ₁
		定时限特性: t _{c2} =60s Definite characteristic: t _{c2} =60s




- 电流不平衡/断相保护特性 (M25/MY25、M26/MY26、H26/HY26、P25、P26型配置并可OFF, 选项, 并与负载监控两者选一)

Current unbalance and loss phase(M25/MY25、M26/MY26、H26/HY26、P25、P26 controller , optional and two selecting one for loading monitor)

电流不平衡保护 Current unbalance 动作值允差 $\pm 10\%$ 动作时间允差 $\pm 10\%$ Acting value error $\pm 10\%$ Acting time allowable error $\pm 10\%$	电流不平衡 $\varepsilon I1$ 调整范围	(20% ~ 80%) 按每级1%递变调整 (20% ~ 80%) adjusting successively with 1% for each step
	动作特性 Acting feature	定时限整定时间t5, (1 ~ 40) s按每级1s递变调整 Definit time, (1 ~ 40s) adjusting successively with 1s for each step
断相保护 Loss phase 动作值允差 $\pm 10\%$ 动作时间允差 $\pm 10\%$ Acting value error $\pm 10\%$ Acting time allowable error $\pm 10\%$ 注：固有误差最大+20ms Note: Max. inherent tolerance +20ms	断相 $\varepsilon I2$ 调整范围	(90% ~ 99%) 按每级1%递变调整 (90% ~ 99%) adjusting successively with 1% for each step
	动作特性 Acting feature	定时限整定时间t6, (0.1 ~ 3) s按每级0.1s递变调整 Definit time, (0.1 ~ 3s) adjusting successively with 0.1s for each step




- 通用 I^2t 特性曲线 Characteristic curve of general I^2t
- L25型智能控制器时间/电流特性曲线，CW2-1600 ~ CW2-6300
T/I (time / current) curve of type L25 intelligent controllers

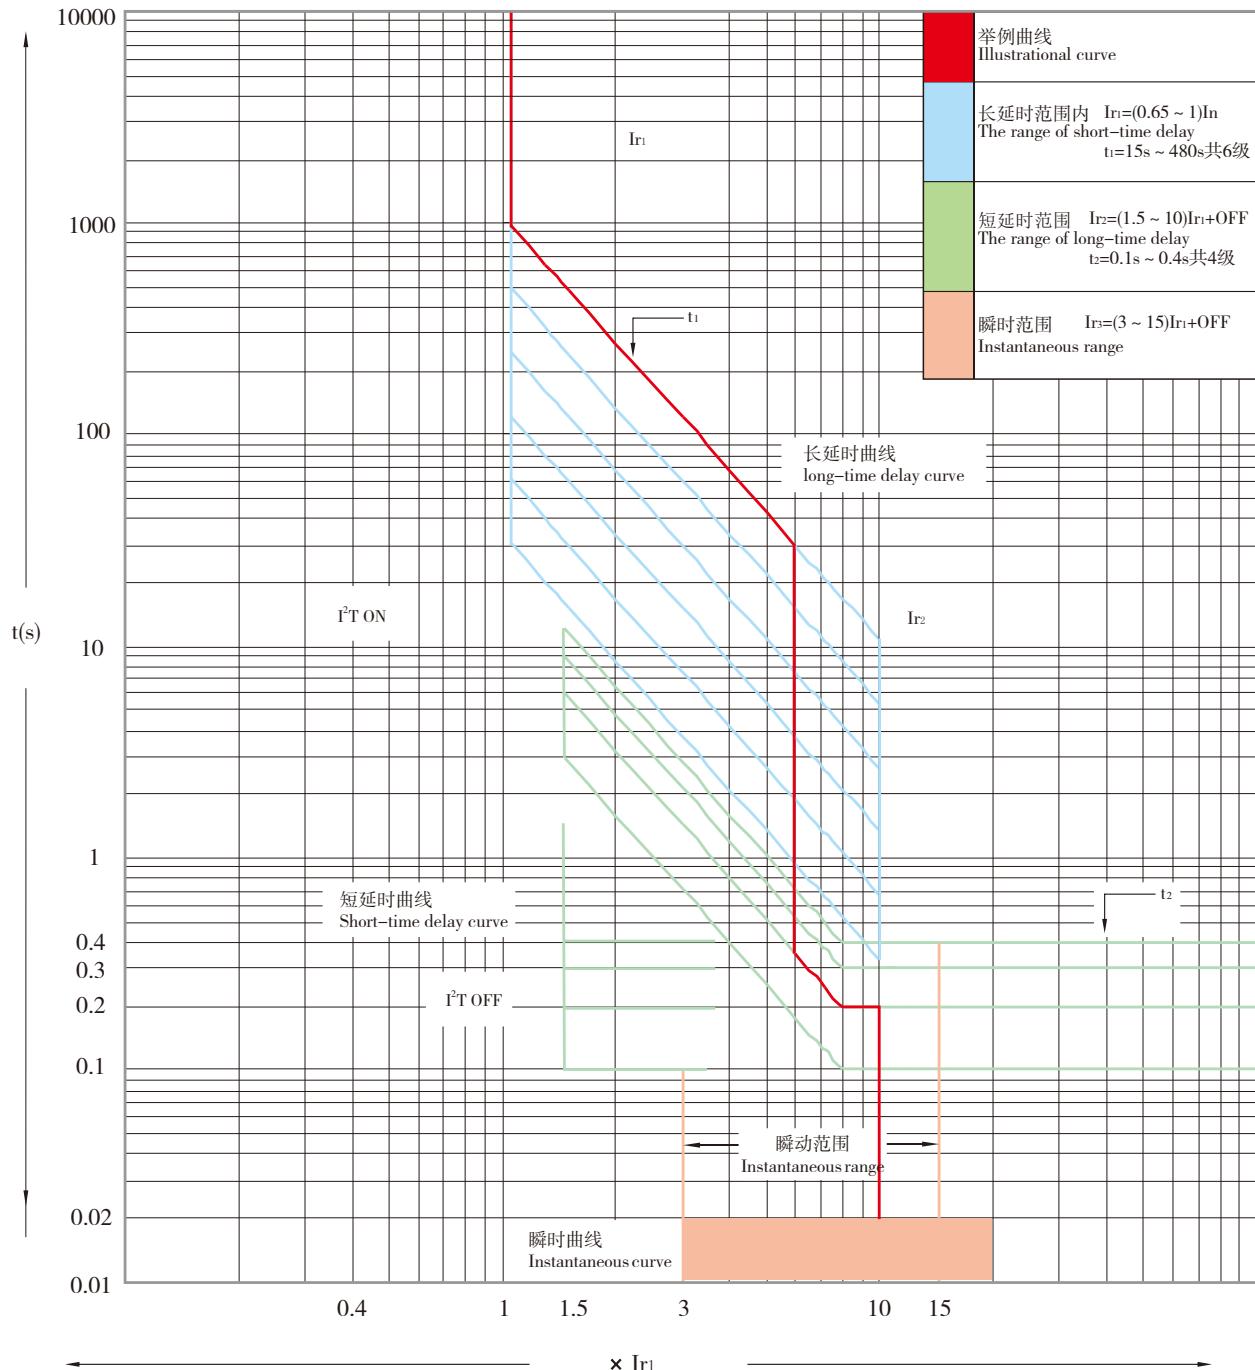



- M25/MY25、M26/MY26、H26/HY26、P25、P26型智能控制器时间/电流 I^2t 特性曲线，CW2-1600 ~ CW2-6300
T/I (time / current) I^2t curve of type M25/MY25、M26/MY26 、 H26/HY26、P25 and P26 intelligent controllers

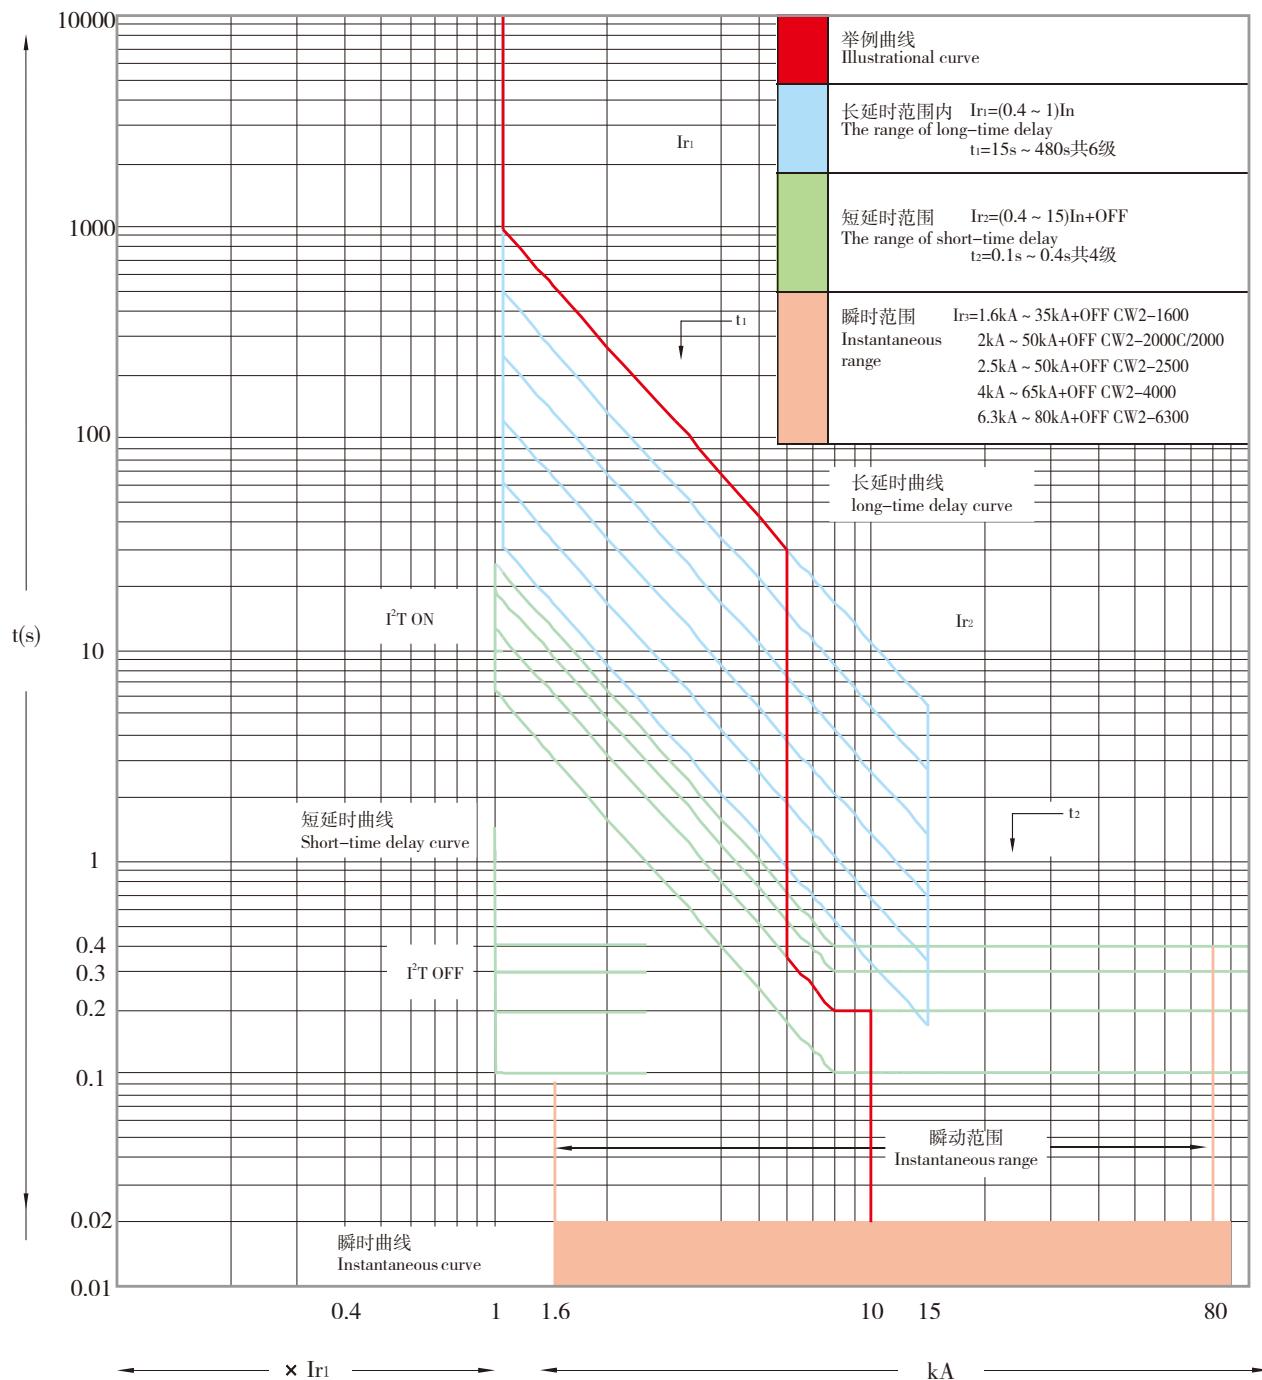




- 非常反时限 I^2t 特性曲线 Characteristic curve of inverse time delay special I^2t


- P25、P26型智能控制器时间/电流特性曲线，CW2-1600 ~ CW2-6300

T/I (time / current) curve of type P25 and P26 intelligent controllers

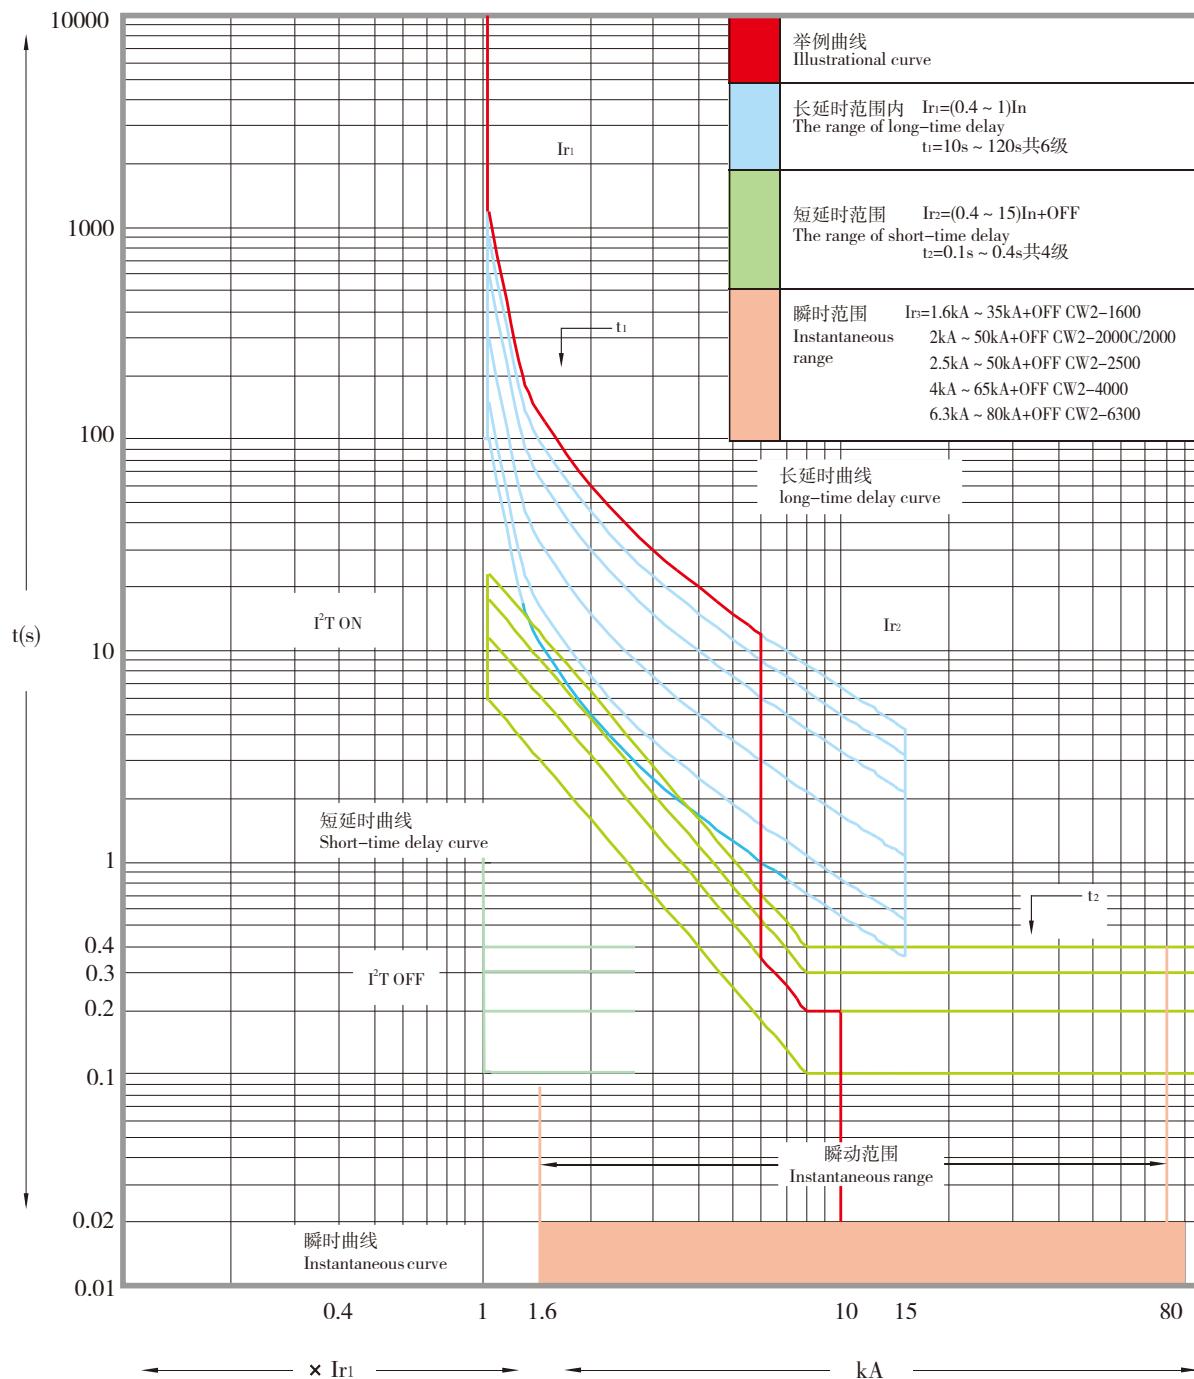




- 高压熔丝配合 I^4t 特性曲线 Characteristic curve of high-voltage fuse I^4t
- P25、P26型智能控制器时间/电流特性曲线，CW2-1600 ~ CW2-6300
T/I (time / current) curve of type P25 and P26 intelligent controllers

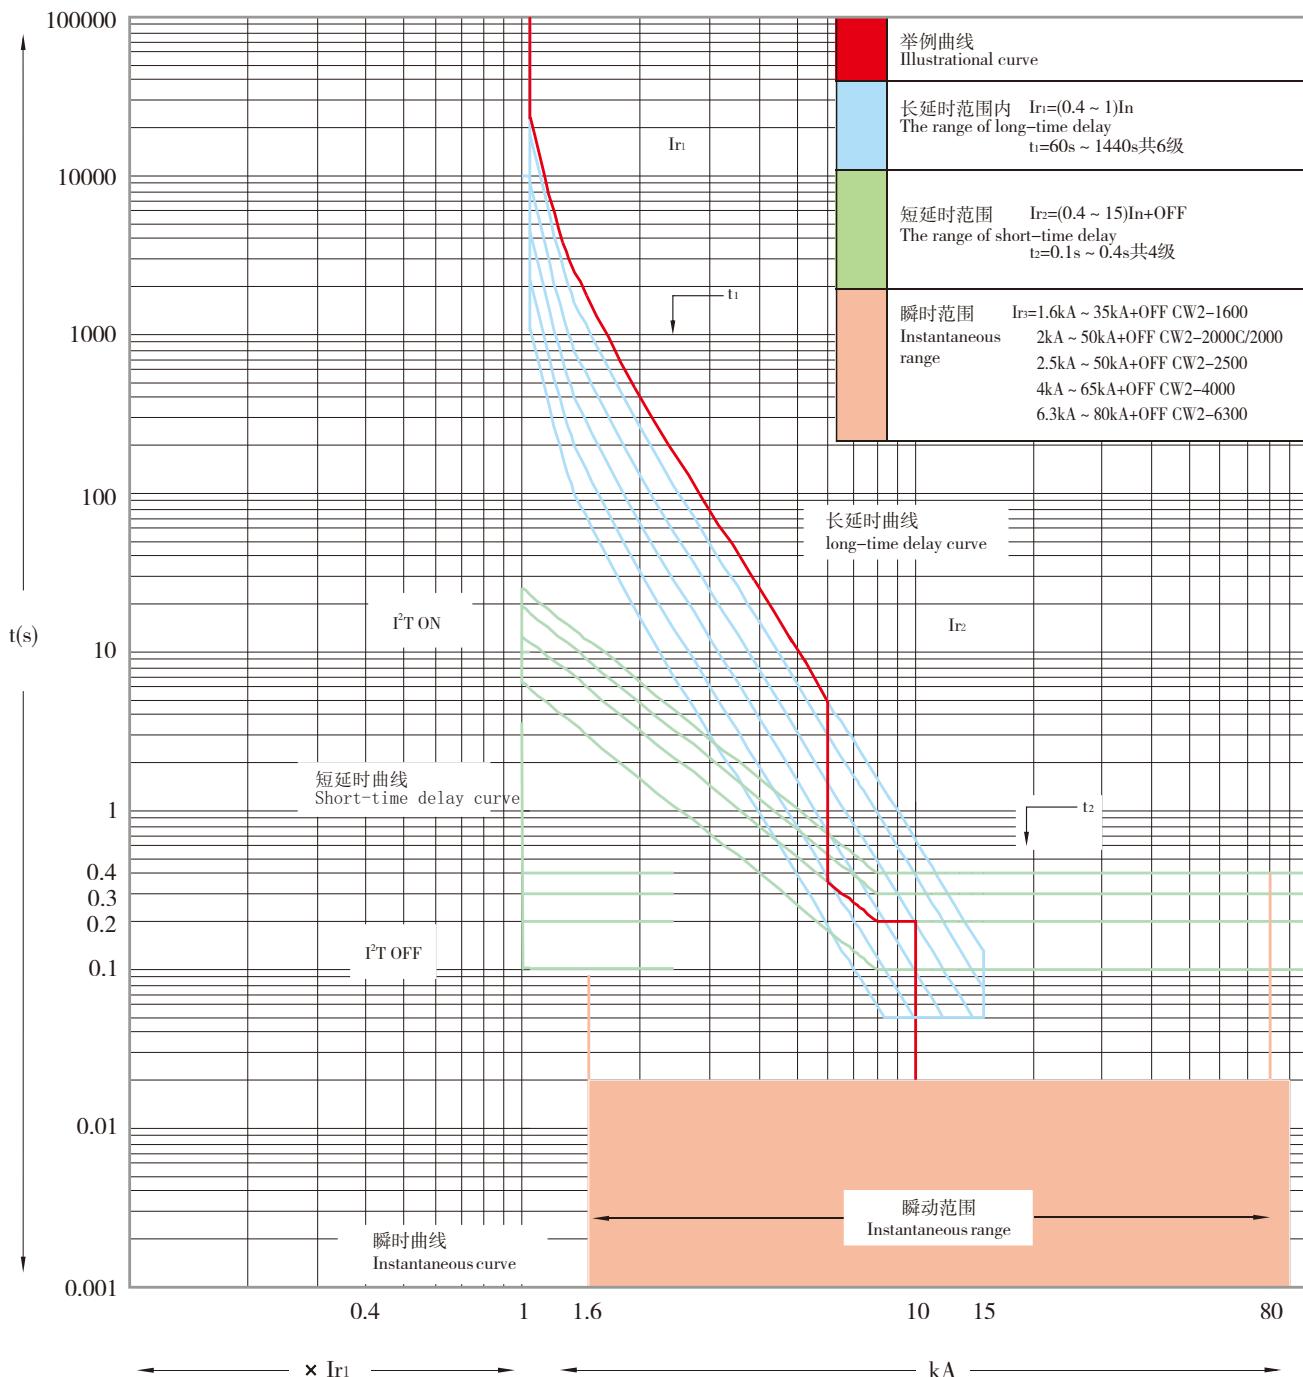




- M26/MY26、H26/HY26、P26型智能控制器接地故障保护时间/电流特性曲线

T/I (time / current) curve of type M26/MY26、H26/HY26 and P26 intelligent controllers for ground-fault protection

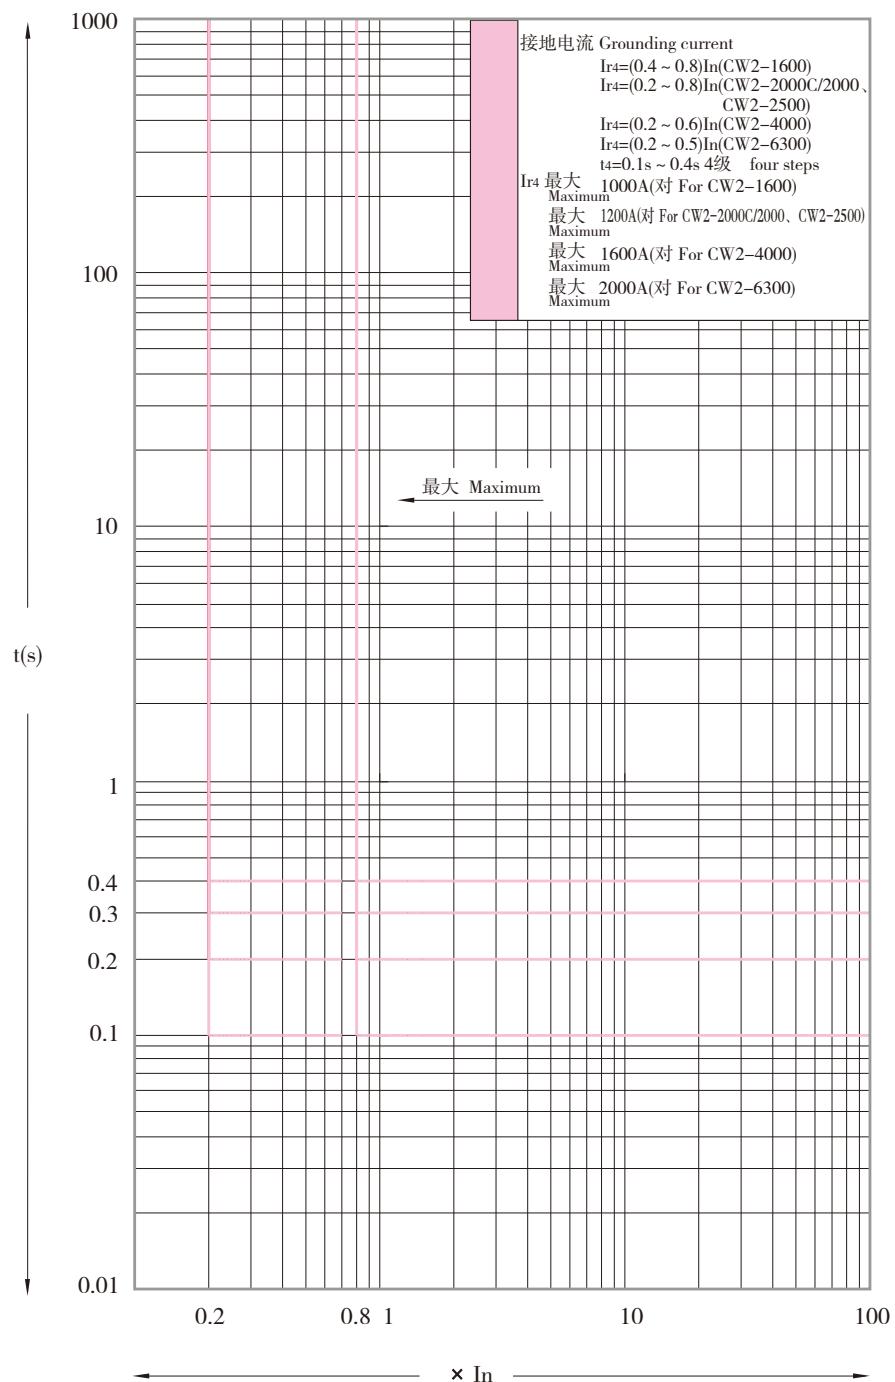




- M25/MY25、M26/MY26、H26/HY26、P25、P26型智能控制器负载监控方式一时间/电流特性曲线
T/I (time / current) curve of type M25/MY25、M26/MY26、H26/HY26、P25 and P26intelligent controllers for load-monitoring pattern one.

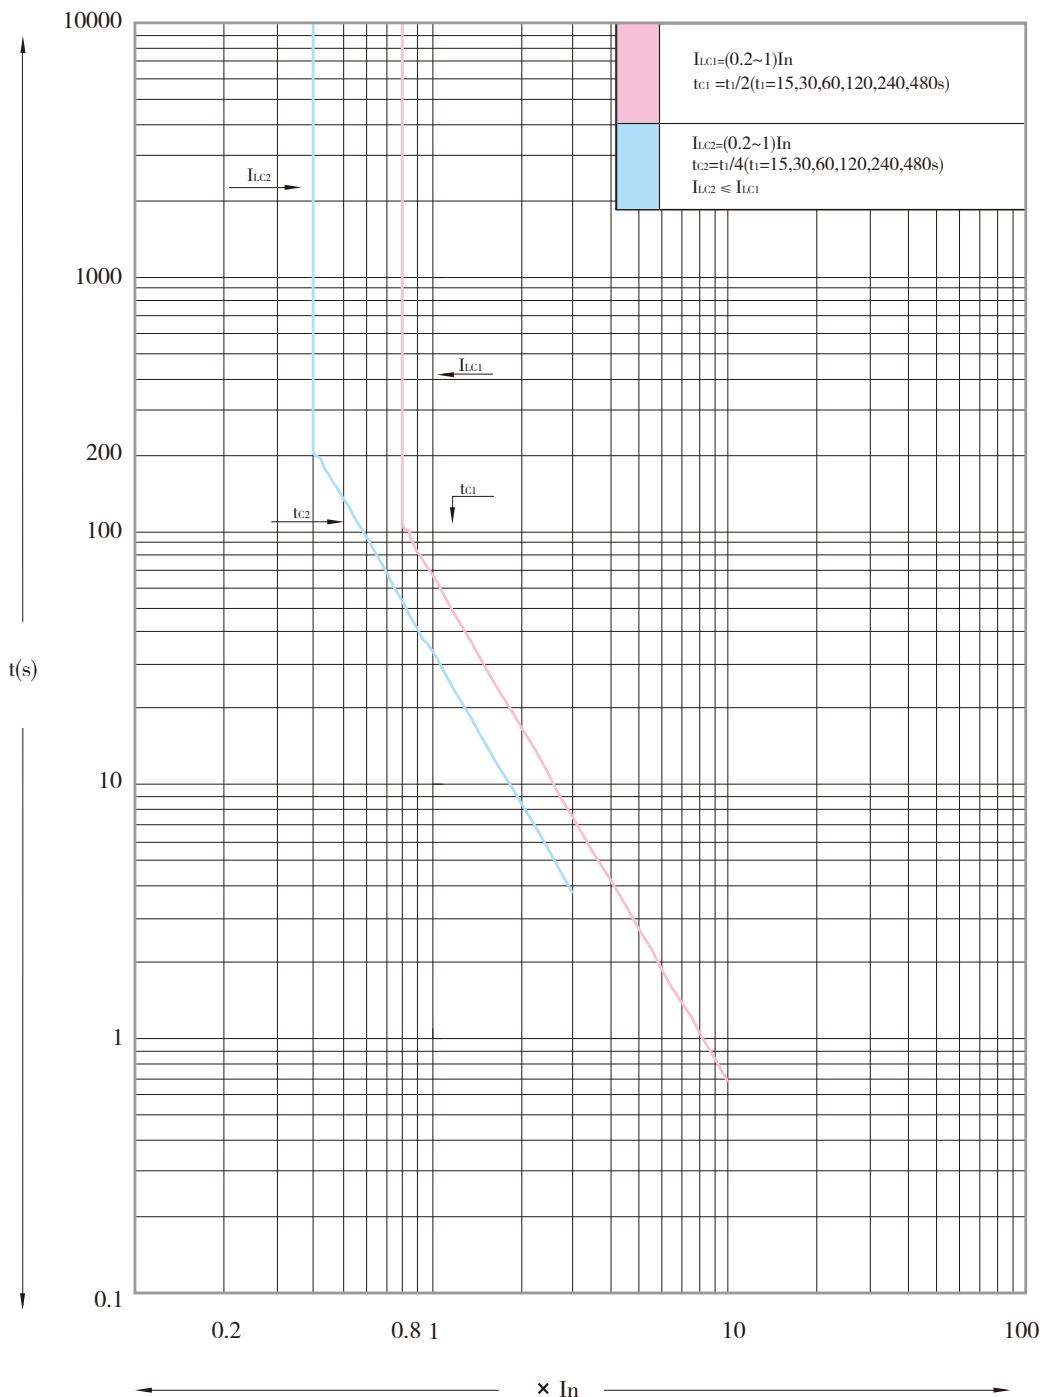



- M25/MY25、M26/MY26、H26/HY26、P25、P26型智能控制器负载监控方式二时间/电流特性曲线
T/I (time / current) curve of type M25/MY25、M26/MY26、H26/HY26、P25 and P26 intelligent controllers for load-monitoring pattern two.

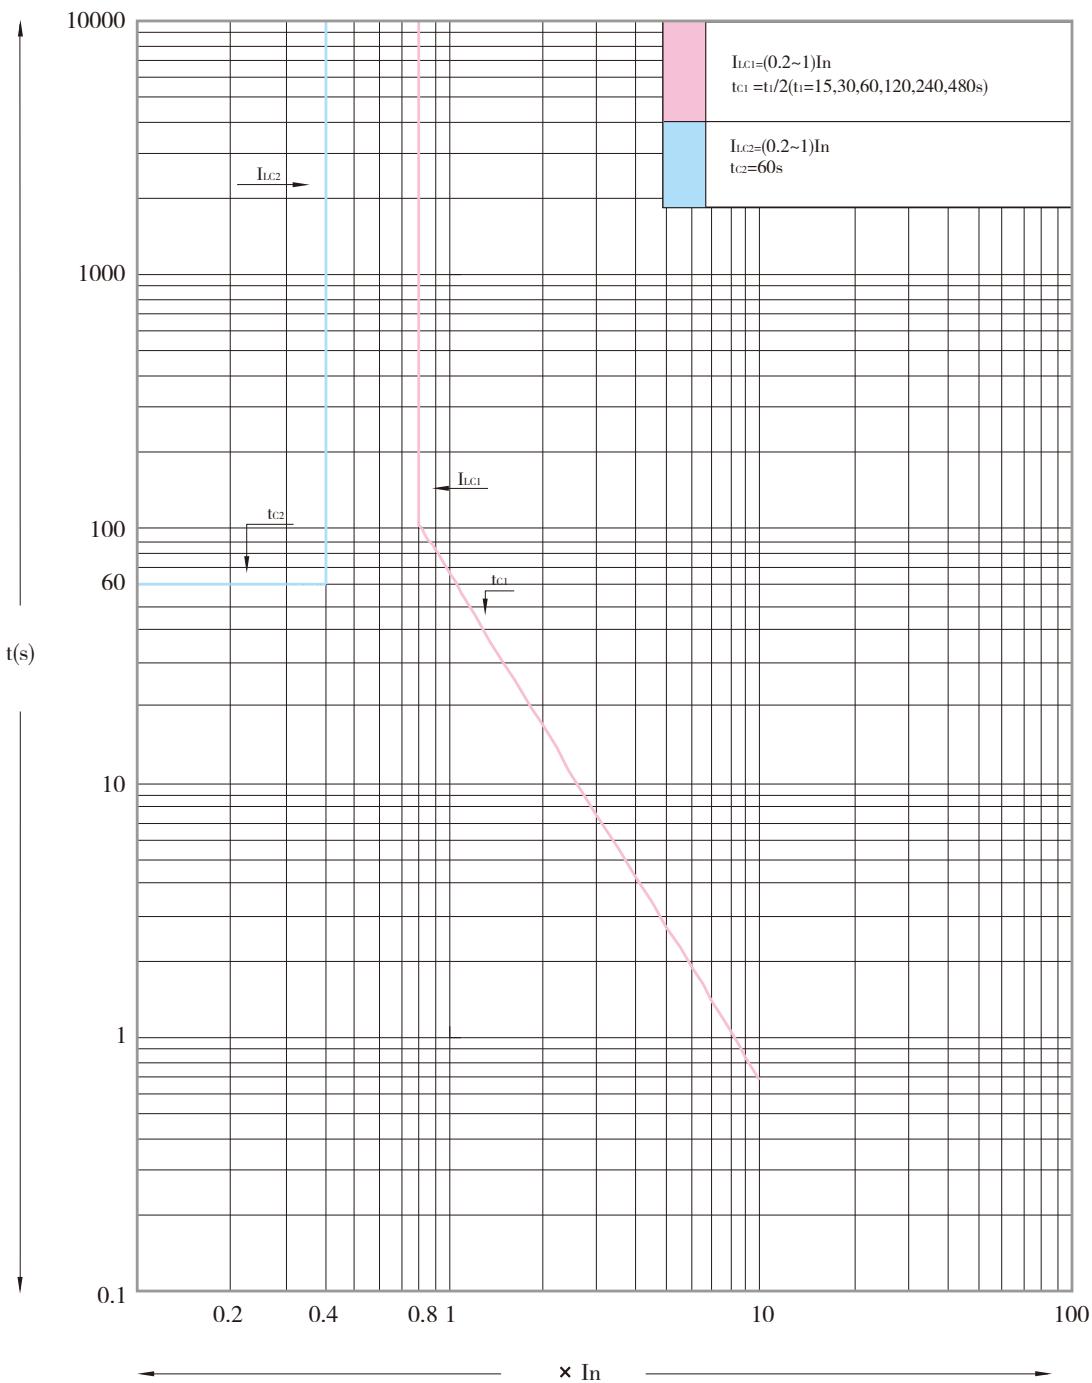



附 件 ACCESSORIES



CW2-1600



CW2-2000 及以上
CW2-2000 and above

● 标配附件

Normally-deployed accessories

- 分励脱扣器
- 可远距离操纵使断路器断开
- Shunt release
- To break the circuit breaker by remote control

● 特性 Characteristics

型号 Type	FFT/W216	FFT/W220		
配用断路器 Fitting breaker	CW2-1600	CW2-2000C/2000/2500/ 4000/6300		
额定控制电源电压Us(V) Rated voltage of control power supply	AC400 AC230 DC220 DC110			
瞬时电流(A) Instantaneous current	0.7	1.3	1.3	2.4
动作电压(V) Operating voltage	(0.7~1.1)Us			
分闸时间(ms) Opening time	不大于30 No more than 30			

● 合闸电磁铁

- 贮能结束后,合闸电磁铁能使操作机构的贮能弹簧力瞬间释放,使断路器快速闭合。

● Electromagnet

- After the circuit breaker ends up its energy storage, the closing electromagnet will make the energy storing spring to release its energy instantly, then to close the circuit breaker quickly.

● 特性 Characteristics

型号 Type	FHD/W216	FHD/W220		
配用断路器 Fitting breaker	CW2-1600	CW2-2000C/2000/2500/ 4000/6300		
额定控制电源电压Us(V) Rated voltage of control power supply	AC400 AC230 DC220 DC110			
瞬时电流(A) Instantaneous current	0.7	1.3	1.3	2.4
动作电压(V) Operating voltage	(0.85~1.1)Us			
合闸时间(ms) Closing time	不大于70 No more than 70			



CW2-1600



CW2-2000 及以上
CW2-2000 and above



附 件 ACCESSORIES

● 电动操作机构

- 断路器具有电动机贮能及自动再贮能功能；
- 断路器亦可手动贮能。



CW2-1600



CW2-2000及以上

CW2-2000 and above

● Motor driven operating mechanism

- The circuit breaker has the functions of motor-driven energy storage and automatic energy-restroing
- The energy storage can also be done manually.

● 特性 Characteristic

型号 Type	FDC/W216	FDC/W220	FDC/W240
配用断路器 Fitting breaker	CW2-1600	CW2-2000C/2000/2500	CW2-4000/6300
额定控制电源电压Us(V) Rated voltage of control power supply	AC400/AC230/DC220/DC110		
动作电压(V) Operating voltage	(0.85~1.1)Us		
功耗(VA/W) Power consumption	192		
储能时间(s) Charging time	不大于5 No more than 5		

● 辅助开关

● Auxiliary suiten



CW2-1600



CW2-2000及以上

CW2-2000 and above

● 特性 Characteristic

型号 Type	FFC/W2164Z	FFC/W2204Z	FFC/W21644	FFC/W22044	FFC/W22062	FFC/W22026
型式 Specification	4组转换触头 4 groups of changeover contacts	4常开4常闭 4 pieces of normally- opened contacts (NO) and 4 pieces of normally-closed contacts(NC)	6常开2常闭 6 pieces of normally- opened contacts(NO) and 2 pieces of normally-closed contacts(NC)	2常开6常闭 2 pieces of normally- opened contacts(NO) and 6 pieces of normally-closed contacts(NC)		
配用断路器 Fitting breaker	CW2-1600	CW2-2000C/2000/ 2500/4000/6300	CW2-1600	CW2-2000C/2000/ 2500/4000/6300	CW2-2000C/2000/2500/ 4000/6300	CW2-2000C/2000/2500/ 4000/6300
额定工作电压 (V) Rated operational voltage			AC400 300	AC230 300	DC220 60	DC110 60
额定控制容量 (VA/W) Rated capacity						
约定发热电流Ith (A) Conventional thermal current					6	

注：辅助开关标准型式为4组转换触头，特殊型式为4常开4常闭、6常开2常闭、2常开6常闭。
Note: For the normal type of auxiliary switch, there are four pairs of change-over contacts. For the special type of auxiliary contacts, they are of 4NO(normal open) 4NC(normal close), 6NO2NC, 2NO6NC.



附 件 ACCESSORIES

- 抽屉式断路器“分离”位置安全挂锁装置
- 抽屉式断路器处于“分离”位置时，可拔出锁杆来锁定，锁定后断路器将无法摇至“试验”或“连接”位置。
- 挂锁用户自备，锁杆直径 ϕ 4mm- ϕ 8mm。



“分离”位置安全挂锁装置
Safety padlock mechanism at the position of “separated”

- 电气选择附件 Choice of accessories
- 专用电源模块
- 当用户提供至CW2-1600断路器智能控制器电源电压为AC230V、400V时，须通过该电源模块转换成DC24V电源提供给控制器。

**注意：输入至CW2-1600二次回路端子1、2
电压必须为DC24V。**

- 此模块卡装于成套柜内35mm标准导轨上。



型号 Type	配用断路器 Fitting breaker	输入电压(V) Input voltage
FDY/W216	CW2-1600	AC400 / 230

● DC24V电源模块

- 当用户提供至CW2-1600断路器智能控制器电源电压为DC24V，须通过该电源模块将DC24V电源转换成DC24V电源提供给控制器。
- 此模块卡装于成套柜内35mm标准导轨上。



型号 Type	配用断路器 Fitting breaker	输入电压(V) Input voltage
FDY/W2T	CW2-1600	DC24

● 直流电源模块

当智能控制器外接二次回路电源为直流220V、110V时，须通过该模块转换成DC24V电源提供给智能控制器。

DC power supply module

When power supply of the secondary circuit is DC220V、110V, it should be transformed into DC24V by this module for power supply of the intelligent controller.



型号 Type	配用断路器 Fitting breaker
FDY/WT	CW2-1600/2000C/2000/2500/4000/6300



附 件 ACCESSORIES

● 电压转换模块 Voltage changover module

当具有电压显示功能（M25/MY25型、M26/MY26型可选，H26/HY26型、P25型、P26型标配）并且输入电压大于AC400V时需配备此模块，模块输入端A、B、C、N接至主回路，输出端A'、B'、C'、N'接断路器二次接线端子17、18、19、20。

When there has voltage display function(selected for M25/MY25、M26/MY26, standard set for H26/HY26、P25、P26)and the input voltage is higher than AC400V, there should have this module; the module input terminals A、B、C、N connect to the main circuit and the output terminal A'、B'、C'、N' connect to the circuit breaker's secondary circuit connection terminals 17、18、19、20.



型号 Type	配用断路器 Fitting breaker
FDZ/WT	CW2-1600/2000C/2000/2500/4000/6300

● 欠电压脱扣器

欠电压脱扣器由脱扣器线圈和控制单元组成，并按动作时间为瞬时动作和延时动作两种；

- AC230V、400V欠电压延时脱扣器延时时间常规分0.5s、1s、2s、3s四种，3s以上直至9s作特殊规格处理，由用户与工厂协商解决，延时准确度0.5s时±30%，其他时间准确度±10%；
- 光伏并网专用AC220V、380V欠电压脱扣器（FQTPV）满足国家电网公司Q/GDW1972《分布式光伏并网专用低压断路器技术规范》和Q/GDW1973《分布式光伏并网专用低压断路器检测规程》标准，延时时间为0~10s用户可调（出厂默认设定值为3s），其步长为1s，当延时时间为0s时动作时间小于0.2s，其他延时时间时的动作时间准确度为+20%。

- CW2-1600欠电压延时脱扣器需外装延时模块，模块卡装于35mm标准导轨上。模块输入端接至主电路，输出端接至断路器二次回路31、32接线端子。


● Under-voltage release

- The under-voltage release consists of release coil and control unit, and is divided to action or time delay action for action time.

- There are four specifications of time delay for AC230V、400V the under-voltage time delay release: 0.5s, 1s, 2s and 3s. Users should consult with the manufacturer in the light of their order about special time-delay specifications as from 3s and above up to 9s. The time delay accuracy is ± 30% for 0.5s, other time delay accuracy is ± 10%.

- The special AC220V、380V under-voltage releases of grid-connected PV system is complied with the state Grid corporation standards: Q/GDW1972《specification for low-voltage circuit-breaker for distributed grid-connected PV system》 and Q/GDW1973《test code for low-voltage circuit-breaker for distributed grid-connected PV system》. The delay time of release is 0~10s for user adjusting and step is 1s. The action time is less than 0.2s when delay time is 0s, and the other delay time accuracy is +20%.

- The Under-voltage release of CW2-1600 must be combined with the time-delay module which is installed by getting stuck into the standard slideway with 35mm in width. The module input terminals connect with main circuit, the output terminals connect with terminal 31,32 of the breaker.

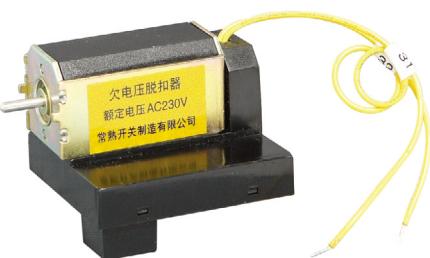

CW2-1600 (FQT/W)



CW2-1600欠电压
延时脱扣器延时模块 (FQY/W)
Under-voltage time delay
release time delay module

注：在雷雨多发地区或在供电电源电压不稳定的电网中，推荐使用带延时的欠电压脱扣器，可防止由于短时的电压降低而使断路器脱扣。延时时间一般为0.5s、1s、2s、3s，可供用户选择。


Note: In the electrified networks where thunder and rain often happens or whose power supply is not stable, under-voltage release with time delay is highly recommended to protect the circuit breaker from releasing due to transient voltage-lowering. Generally, delay time, which is selective by users, is 0.5s, 1s, 2s and 3s.



附 件 ACCESSORIES



CW2-2000C/2000及以上 (FQT/W+FQY/W)
CW2-2000C/2000 and above

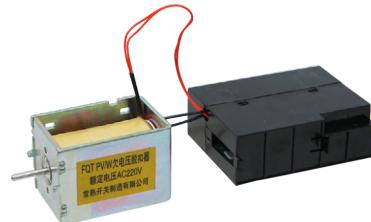

光伏并网专用 (FQTPV/W) Special PV time delay
光伏专用欠压延时模块(FQYPV/W)
under-voltage module



- 特性 Characteristics

型号 Type	FQT/W216	FQT/W216 +FQY/W2163	FQT/W216 +FQY/W2169	FQT/W220	FQT/W220 +FQY/W2203	FQT/W220 +FQY/W2209	
配用断路器 Fitting breaker	CW2-1600			CW2-2000C/2000/2500/4000/6300			
延时时间(s) Delay time	瞬时 Instantaneous	0.5/1/2/3	0.5/4/5/9	瞬时 Instantaneous	0.5/1/2/3	0.5/4/5/9	
额定工作电压Ue(V) Rated working voltage	AC400 / AC230						
动作电压(V) Operating voltage	(0.35~0.7)Ue						
可靠合闸电压(V) Reliable closing voltage	(0.85~1.1)Ue						
可靠不能合闸电压(V) Reliable impossible voltage	$\leq 0.35Ue$						
功耗, 吸合/保持(VA) Power consumption	300/12						

型号 Type	FQTPV/W216	FQTPV/W216+ FQYPV/W21610	FQTPV/W220	FQTPV/W220+ FQYPV/W22010	
配用断路器 Fitting breaker	CW2-1600			CW2-2000C/2000/2500/4000/6300	
延时时间(s) Delay time	瞬时 Instantaneous	0~10	瞬时 Instantaneous	0~10	
额定工作电压Ue(V) Rated working voltage	AC380 / AC220				
动作电压(V) Operating voltage	(0.2~0.7)Ue				
可靠合闸电压(V) Reliable closing voltage	(0.85~1.1)Ue				
可靠不能合闸电压(V) Reliable impossible voltage	$\leq 0.2Ue$				
功耗, 吸合/保持(VA) Power consumption	300/12				

- 抽屉座位置电气指示装置
- 抽屉式断路器本体与抽屉座分别处于“分离”、“试验”、“连接”三个位置时，三个位置电气指示装置可分别输出对应此三位置时电气状态信号，装置安装于抽屉座内。
- Electrical mechanism for the indication of draw-out socket's position
- When the main body of the draw-out circuit breaker and the draw-out socket are at the position of “separated”, “test” and “connected” respectively, three electrical mechanisms for the indication of draw-out socket's location can output the electrical signals corresponding with three positions above respectively. These mechanisms are installed inside the draw-out socket.


- 特性 Characteristics

型号 Type	FWZ/W216	FWZ/W220	FWZ/W240
配用断路器 Fitting breaker	CW2-1600	CW2-2000C/2000/2500	CW2-4000/6300
额定工作电压Ue (V) Rated working voltage	AC 230		
约定发热电流Ith (A) Conventional thermal current	10		
额定工作电流Ie (A) Rated working current	1.5		



附 件 ACCESSORIES

- 合闸准备就绪电气指示模块
- 断路器合闸准备就绪电气指示模块，指示断路器可以准备合闸。
- Electrical module for indication of ready-for-switching-on
- This electrical module indicates that the circuit breaker is ready for switching-on.
- 特性 Characteristics

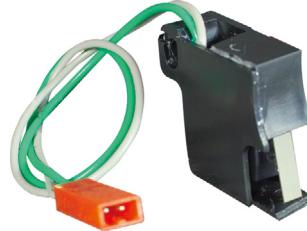

型号 Type	FHM/W216	FHM/W220
配用断路器 Fitting breaker	CW2-1600	CW2-2000C/2000/2500/4000/6300
额定工作电压Ue (V) Rated working voltage	AC 230	
约定发热电流Ith (A) Conventional thermal current	10	
额定工作电流Ie (A) Rated working current	1.5	

- 外接中性线N电流互感器
- TN-S配电系统中与三极断路器一起使用，安装于中性线N上，安装点距离最大2m。
- Current mutual inductor with neutral line N connected externally
- This current mutual inductor, which is used together with circuit breakers with three poles in the power distribution system of TN-S, installed in the neutral line N with 2m at maximum far from the installation point.

型号 Type	配用断路器 Fitting breaker
FDH-60	CW2-1600
FDH-80b	CW2-2000C/2000 (In=630A、800A)
FDH-80	CW2-2000C/2000/2500 (In=1000A ~ 2500A)
FDH-120	CW2-4000/6300
FDH-260	

- 通信选择附件
- 抽屉座通信模块组件
- 抽屉座通信模块组件由断路器外部的抽屉座通信模块和内部的抽屉座通信部件两部分组成。抽屉座通信部件安装于抽屉座内，提供抽屉式断路器本体与抽屉座处于“分离”、“试验”、“连接”三位置状态通信信号；抽屉座通信模块卡装于成套柜内35mm标准导轨上，提供读写断路器地址功能，显示断路器本体与抽屉座三位置状态指示等。两部分用软导线联结。



● Choice of communication accessories
 ● Components of draw-out socket communication module
 ● The components of draw-out socket communication module consists of the draw-out socket communication module outside of the circuit breaker and the draw-out socket communication parts inside of the circuit breaker. The draw-out socket communication parts are installed inside of the draw-out socket to provide the status signals of such three positions as “separated”, “test” and “connected” of the main body of the draw-out circuit breaker and the draw-out socket. The draw-out socket communication module, which can provide the function of reading the address of the circuit breaker and display the status indication of the main body and three positions of the draw-out socket etc, is installed by getting stuck into the standard slideway with 35mm in width inside the switchgear cabinet. The two parts of the draw-out socket communication module are connected with soft conducting lines.

型号 Type	配用断路器 Fitting breaker
FCT/W2	CW2-1600/2000C/2000/2500/4000/6300



附 件 ACCESSORIES

- 合闸准备就绪信号

通过上位机可获得指示断路器可以准备合闸状态信息。

- Ready-for-switching-on signal

You can achieve the information through the up-lever device that the circuit breaker is ready for switching-on.

型号 Type	配用断路器 Fitting breaker
FHX/W216	CW2-1600
FHX/W220	CW2-2000C/2000/2500/4000/6300

- 欠电压信号

通过上位机可获得断路器欠电压跳闸状态信息。

- Under-voltage signal

You can achieve the information through the up-lever device that the circuit breaker is tripping operation under-voltage.

型号 Type	配用断路器 Fitting breaker
FQX/W2	CW2-2000C/2000/2500/4000/6300

- 故障脱扣信号

通过上位机可获得断路器由于线路或设备过载、短路或接地保护跳闸状态信息。

- Fault-trip signal

You can achieve the information through the up-lever device that the circuit breaker is tripping operation because of over loading short circuit or earth protection of the connection and devices.

型号 Type	配用断路器 Fitting breaker
FGT/W216	CW2-1600
FGT/W220	CW2-2000C/2000/2500/4000/6300

- 机械选择附件


● 两台断路器的钢缆联锁或两台叠装断路器的联杆联锁

(两台断路器联杆联锁的型式及底板开孔尺寸参见三台断路器的型式及开孔尺寸)

- Choice of mechanical accessories

● Two sets of circuit breakers interlocked with steel cable or stacked and interlocked with connecting rods

(the style of interlock between two sets of circuit breakers with connecting rods and aperture dimensions of their bases see the counterpart of three sets of circuit breakers)

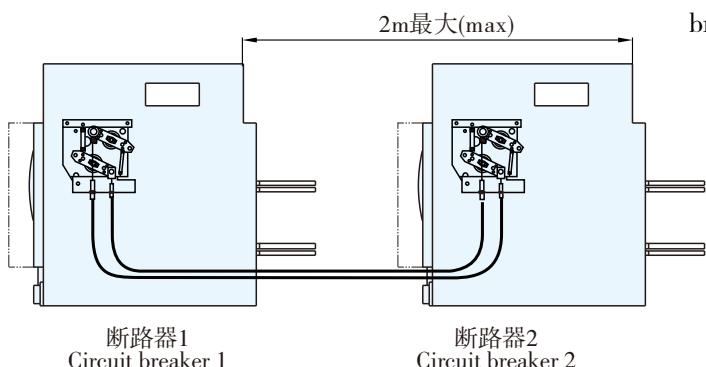

电路图 Wiring diagram	可能的运行方式 Possible operation pattern
1QF 0	1QF 2QF 0 0
0 1	0 1
1 0	1 0

注：钢缆联锁的钢缆长度常规为2.5m，也可提供1.5m钢缆，但用户订货时需注明。

Note: Normally 2.5m steel cable of interlock is provided, either 1.5m is but an indication is needed when marking order.




附 件 ACCESSORIES

- 三台叠装断路器的联杆联锁或三台断路器的钢缆联锁

Three sets of circuit breakers stacked and interlocked with connecting rods or three sets of circuit breakers interlocked with steel cable


- CW2-2000C~6300抽屉式联杆联锁

Stacked and interlocked of draw-out breaker

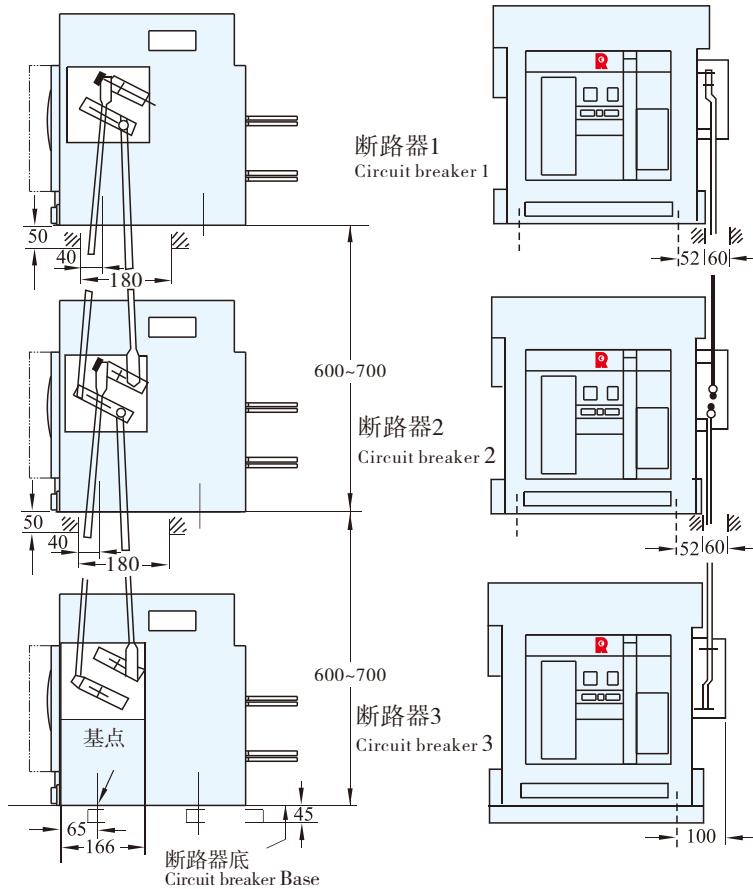


电路图
Wiring diagram
可能的运行方式
Possible operation pattern


方式一：三个电源只能合一台断路器
Pattern one: threesets of power supply can only close one sets of circuit breaker

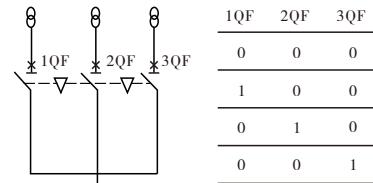

方式二：二个常用电源+一个备用电源
Pattern two: two sets of common power supply plus one sets of standly power supply

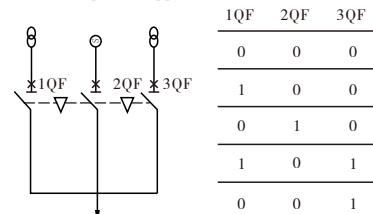


方式三：二个电源一个分段
Pattern three: two sets of power supply plus a piece of coupling busbar

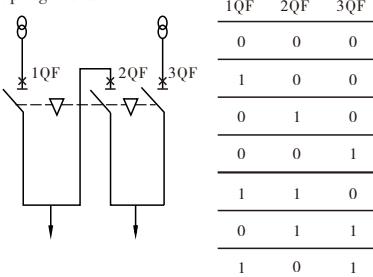


- CW2-2000C~6300固定式联杆联锁（上下安装板间距参考抽屉式）

Fixed stacked and interlocked (distance from up to down, please seeing draw-out)

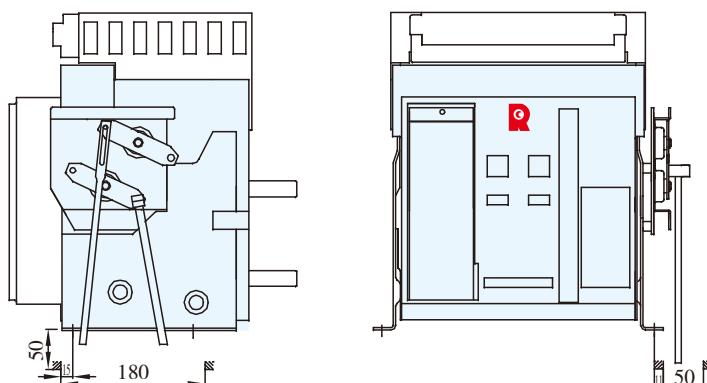




- 两台CW2-1600抽屉式联杆联锁（上下安装板间距参考CW2-2000C~6300抽屉式）
Draw-out breaker of two CW2-1600 stacked and interlocked(distance from up to down,please seeing draw-out of CW2-2000C~6300)

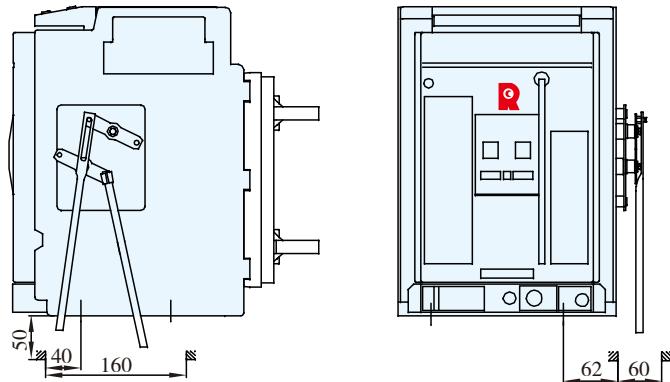

- 两台CW2-1600固定式联杆联锁（上下安装板间距参考CW2-2000C~6300抽屉式）
Fixed breaker of two CW2-1600 stacked and interlocked(distance from up to down,please seeing draw-out of CW2-2000C~6300)

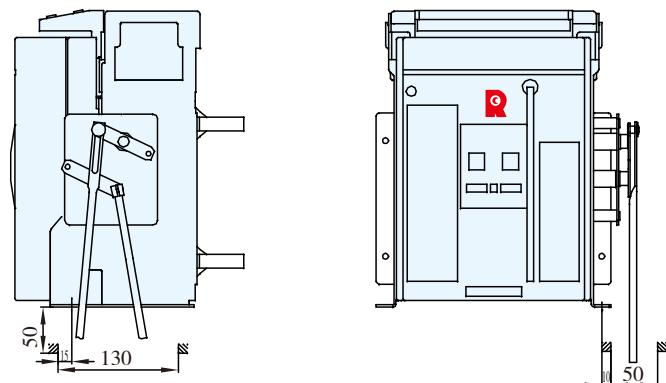

● 钢缆联锁 Stell cable interlocked


三台断路器钢缆联锁的型式，参见两台断路器的型式，间距最大2m。

The style of interlock of three circuit breakers see the style of interlock between two sets of circuit breakers.

The maximal distance of two circuit breakers is 2m.

电路图 Wiring dragram	可能的运行方式 Possible operation pattern
-----------------------	---------------------------------------

方式三：二个电源一个分段
Pattern three: Two sets of power supply plus a piece of coupling busbar

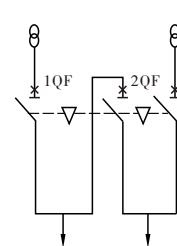

1QF	2QF	3QF
0	0	0
1	0	0
0	1	0
0	0	1
1	1	0
0	1	1
1	0	1



附 件 ACCESSORIES

● 特性 Characteristics

型号 Type	联锁型式 Configuration	配用断路器 Fitting breaker
FLS/WG2	2台钢缆联锁 2 sets of circuit breakers steel lock interlock	CW2-1600/2000C/2000/2500/4000/6300
FLS/WL2	2台联杆联锁 2 sets of circuit breakers link rod interlock	
FLS/WG3	3台钢缆联锁 3 sets of circuit breakers steel lock interlock	
FLS/WL31	3台联杆联锁方式一 3 sets of circuit breakers link rod interlock type 1	CW2-2000C/2000/2500/4000/6300
FLS/WL32	3台联杆联锁方式二 3 sets of circuit breakers link rod interlock type 2	
FLS/WL33	3台联杆联锁方式三 3 sets of circuit breakers link rod interlock type 3	




“分闸”锁定装置
“Break” lock mechanism

- “分闸” 锁定装置
- “分闸” 锁定装置可将断路器的分闸按钮锁定在分闸位置上,此时,断路器将不能闭合。
- 用户选装后, 工厂提供锁和钥匙。
- 一台断路器配一把锁和一把钥匙;
- 二台断路器配二把相同的锁和一把钥匙;
- 三台断路器配三把相同的锁和二把钥匙。

- “Break” lock mechanism
- “Break” lock mechanism can lock the “OFF” button of the circuit breaker on the opening position. As a result, the circuit breaker can not be switched on.
- After this lock mechanism was chosen by users, the manufacturer would provide lock and key.
- One set of circuit breaker is outfitted with one lock and one key.
- Two sets of circuit breakers are outfitted with two same locks and one key.
- Three sets of circuit breakers are outfitted with three same locks and two keys.

型号 Type	型式 Configuration	配用断路器 Fitting breaker
FFS/W11	1锁1钥匙 One lock and one key	
FFS/W21	2锁1钥匙 Two lock and one key	CW2-1600/2000C/2000/2500/4000/6300
FFS/W32	3锁2钥匙 Three lock and two key	

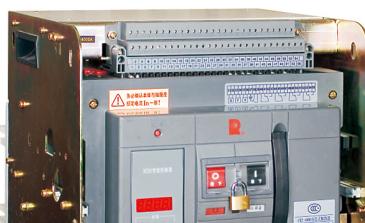

- 按钮锁定装置
- 加装按钮锁定装置可防止误操作合闸或分闸按钮。
- 挂锁用户自备, 锁杆直径Φ4 ~ Φ8mm。
- “Button” locking device
- When installed “Button” locking device, it can prevented somebody from operating button of switching-on or switching off by mistake.
- Padlock should be provided by users themselves, and its rod should be Φ4 ~ Φ8mm.



附 件 ACCESSORIES

型号 Type	配用断路器 Fitting breaker
FAN/216	CW2-1600
FAN/220	CW2-2000C/2000/2500/4000/6300



- 计数器
- 计数器累计断路器机械操作的次数，用户一目了然。
- Counter
- The counter can count mechanical operation times accumulatively, which makes users be clear at a glance.

型号 Type	配用断路器 Fitting breaker
FJS/216	CW2-1600
FJS/220	CW2-2000C/2000/2500/4000/6300



- 相间隔板
- 相间隔板加强母排间绝缘，为断路器选择件，用户需要时可配置。
- Separator plate between phases
- Separator plates between phases which strengthen insulation between bus-bars are optional and will be equipped as needed by users.

型号 Type	配用断路器 Fitting breaker	安装方式 The method of installation	数量（块） amount
FXG/W2163C	CW2-1600三极 three poles	抽屉式 withdrawable	2
FXG/W1203C	CW2-2000C/2000/2500/4000 三极three poles		
FXG/W2633C	CW2-6300 三极three poles		3
FXG/W2164C	CW2-1600 四极four poles		
FXG/W1204C	CW2-2000C/2000/2500 四极four poles		
FXG/W2404C	CW2-4000 四极four poles		3
FXG/W2634C	CW2-6300 四极four poles		
FXG/W2163G	CW2-1600 三极three poles	固定式 fixed	2
FXG/W1203G	CW2-2000C/2000/2500 三极three poles		
FXG/W2403G	CW2-4000/6300 三极three poles		3
FXG/W2164G	CW2-1600 四极four poles		
FXG/W1204G	CW2-2000C/2000/2500 四极four poles		
FXG/W2404G	CW2-4000/6300 四极four poles		



断路器功耗及降容系数 POWER CONSUMPTION AND CAPACITY LOWERING COEFFICIENT

- 功耗(环境温度+40℃)

功耗是在断路器通以壳架电流Inm情况下测量的总的损耗。

- Power consumption (Environment temperature +40°C)

Power consumption is the overall consumption measured under with the circuit breaker is electrified with current below frame current.

型 号 Type	三极/四极功 耗 (W) three poles/four poles	
	固 定 式 Fixed type	抽 屉 式 Draw-out type
CW2-1600	220	337
CW2-2000C/2000	311	461
CW2-2500	388	576
CW2-4000	779	1145
CW2-6300	1050	1200

- 降容系数

下表表示断路器在所处周围工作环境温度且满足GB/T14048.2中约定发热条件下持续承载电流的能力。

- Capacity lower coefficient

The following table shows continual current-loading capacity of circuit breakers at different ambient environment temperature and under the conditions of the satisfaction of conventional heating in GB/T14048.2

型 号 Type	额定电流 (A) Rated current	周 围 工 作 环 境 温 度 ℃ Ambient environment temperature						
		+40	+45	+50	+55	+60	+65	+70
CW2-1600	200	1	1	1	1	1	1	1
	400	1	1	1	1	1	1	1
	630	1	1	1	1	1	1	1
	800	1	1	1	1	1	1	1
	1000	1	1	1	1	1	1	1
	1250	1	1	1	1	1	1	1
	1600	1	1	1	1	0.97	0.92	0.87
CW2-2000C CW2-2000	630	1	1	1	1	1	1	1
	800	1	1	1	1	1	1	1
	1000	1	1	1	1	1	1	1
	1250	1	1	1	1	1	1	1
	1600	1	1	1	1	1	1	0.99
	2000	1	1	1	1	1	1	0.95
	1250	1	1	1	1	1	1	1
CW2-2500	1600	1	1	1	1	1	1	1
	2000	1	1	1	1	1	1	1
	2500	1	1	1	1	0.96	0.91	0.86



断路器功耗及降容系数 POWER CONSUMPTION AND CAPACITY LOWERING COEFFICIENT

型号 Type	额定电流 (A) Rated current	周围工作环境温度 °C Ambient environment temperature					
		+40	+45	+50	+55	+60	+65
CW2-4000	2000	1	1	1	1	1	1
	2500	1	1	1	1	1	1
	2900	1	1	1	1	1	0.96
	3200	1	1	1	1	1	1
	3600	1	1	1	1	0.97	0.92
	4000	1	1	1	1	0.91	0.86
CW2-6300	4000	1	1	1	1	1	1
	5000	1	1	1	1	1	0.96
	6300	1	0.98	0.94	0.90	0.85	0.81

注:

- 1、表中参数仅作为一般选型指导，鉴于开关柜形式和使用条件的多样性，实际应用中不同的解决方案必须进行试验验证。
- 2、表中参数是基于推荐接线铜排规格参考表，断路器主回路接线端子温度为120℃。

1、Parameter listed in the table is only for ordinary select guide, since switchgears have various forms and use condition, different solutions in real applications must be tested before.

2、Parameter listed in table is based on the recommended wiring copper bus bar, and wiring terminal temperature of breaker's main circuit is 120°C.



高海拔降容 CAPACITY-REDUCING FOR HIGH-ELEVATION

海拔超过适用工作环境的2000m，断路器电气性能可参照下表修正：

If elevation exceeds work environment 2000m, electric property of circuit breaker can correct according to following table:

海拔(m) Altitude		2000	3000	4000	4500	5000
工频耐压(V) Power frequency withstand voltage		3500	3500	3000	2500	2200
最大额定工作电压 (V) MAX rated operational voltage		690	690	690	690	560
工作电流修正系数 Correction factor of operational current	Inm=1600A	1	0.98	0.93	0.90	0.87
	Inm=2000A	1	1	1	1	0.97
	Inm=2500A	1	1	1	1	0.97
	Inm=4000A	1	0.93	0.88	0.85	0.82
	Inm=6300A	1	0.98	0.93	0.90	0.87



断路器主回路接线铜排规格参考表

REFERENCE TABLE OF MAIN CIRCUIT WIRING
COPPER BAR FOR CIRCUIT BREAKERS

壳架等级额定电流Inm(A) Rated frame current	额定电流In(A) Rated current	铜排规格 Specifications of copper bars	
		根数 Number	尺寸 (mm × mm) Size
1600	200	1	20×5
	400	1	50×5
	630	2	40×5
	800	2	50×5
	1000	3	40×5
	1250	4	40×5
	1600	2	50×10
2000	630	2	50×5
	800	2	60×5
	1000	2	60×5
	1250	3	60×5
	1600	2	60×10
	2000	3	60×10
2500	1250	3	60×5
	1600	2	60×10
	2000	3	60×10
	2500	4	60×10
4000	2000	3	100×5
	2500	4	100×5
	2900	3	100×10
	3200	4	100×10
	3600	4	100×10
	4000	4	100×10
6300	4000	4	100×10
	5000	6	100×10
	6300	6	100×10

表中规格为断路器处于周围环境温度最高40℃，敞开安装且满足GB/T14048.2中约定发热条件。

The specifications of copper bars in the above table are introduced under which the circuit breakers by open installation are at maximum ambient environment temperature of 40℃ and satisfy conventional heating in GB/T14048.2.




主回路端子至外接铜排支架最大允许距离参考表
MAX.DISTANCE REFERENCE TABLE OF BREAKER'S TERMINALS TO EXTERNAL COPPER BAR HOLDER


主电路端子至母线支架的最大允许距离 Max. Distance Of Main Circuit Terminals To Copper Bar Holder							
短路电流 (kA) Short Circuit Current	42	55	65	85	100	120	135
L (mm)	CW2-1600	200	100	—	—	—	—
	CW2-2000C/2000 CW2-2500	300	200	150	100	—	—
	CW2-4000	350	250	150	100	—	—
	CW2-6300	350	300	250	150	150	150

● CW2-1600

水平接线
Horizontally Wire

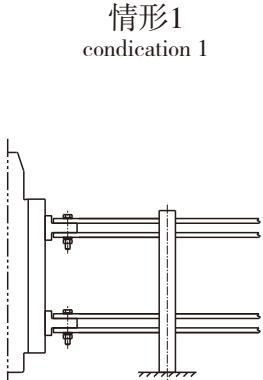


情形1
condication 1




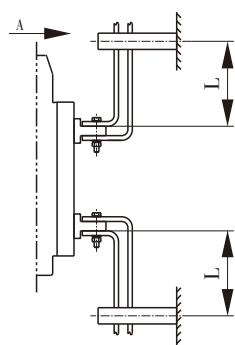


垂直接线
Vertically Wire

情形1
condication 1

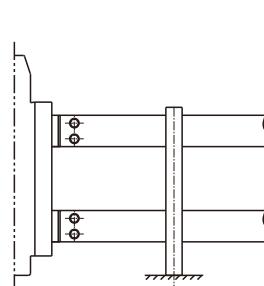

情形2
condication 2

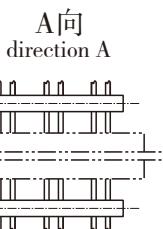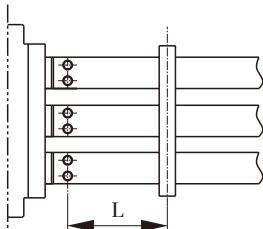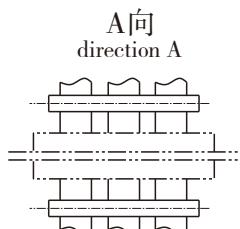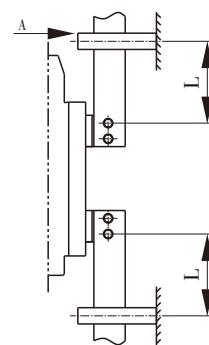




主回路端子至外接铜排支架最大允许距离参考表

MAX DISTANCE REFERENCE TABLE OF BREAKER'S TERMINALS TO EXTERNAL COPPER BAR HOLDER


- CW2-2000C ~ 6300

水平接线
Horizontally Wire

情形1
condication 1

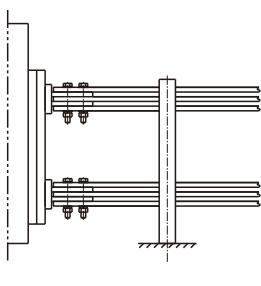


情形2
condication 2


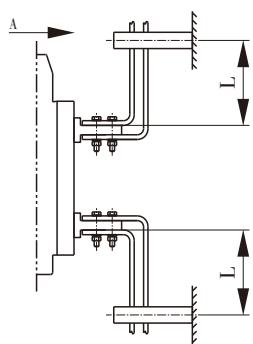


垂直接线
Vertically Wire



情形1
condication 1

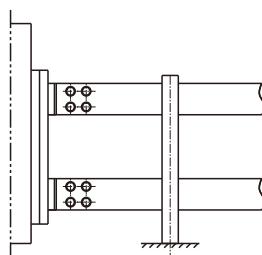


情形2
condication 2

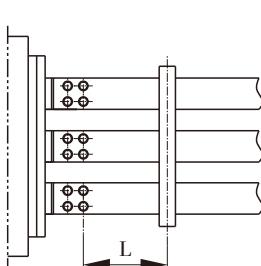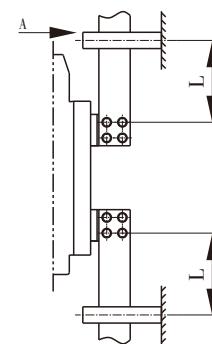

A向
direction A

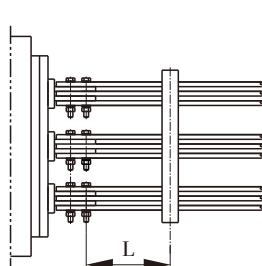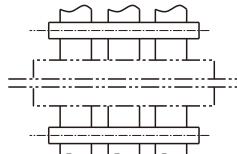

A向
direction A

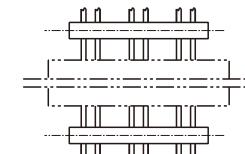



自动电源转换系统可以实现两路AC400V电源之间或两进线一母联或三电源AC400V电源之间的转换，确保用户可靠供电。自动电源转换系统由自动转换控制器和转接器及控制电缆（厂方已提供）组成，同时可与机械联锁配合使用。当实现手动并联转换时，则不应机械联锁。自动转换控制器安装于开关柜门板上，转接器安装于开关柜安装板上，控制器至转接器/转接器至断路器电缆长度标准配置为：两路电源转换1.8 m /1.8 m , 两进线一母联2 m /1.8m（超过标准配置电缆长度用户订货时应注明）。

Automatic power supply switch system guarantees reliable power supply for users by providing AC400V two lines or two incoming one bus couple of power supply or three supply alternatively. It consists automatic transfer controller, switching unit and cables (already prepared by the manufacturer). The system may be used together with the mechanical interlock. But mechanical interlock can't be used when manual in parallel transfer is used. the switching unit is mounted on the mounting plate of switchboard while the controller is mounted on the panel door of the switchboard. the cable standard length of controller to switching unit and switching unit to breaker is 1.8m/1.8m for tow supply transfer or 2m/1.8m for two incoming one bus couple (user should make special order when they require for the length more than standard).

● FZZ两路电源转换 FZZ two supply transfer


▲功能汇总 function summary

自动转换控制器型号 Automatic transfer controller type	电子型R、S、F Electronic	智能型ZR、ZS、ZF intelligent 智能可通信ZTR、ZTS、ZTF intelligent communicative																					
自动转换控制器示意 Automatic transfer controller indication																							
转接器示意 Adapter indication																							
监测 Monitor	对常用电源各相电压、备用（或发电）电源A相电压进行检测，若被检测相发生过电压、欠电压、失压则动作 Check the phase voltage of normal power supply and standby (or generator) power supply																						
自动转换 Automatic transfer	R、ZR、ZTR: 常用备用电源间的自投自复 Automatic charge and automatic recovery between normal power supply and standby power supply S、ZS、ZTS: 常用备用电源间的自投不自复（互为备用） Automatic charge and not automatic recovery between normal power supply and standby power supply (alterate each other) F、ZF、ZTF: 常用发电电源间的自投自复 Automatic charge and automatic recovery between normal power supply and generator																						
强制转换 Forced transfer	强制常用、强制备用、强制断开 Forced to normal, forced to standby, forced to disconnected																						
复位操作 Reset operation	按钮复位 Reset button																						
试验功能 Test function	由强制转换功能实现 Implemented by forced transfer function																						
手动转换 Manual transfer	手动常用、手动备用、手动断开 Manual to normal, manual to standby, manual disconnect																						
发电控制 Generating control	F、ZF、ZTF有此功能 Only for F、ZF、ZTF type																						
负荷卸载 Load unload	F有此功能 Only for F type																						
显示方式 Display mode	LED指示: 常备用电源状态, 常备用断路器合、分及脱扣状态, 操作模式 LED indicator: condition of normal/standby power supply, close, open or tripped condition and operationg mode of normal/standby breaker	(1) LCD指示: 常备用电源状态, 常备用断路器合、分状态及脱扣状态, 参数设定, 动作记录 LCD indication: condition of normal/standby power supply, close, open and tripped condition parameter setting, history of normal/standby breaker (2) LED指示: 常备用断路器合、分状态, 操作模式 LED indication: close, open condition, operating mode of normal/standby breaker																					
设置方式 Setting mode	旋钮操作, 可进行工作模式、延时时间等的设置 Set the working mode, delay time and others by knob	按键操作, 全中文菜单引导, 可进行工作模式、欠压动作值、延时时间、通信参数等的设置 All chinese menu guide, set the working mode, undervoltage operation value, delay time communication parameter and others by keyboard																					
参数设定 Parameter setting	欠压: 75% Us 过压: 115%Us 失压: 30%Us Undervoltage: 75% Us Overvoltage: 115%Us Voltage loss: 30%Us	欠压: (75%~85%) Us 用户可调 过压: 115%Us 失压: 30%Us Undervoltage: (75%~85%) User adjustable Overvoltage: 115%Us Voltage loss: 30%Us																					
	<table border="1"> <thead> <tr> <th>控制器型号 Controller type</th> <th>R、ZR、ZTR、S、ZS、ZTS</th> <th>F、ZF、ZTF</th> </tr> </thead> <tbody> <tr> <td>转换断开延时时间1 Transfer disconnection</td> <td>0.5~64</td> <td>0.5~64</td> </tr> <tr> <td>转换接通延时时间2 Transfer closing</td> <td>0.5</td> <td>0.5~64</td> </tr> <tr> <td>返回断开延时时间3 Return disconnection</td> <td>0.5~64</td> <td>0.5~240</td> </tr> <tr> <td>返回接通延时时间4 Return closing</td> <td>0.5</td> <td>0.5~64</td> </tr> <tr> <td>发电启动延时时间5 Generating indication</td> <td></td> <td>1~180</td> </tr> <tr> <td>发电停机指令延时时间6 Generating stop indication</td> <td></td> <td>32~600</td> </tr> </tbody> </table>	控制器型号 Controller type	R、ZR、ZTR、S、ZS、ZTS	F、ZF、ZTF	转换断开延时时间1 Transfer disconnection	0.5~64	0.5~64	转换接通延时时间2 Transfer closing	0.5	0.5~64	返回断开延时时间3 Return disconnection	0.5~64	0.5~240	返回接通延时时间4 Return closing	0.5	0.5~64	发电启动延时时间5 Generating indication		1~180	发电停机指令延时时间6 Generating stop indication		32~600	
控制器型号 Controller type	R、ZR、ZTR、S、ZS、ZTS	F、ZF、ZTF																					
转换断开延时时间1 Transfer disconnection	0.5~64	0.5~64																					
转换接通延时时间2 Transfer closing	0.5	0.5~64																					
返回断开延时时间3 Return disconnection	0.5~64	0.5~240																					
返回接通延时时间4 Return closing	0.5	0.5~64																					
发电启动延时时间5 Generating indication		1~180																					
发电停机指令延时时间6 Generating stop indication		32~600																					
通信功能 Communication		实现遥调、遥测、遥控、遥信。RS485通信接口，Modbus-RTU协议。 Tele-control, tele-communication, tele-adjustment, tele-detection, RS485 communication interface., Modbus-RTU protocol																					




自动电源转换系统 AUTOMATIC POWER SUPPLY SWITCH SYSTEM

▲R、ZR、ZTR型--常用-备用间的自投自复
Automatic change and automatic recovery between normal and standby supply

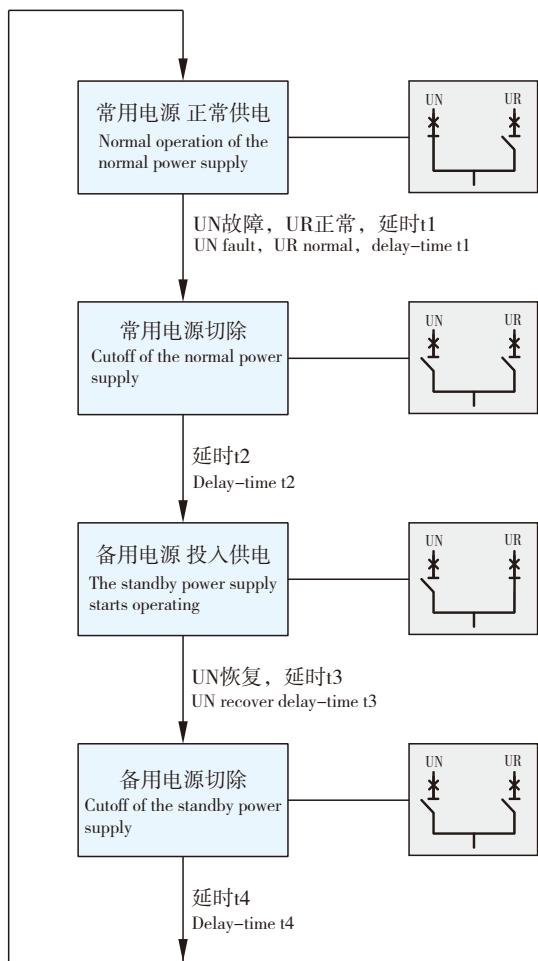


▲S、ZS、ZTS型--常用-备用间的自投不自复
Automatic change and not automatic recover between normal and standby supply

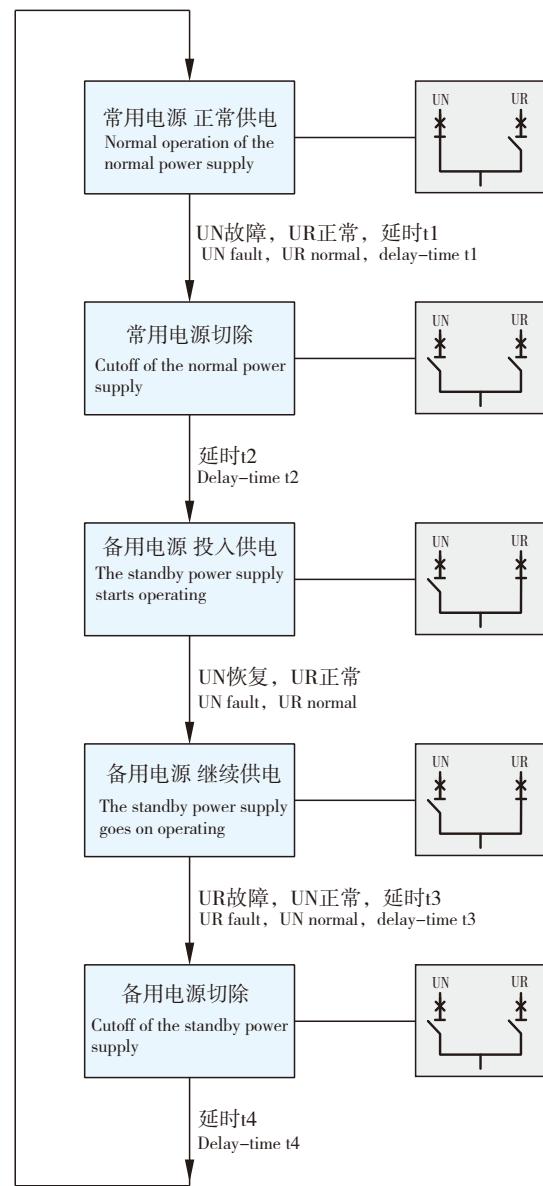



▲F、ZF、ZTF型--常用-发电电源间的自投自复

Automatic change and automatic recovery between normal and generator supply

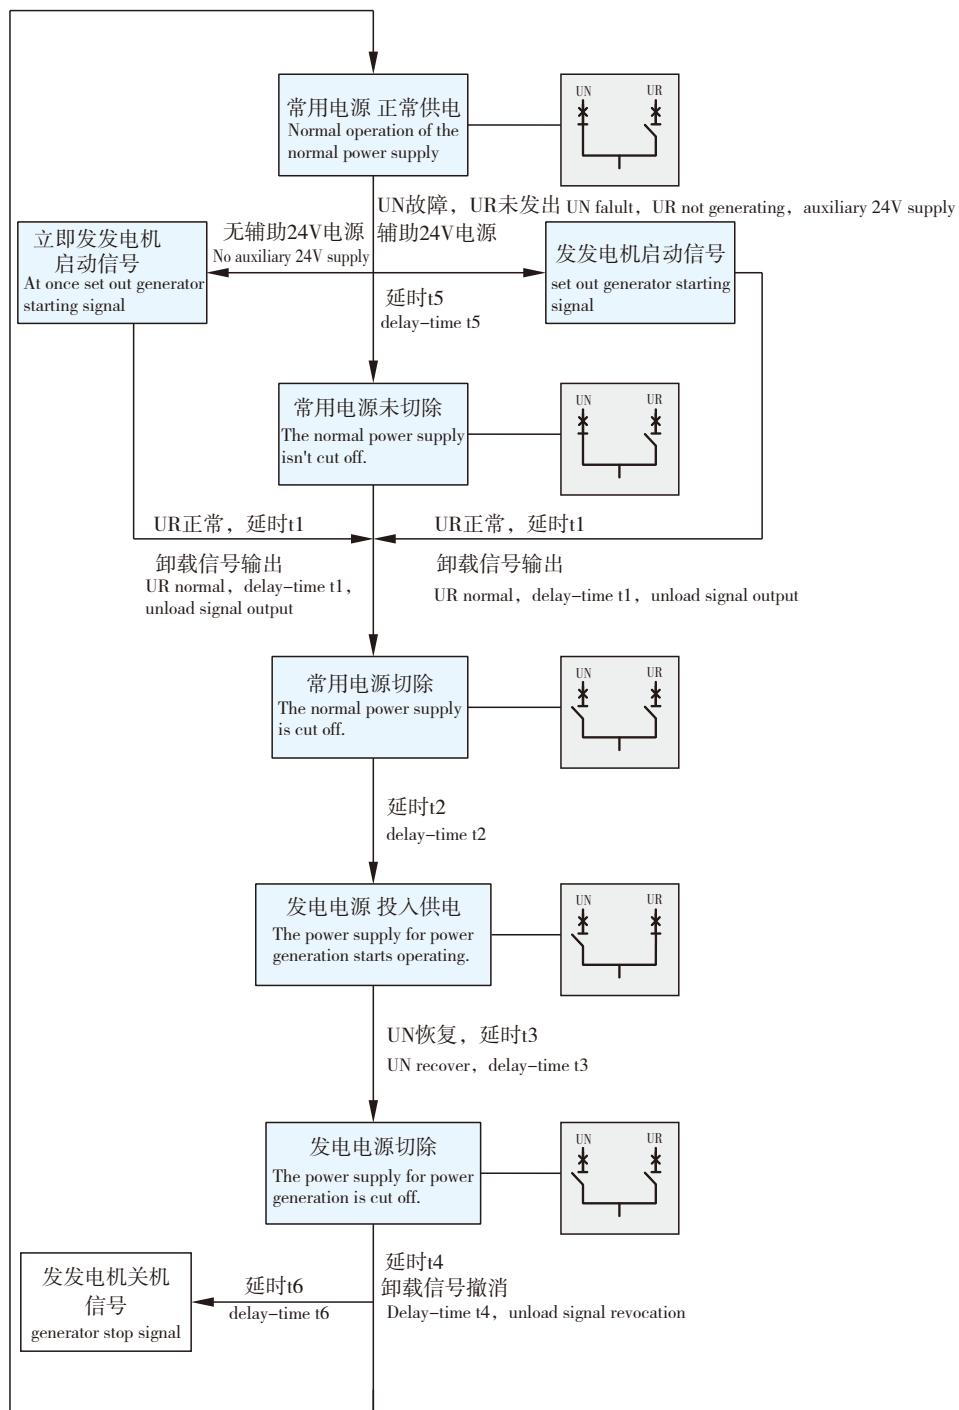

注：常用-发电型必须为控制器提供一个稳定、不间断的直流电源，直流电源电压对F型控制器为DC12V，对ZF、ZTF型控制器为DC24V，其容量不小于6W。当此直流电源缺失时，系统具有R型（自投自复型）的全部功能。

For the switch system used for normal power supply to power generation supply system, the controller should be supplied with a reliable and consecutive power supply of D.C. 12V (F type) or D.C.24V (ZF、ZTF type) and power capacity no less than 6W. If the D.C. supply is cut off, the switch system will have the function of automatic switch and restoration (type R) .



自动电源转换系统 AUTOMATIC POWER SUPPLY SWITCH SYSTEM

● FLZ两进线一母联电源转换及三电源转换 FLZ two incoming line one bus couple supply transfer and three supplys transfer


▲功能汇总 Function summary

自动电源转换系统型式 Automatic power supply switch system type	两进线一母联电源转换 Two incoming line one bus couple supply transfer		三电源转换 Three supplys transfer																																																							
主回路接线 Main circuit tie line																																																										
自动转换控制器型号 Automatic transfer controller type	智能型WTT3 Intelligent	智能型带并联转换WTB3 Intelligent with parallel	智能型WTT5 Intelligent																																																							
自动转换控制器示意 Automatic transfer controller indication																																																										
转接器示意 Adapter indication																																																										
监测 Monitor	对常用 (S1)、备用 (S2) 电源各相电压进行检测，若被检测相发生过电压、欠电压、失压则动作；具有欠电压、失压则动作 Check the each phase voltage of normal, standby power supply.if there is overvoltage、undervoltage、voltageloss in the checker phase, transfer will operation.this type can check frequency,voltage difference,frequency difference and phase difference of mormal standby power supply.	对常用 (S1)、备用 (S2) 电源各相电压进行检测，若被检测相发生过电压、欠电压、失压则动作；具有常、备用电源频率、电压差、频率差和相位差检测 Check the each phase voltage of normal,standby power supply.if there is overvoltage、undervoltage、voltageloss in the checker phase, transfer will operation.this type can check frequency,voltage difference,frequency difference and phase difference of mormal standby power supply.	对S1、S2、S3三路电源各相电压进行检测，若被检测相发生过电压、欠电压、失压则动作。 Check the each phase voltage of S1, S2, S3 three supplys, if there is overvoltage, undervoltage, voltage loss in the checker phase, transfer will operation																																																							
自动转换 Automatic transfer	可设定自投自复或自投不自复 Automatic charge and automatic recovery or automatic charge and not automatic recovery																																																									
强制转换 Forced transfer	强制常用、强制备用、强制断开 Force normal、force standby、force open																																																									
手动并联转换 Manual parallel transfer	—	√	—																																																							
复位操作 Reset operation	按钮复位 Reset button																																																									
试验功能 Test function	由强制转换功能实现 Implemented by forced transfer function																																																									
手动转换 Manual transfer	由强制转换功能实现 Implemented by forced transfer function																																																									
显示方式 Display mode	(1) LCD指示：常备用电源状态，常备用断路器合、分状态及脱扣状态，参数设定，动作记录 LCD indication: condition of normal/standby power supply, close, open and tripped condition, parameter setting history of normal/standby breaker (2) LED指示：常备用电源状态，常备用断路器合、分及脱扣状态 LED indicator: condition of normal/standby power supply, close open or tripped condition and operating mode of normal/standby breaker	(1) LCD指示：常备用电源状态，常备用断路器合、分状态及脱扣状态，参数设定，动作记录 LCD indication: condition of normal/standby power supply, close, open and tripped condition, parameter setting history of normal/standby breaker (2) LED指示：常备用电源状态，常备用电源电压差、频率差、相位差状态，常备用断路器合、分及脱扣状态 LED indication: close, open condition, operating mode of normal/standby breaker. condition: voltage difference, frequencydifference, phase difference of normal/standby power supply	1) LCD指示：三路电源状态，三路电源断路器合、分状态及脱扣状态，参数设定，动作记录 LCD indication: condition of three supplys, close, open and tripped condition, parameter setting history of three breaker. 2) LED指示：三路电源状态，三路断路器合、分及脱扣状态 LED indication: condition of three supplys, close, open and tripped condicition.																																																							
设置方式 Setting mode	按键操作、全中文菜单引导，可进行工作模式、欠压动作值、延时时间、通信参数等的设置 All chinese menu guide, set the working mode, undervoltage operation value, delay time communication parameter and others by keyboard																																																									
参数设定 Parameter setting	欠压：(70%~90%) Us用户可调； 过压：(105%~120%) Us用户可调； 失压：30%Us，步长：5% under voltage: (70%~90%) Us user adjustable; over voltage: (105%~120%) Us user adjustable; voltage loss: 30%Us; step: 5%	<table border="1"> <tr> <td rowspan="4">延时 时间 (s) Delay time</td> <td>电源断开延时时间1 Disconnection of power supply</td> <td>0.1~100</td> <td rowspan="4">步长0.1s Time step (≤10s), 1s (>10s)</td> <td>并联 转换 条件 Parallel transfer condition</td> <td>并联转换电压差△U (V) Voltage difference</td> <td>(0.02~0.12)Us, 步长: 1V</td> </tr> <tr> <td>母联断路器接通延时时间2 Closing of bus couple breaker</td> <td>0.1~100</td> <td>并联转换频率差△f (Hz) Frequency difference</td> <td>0.1~1, 步长: 0.1Hz</td> </tr> <tr> <td>母联断路器断开延时时间3 Disconnection of bus couple breaker</td> <td>0.1~100</td> <td>并联转换相位差△φ (°) Phase difference</td> <td>5~20, 步长: 1</td> </tr> <tr> <td>电源闭合延时时间4 Closing of power supply</td> <td>0.1~100</td> <td>电源断开延时时间t1 Disconnection of power supply</td> <td>0.1~100</td> </tr> </table> <table border="1"> <tr> <td rowspan="4">延时 时间 (s) Delay time</td> <td>母联断路器接通延时时间2 Closing of bus couple breaker</td> <td>0.1~100</td> <td rowspan="4">步长0.1s Time step (≤10s), 1s (>10s)</td> <td>并联 转换 条件 Parallel transfer condition</td> <td>S1电源断开延时时间t1 S1 Disconnection of power supply</td> <td>0.1~100</td> </tr> <tr> <td>母联断路器断开延时时间3 Disconnection of bus couple breaker</td> <td>0.1~100</td> <td>S1电源接通延时时间t2 S1 Closing of bus couple breaker</td> <td>0.1~100</td> </tr> <tr> <td>母联断路器接通延时时间2 Closing of bus couple breaker</td> <td>0.1~100</td> <td>S2电源断开延时时间t3 S2 Disconnection of bus couple breaker</td> <td>0.1~100</td> </tr> <tr> <td>电源闭合延时时间4 Closing of power supply</td> <td>0.1~100</td> <td>S2电源接通延时时间t4 S2 Closing of power supply</td> <td>0.1~100</td> </tr> </table> <table border="1"> <tr> <td rowspan="2">延时 时间 (s) Delay time</td> <td>电源断开延时时间t1 Disconnection of power supply</td> <td>0.1~100</td> <td rowspan="2">步长0.1s Time step (≤10s), 1s (>10s)</td> <td>并联 转换 条件 Parallel transfer condition</td> <td>S3电源断开延时时间t5 S3 Disconnection of bus couple breaker</td> <td>0.1~100</td> </tr> <tr> <td>母联断路器接通延时时间2 Closing of bus couple breaker</td> <td>0.1~100</td> <td>S3电源接通延时时间t6 S3 Closing of bus couple breaker</td> <td>0.1~100</td> </tr> </table>	延时 时间 (s) Delay time	电源断开延时时间1 Disconnection of power supply	0.1~100	步长0.1s Time step (≤10s), 1s (>10s)	并联 转换 条件 Parallel transfer condition	并联转换电压差△U (V) Voltage difference	(0.02~0.12)Us, 步长: 1V	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100	并联转换频率差△f (Hz) Frequency difference	0.1~1, 步长: 0.1Hz	母联断路器断开延时时间3 Disconnection of bus couple breaker	0.1~100	并联转换相位差△φ (°) Phase difference	5~20, 步长: 1	电源闭合延时时间4 Closing of power supply	0.1~100	电源断开延时时间t1 Disconnection of power supply	0.1~100	延时 时间 (s) Delay time	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100	步长0.1s Time step (≤10s), 1s (>10s)	并联 转换 条件 Parallel transfer condition	S1电源断开延时时间t1 S1 Disconnection of power supply	0.1~100	母联断路器断开延时时间3 Disconnection of bus couple breaker	0.1~100	S1电源接通延时时间t2 S1 Closing of bus couple breaker	0.1~100	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100	S2电源断开延时时间t3 S2 Disconnection of bus couple breaker	0.1~100	电源闭合延时时间4 Closing of power supply	0.1~100	S2电源接通延时时间t4 S2 Closing of power supply	0.1~100	延时 时间 (s) Delay time	电源断开延时时间t1 Disconnection of power supply	0.1~100	步长0.1s Time step (≤10s), 1s (>10s)	并联 转换 条件 Parallel transfer condition	S3电源断开延时时间t5 S3 Disconnection of bus couple breaker	0.1~100	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100	S3电源接通延时时间t6 S3 Closing of bus couple breaker	0.1~100	<table border="1"> <tr> <td rowspan="2">延时 时间 (s) Delay time</td> <td>发电启动延时时间7 Starting up time</td> <td>1~180</td> <td rowspan="2">步长0.1s Time step (≤10s), 1s (>10s)</td> </tr> <tr> <td>发电停止延时时间8 Stop time</td> <td>1~180</td> </tr> </table>	延时 时间 (s) Delay time	发电启动延时时间7 Starting up time	1~180	步长0.1s Time step (≤10s), 1s (>10s)	发电停止延时时间8 Stop time	1~180
延时 时间 (s) Delay time	电源断开延时时间1 Disconnection of power supply	0.1~100		步长0.1s Time step (≤10s), 1s (>10s)	并联 转换 条件 Parallel transfer condition		并联转换电压差△U (V) Voltage difference	(0.02~0.12)Us, 步长: 1V																																																		
	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100			并联转换频率差△f (Hz) Frequency difference		0.1~1, 步长: 0.1Hz																																																			
	母联断路器断开延时时间3 Disconnection of bus couple breaker	0.1~100			并联转换相位差△φ (°) Phase difference		5~20, 步长: 1																																																			
	电源闭合延时时间4 Closing of power supply	0.1~100	电源断开延时时间t1 Disconnection of power supply		0.1~100																																																					
延时 时间 (s) Delay time	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100	步长0.1s Time step (≤10s), 1s (>10s)	并联 转换 条件 Parallel transfer condition	S1电源断开延时时间t1 S1 Disconnection of power supply	0.1~100																																																				
	母联断路器断开延时时间3 Disconnection of bus couple breaker	0.1~100		S1电源接通延时时间t2 S1 Closing of bus couple breaker	0.1~100																																																					
	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100		S2电源断开延时时间t3 S2 Disconnection of bus couple breaker	0.1~100																																																					
	电源闭合延时时间4 Closing of power supply	0.1~100		S2电源接通延时时间t4 S2 Closing of power supply	0.1~100																																																					
延时 时间 (s) Delay time	电源断开延时时间t1 Disconnection of power supply	0.1~100	步长0.1s Time step (≤10s), 1s (>10s)	并联 转换 条件 Parallel transfer condition	S3电源断开延时时间t5 S3 Disconnection of bus couple breaker	0.1~100																																																				
	母联断路器接通延时时间2 Closing of bus couple breaker	0.1~100		S3电源接通延时时间t6 S3 Closing of bus couple breaker	0.1~100																																																					
延时 时间 (s) Delay time	发电启动延时时间7 Starting up time	1~180	步长0.1s Time step (≤10s), 1s (>10s)																																																							
	发电停止延时时间8 Stop time	1~180																																																								
通信功能 Communication	实现遥调、遥测、遥控、遥信。RS485 通信接口，Modbus–RTU协议。 Tele-control,tele-communication,tele-adjustment,tele-detection, RS485 communication interface., Modbus–RTU protocol																																																									



▲WTT3、WTB3型--常用-备用间的自投自复

Automatic change and automatic recovery between normal and standby supply

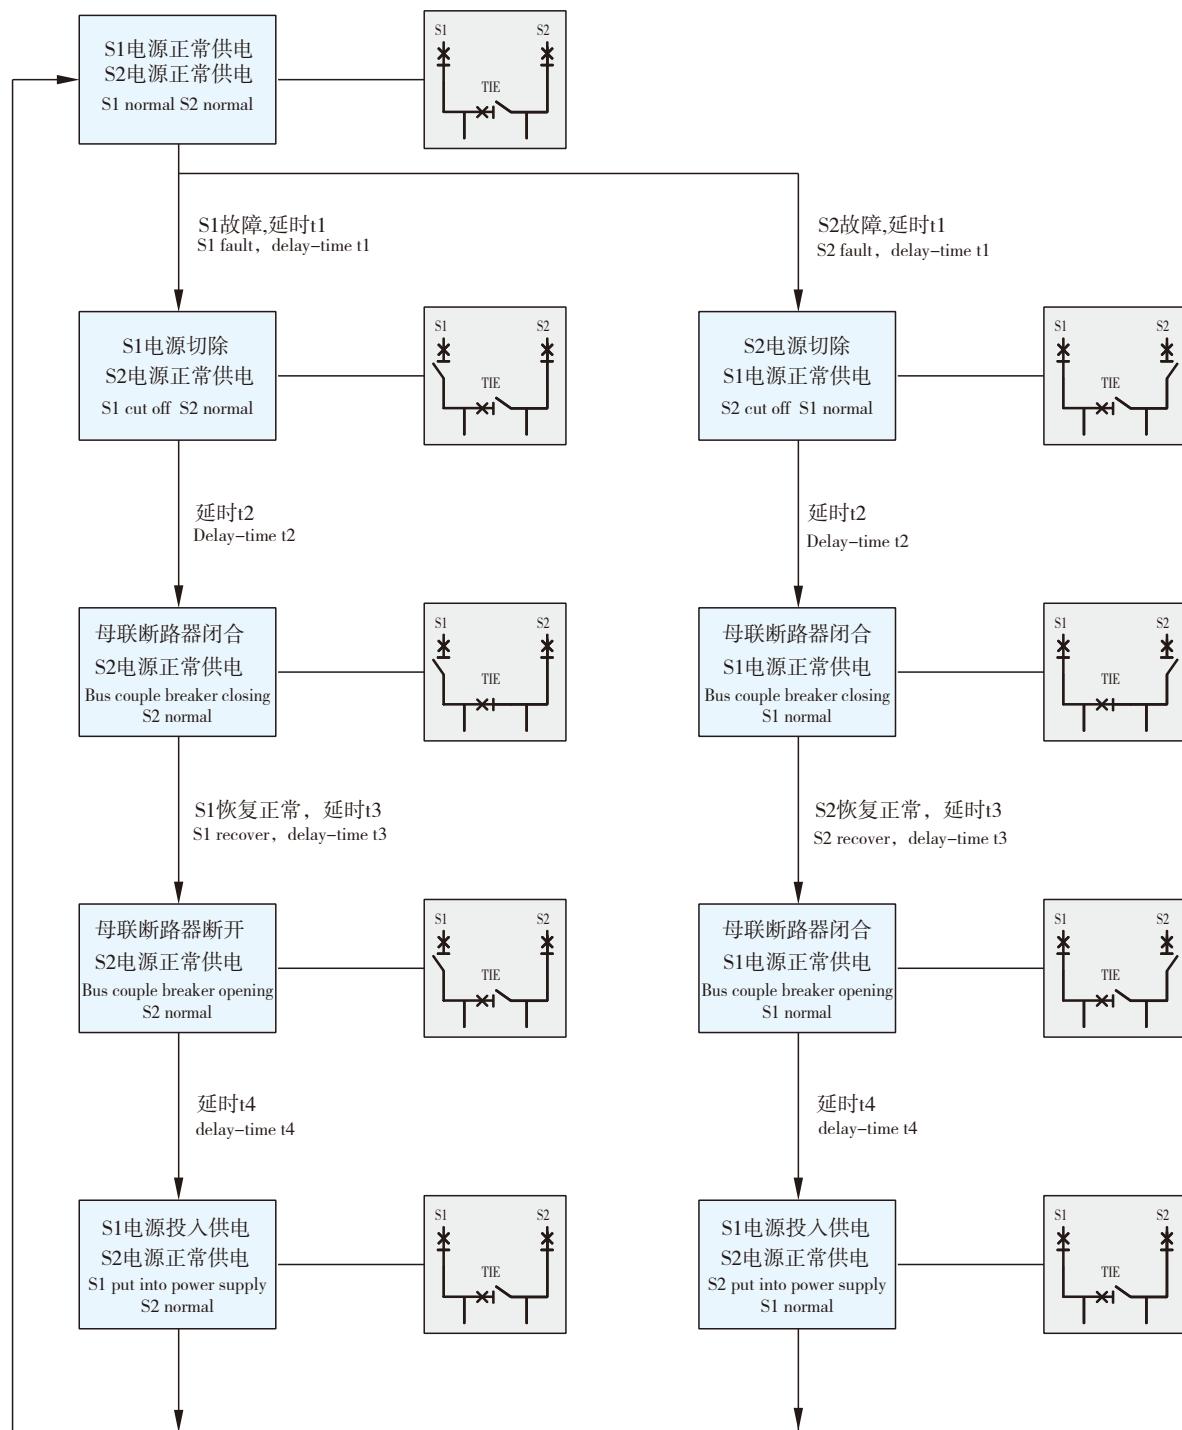


注：TIE为母联断路器

Note: TIE—bus couple breaker.



自动电源转换系统 AUTOMATIC POWER SUPPLY SWITCH SYSTEM

▲WTT3、WTB3型--常用-备用间的自投不自复
Automatic change and not automatic recover between normal and standby supply

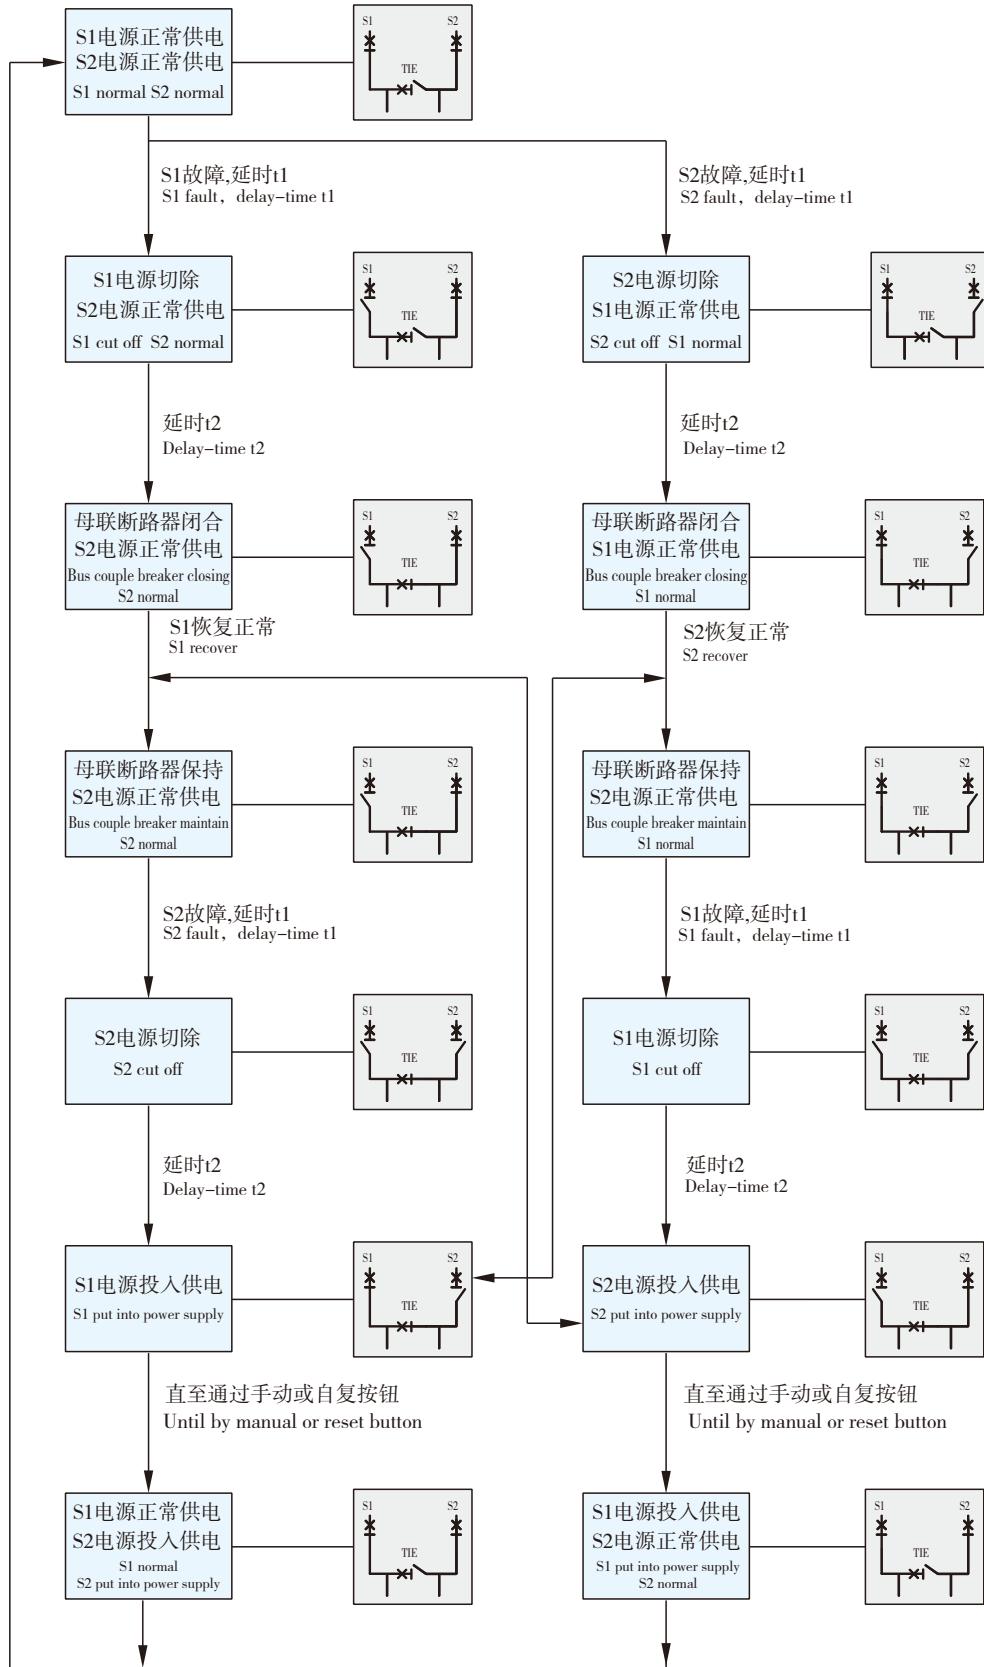

注: TIE为母联断路器

Note: TIE=bus couple breaker.




▲WTB3手动并联转换 WTB3 manual parallel transfer

WTB3控制器手动模式为并联转换切换，即动作方式为断路器先合后分，断路器同时闭合时间<0.5s。并联模式可设定为“最佳”和“常规”两种模式，“最佳”是指控制器检测到常备用电源相序、电压差、频率差满足条件的前提下自动搜索接近于同相角的时刻进行并联合闸，以最大限度的降低合环电流；“常规”是指控制器检测到常备用电源相序、电压差、频率差满足条件的前提下检测到相角差满足设定的阈值即进行并联合闸。

WTB3 controller, s manul mode uses parattel conuersion switchover,that is ,circuit breaker, s operation metliol is "first male,then meat",meanushilie,circuit breaker, s making time is less than 0.5s ,Parallelmode can be set with in "optimiztion" means when the controller detects the phase order voltage difference and treguency different .the preconditions ,it cuatornat.cally searches the time which approaches in phase angle and it operates parallel making to maxiumly rechue loop current; "Normal" means when the controller detects the phase order,voltage difference and frequency difference of backup power meet the meconditions and phase angle difference meets setting,it operates paralleled meching.

▲WTT5型--三电网电源自投自复


Automatic change and automatic recover between three network supplys

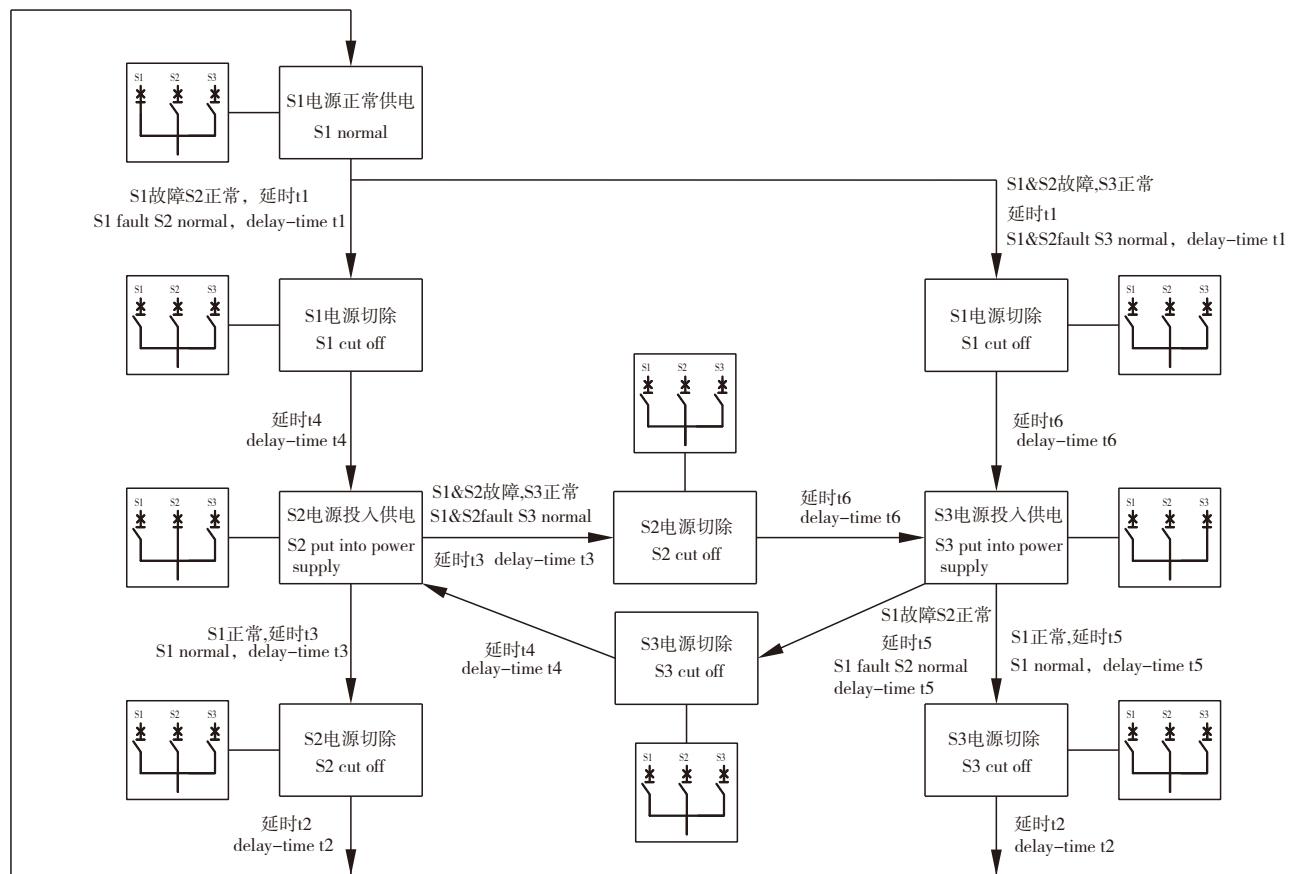



▲WTT5型--三电网电源自投不自复


Automatic change and not automatic recover between three network supplies

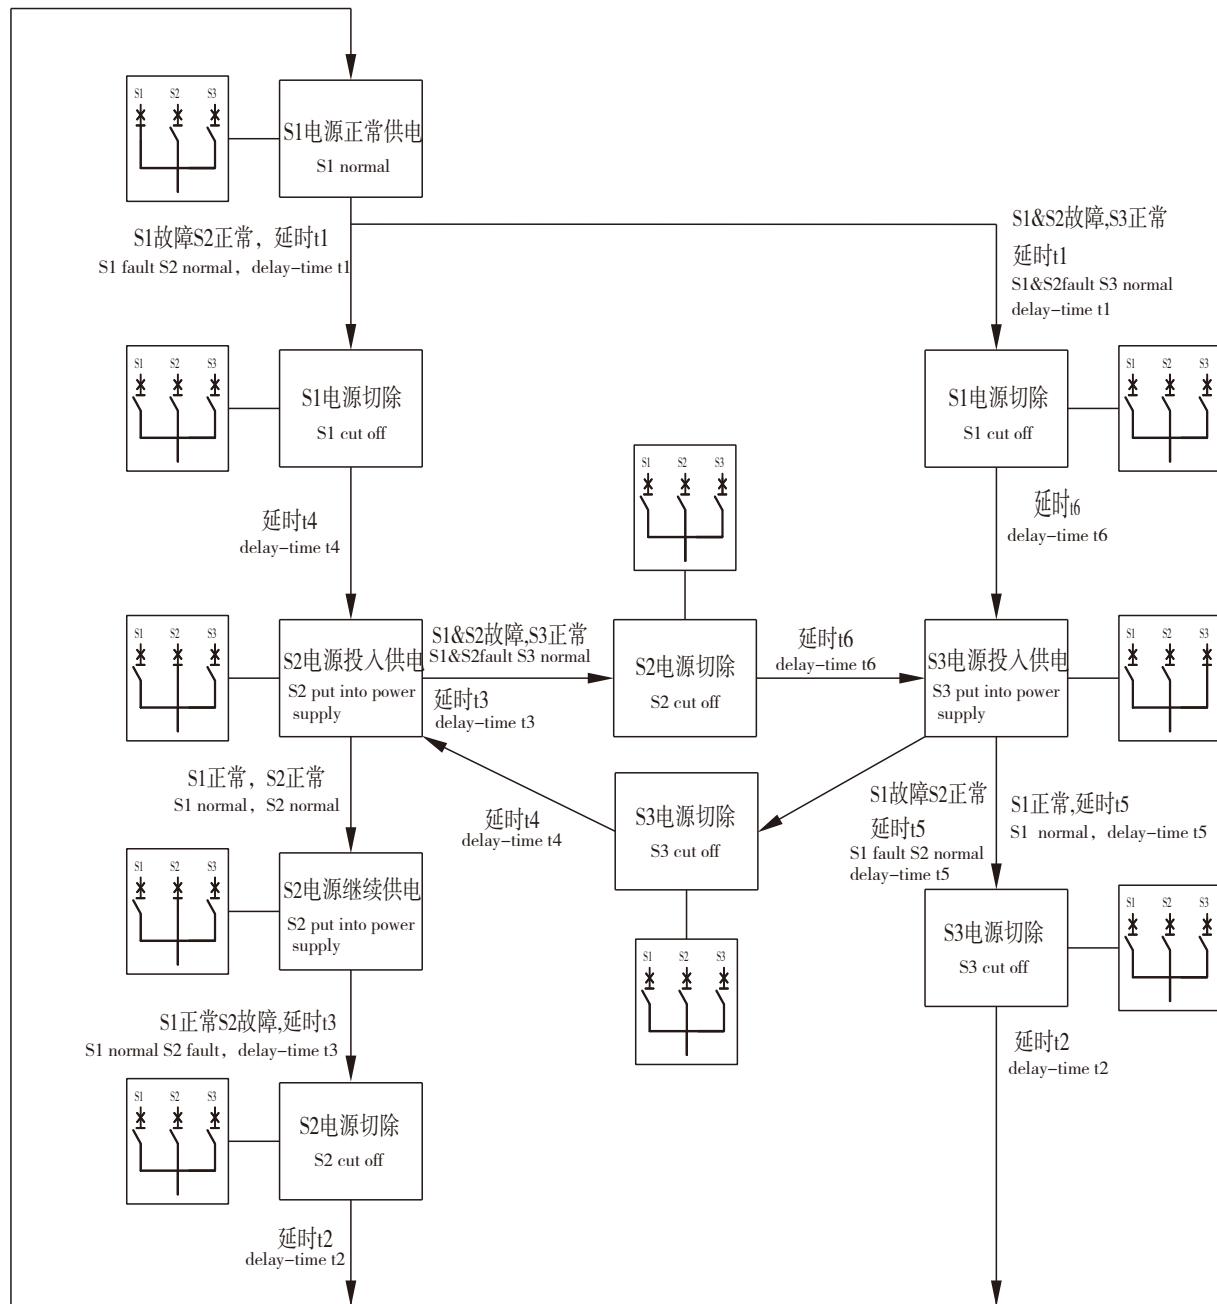



▲WTT5型--两个电网电源和一个发电电源自投自复

Automatic change and automatic recover between two network supplies with generating

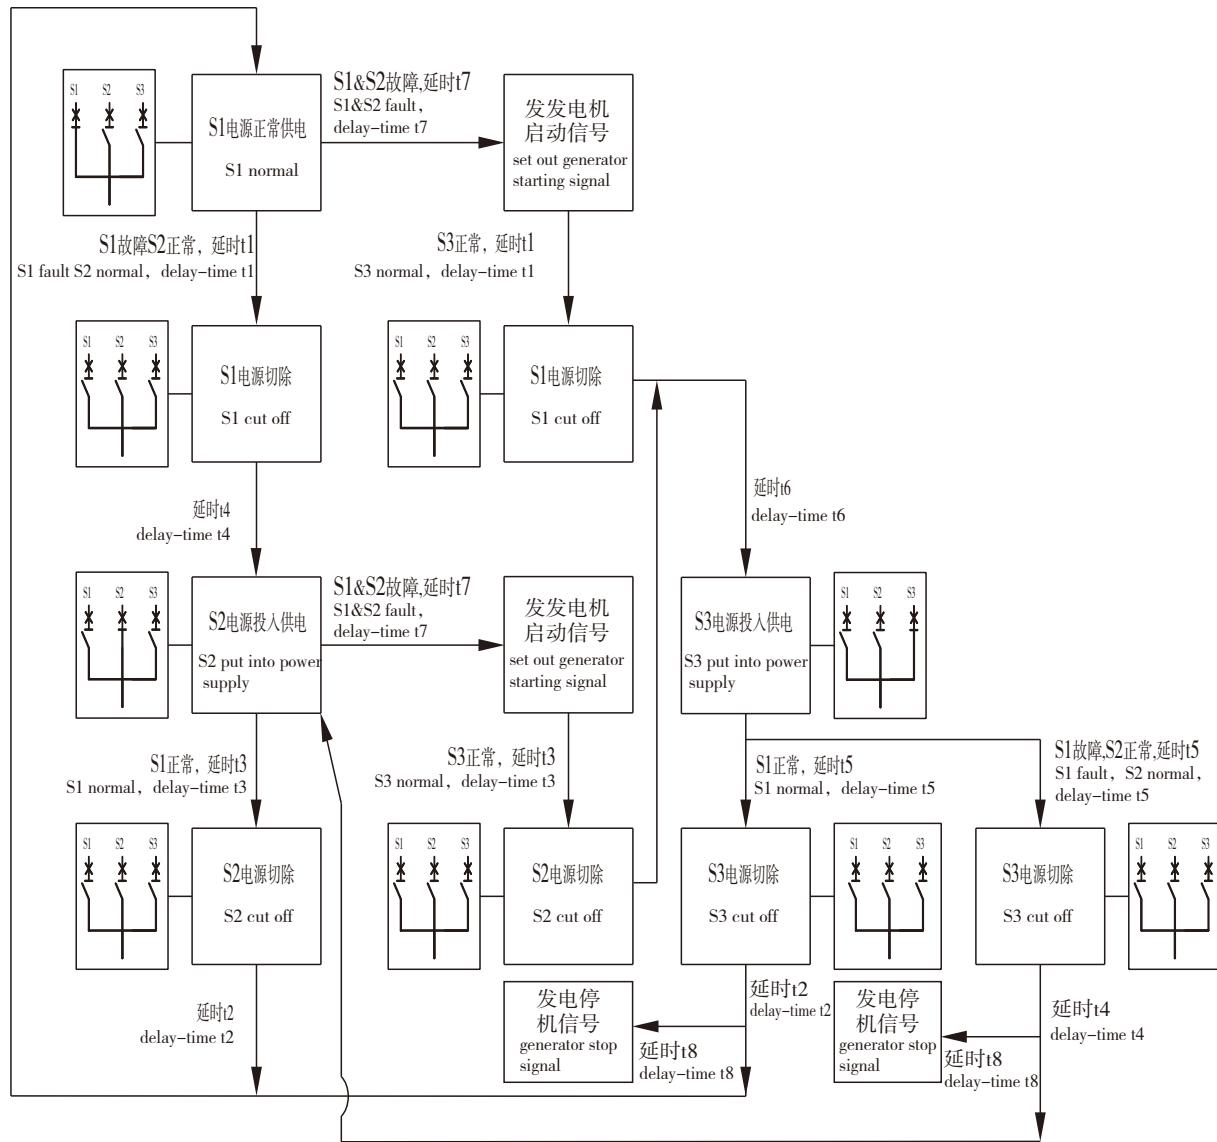

● 特性 Characteristics

型号 Type	自动转换控制器型号 Automatic controller type	配用断路器 Fitting breaker
FZZ两路电源转换 Two lines supply transfer	R、ZR、ZTR	CW2-1600/2000C/2000/2500/4000/6300 两台 (可配其它CW系列断路器)
	S、ZS、ZTS	
	F、ZF、ZTF	
FLZ两进线一母联电源转换 Two incoming one bus couple	WTT3	CW2-1600/2000C/2000/2500/4000/6300 三台 (可配其它CW系列断路器)
	WTB3	
FLZ三电源转换 Three supply transfer	WTT5	CW2-1600/2000C/2000/2500/4000/6300 三台 (可配其它CW系列断路器)







断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-1600三极智能型万能式断路器（抽屉式）

CW2-1600 Intelligent Universal Circuit Breaker with three poles (draw-out type)

电流规格 Current specifications	L (mm)
800A,1000A, 1250A,1600A	15
200A,400A, 630A	10

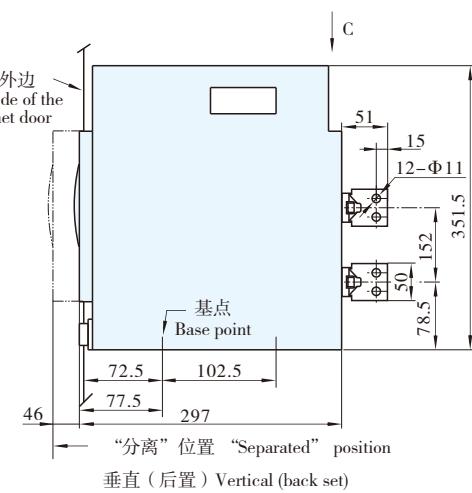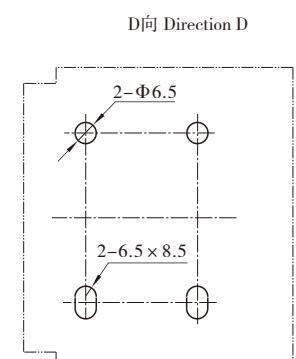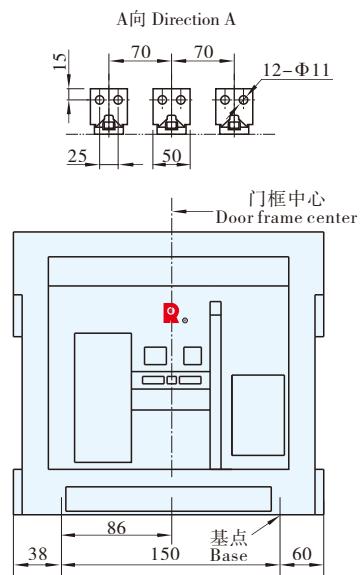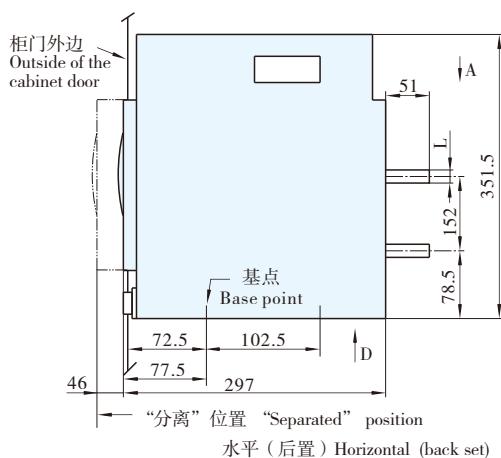

C向 Direction C










断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

- CW2-1600四极智能型万能式断路器（抽屉式）

CW2-1600 Intelligent Universal Circuit Breaker with four poles (draw-out type)

电流规格 Current specifications	L (mm)
800A,1000A, 1250A,1600A	15
200A,400A, 630A	10

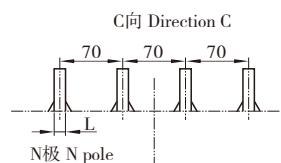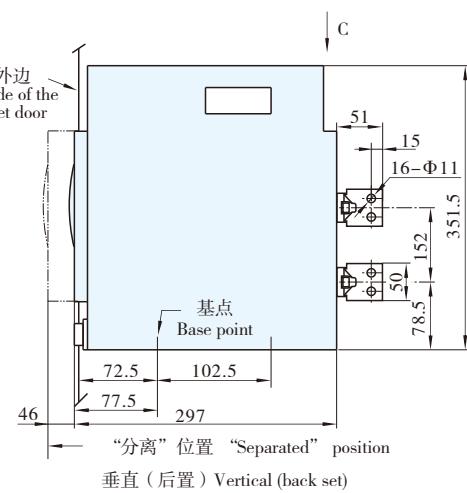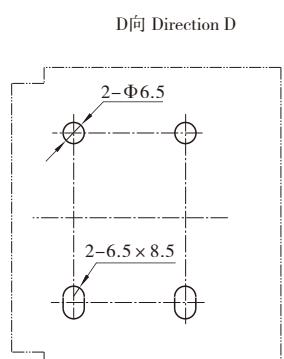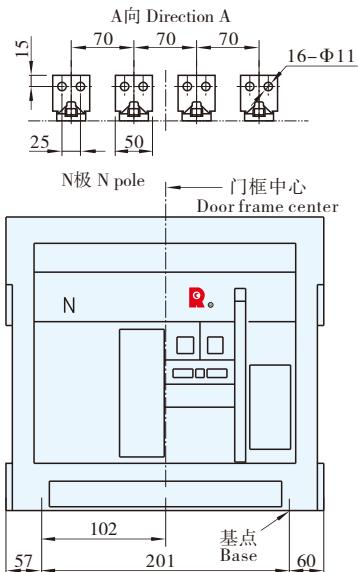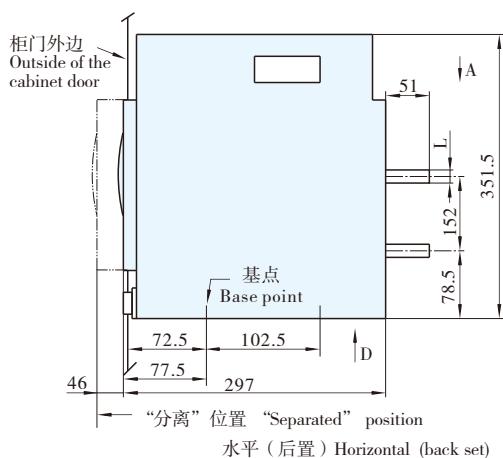





断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS



- CW2-1600三极智能型万能式断路器（固定式）

CW2-1600 Intelligent Universal Circuit Breaker with three poles (fixed type)


电流规格 Current specifications	L (mm)
800A,1000A, 1250A,1600A	15
200A,400A, 630A	10

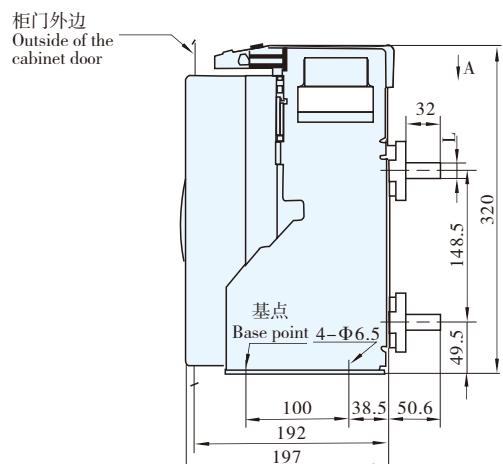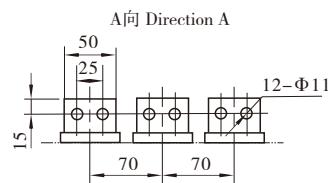


水平 (后置) Horizontal (back set)

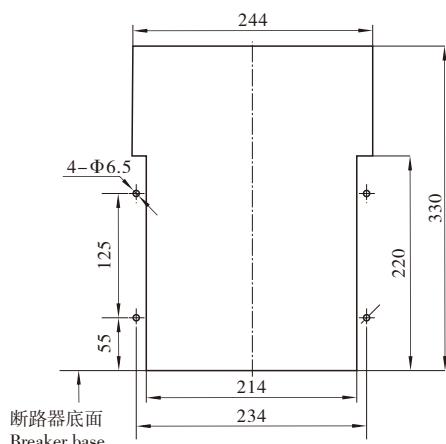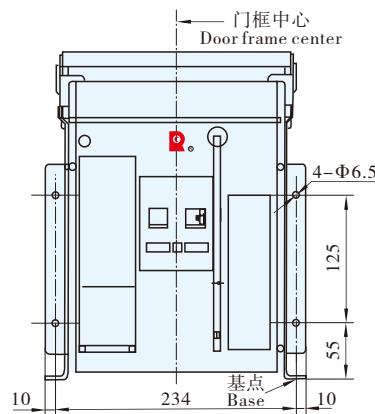

壁挂式安装时后板开孔尺寸
Aperture dimensions of the back plate
at the time of hanging type installation

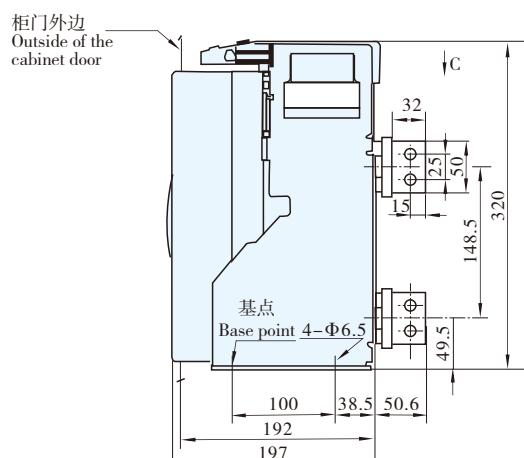

垂直 (后置) Vertical (back set)

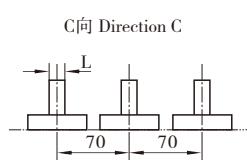




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-1600四极智能型万能式断路器（固定式）

CW2-1600 Intelligent Universal Circuit Breaker with four poles (fixed type)



电流规格 Current specifications	L (mm)
800A,1000A, 1250A,1600A	15
200A,400A, 630A	10

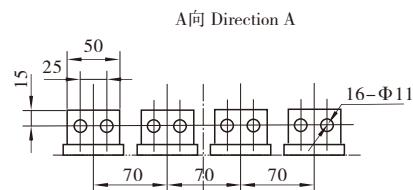


N极
N pole
门框中心
Door frame center

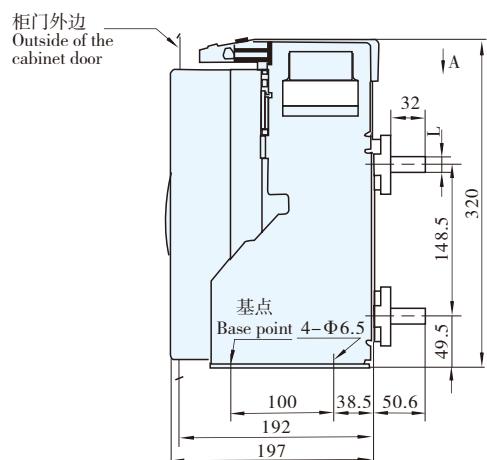


水平 (后置) Horizontal (back set)

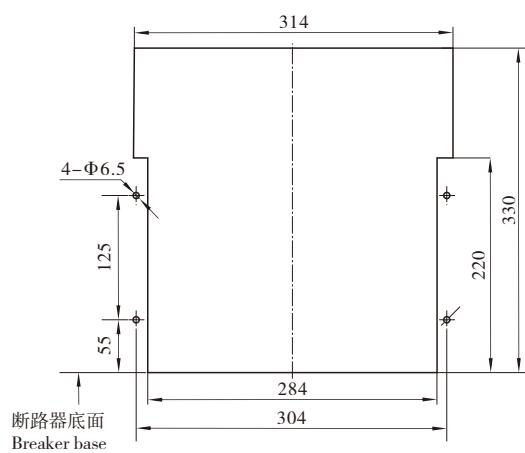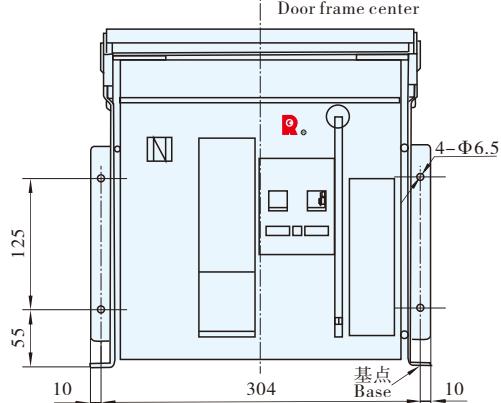

壁挂式安装时后板开孔尺寸
Aperture dimensions of the back plate
at the time of hanging type installation

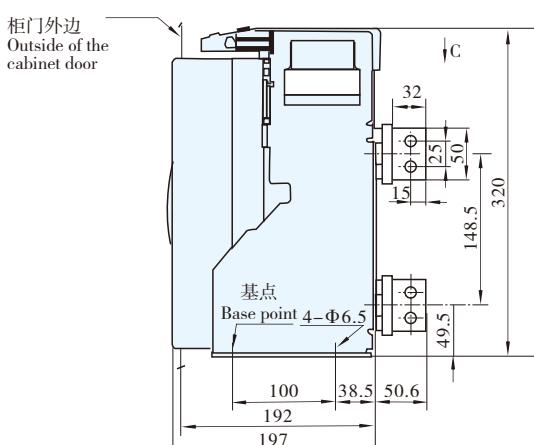

垂直 (后置) Vertical (back set)

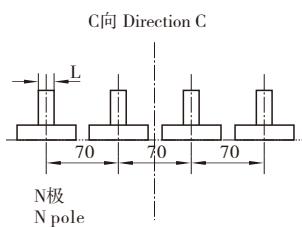

N极
N pole




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-2000C三极智能型万能式断路器（抽屉式）

CW2-2000C Intelligent Universal Circuit Breaker with three poles (draw-out type)


电流规格 Current specifications	L (mm)
2000A	20
630A, 800A 1000A, 1250A 1600A	15

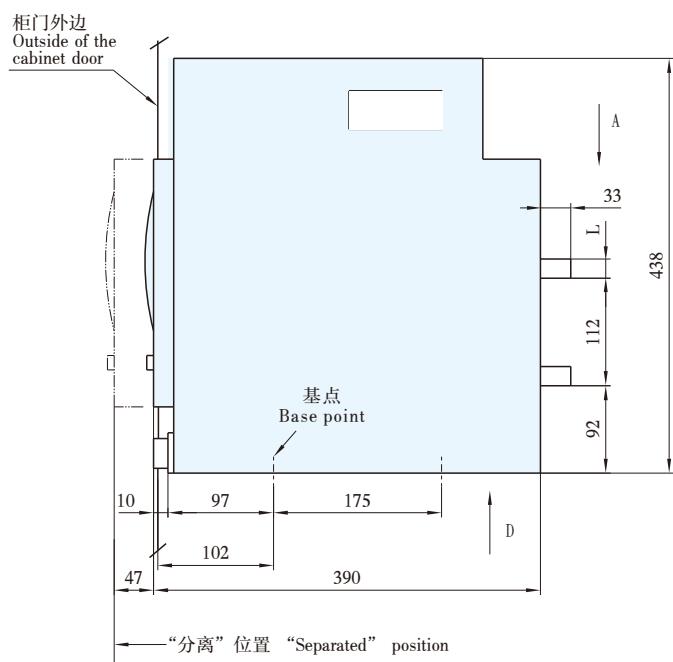

水平 (后置) Horizontal (back set)

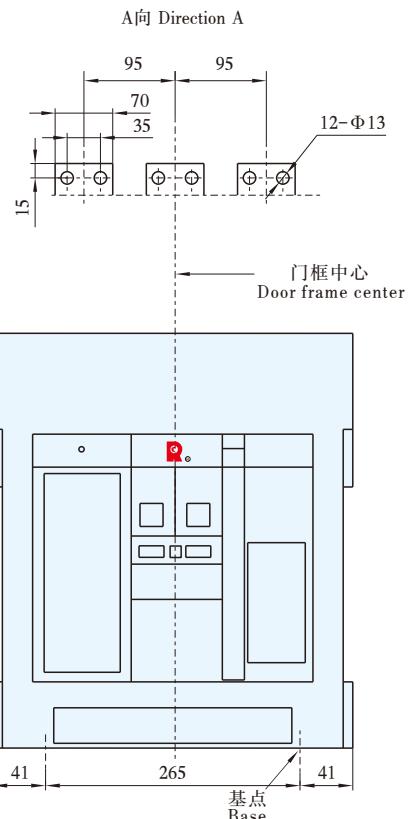

D向 Direction D

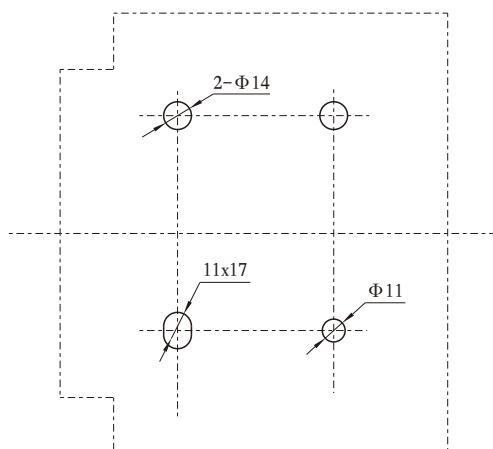






断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

- CW2-2000C四极智能型万能式断路器（抽屉式）


CW2-2000C Intelligent Universal Circuit Breaker with four poles (draw-out type)

电流规格 Current specifications	L (mm)
2000A	20
630A, 800A 1000A, 1250A 1600A	15

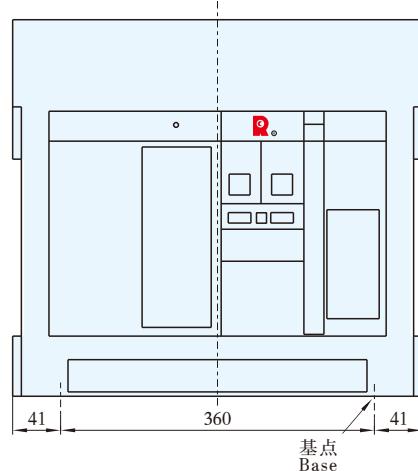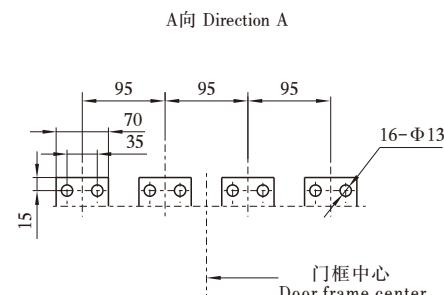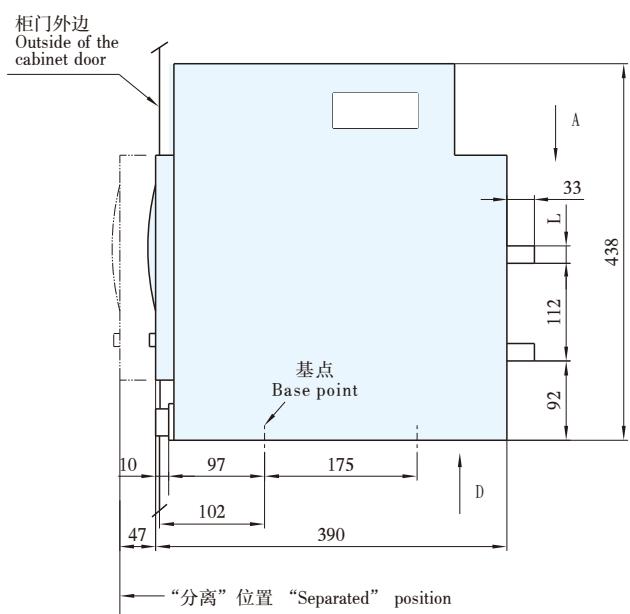

水平 (后置) Horizontal (back set)

D向 Direction D

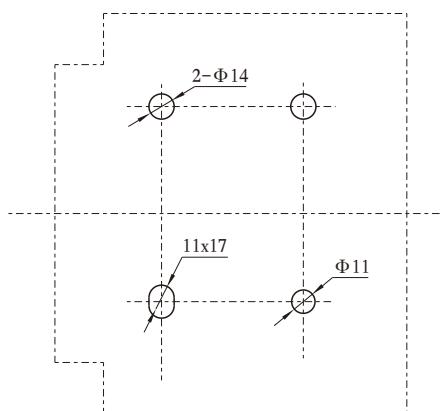




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-2000三极智能型万能式断路器（抽屉式）

CW2-2000 Intelligent Universal Circuit Breaker with three poles (draw-out type)



电流规格 Current specifications	L (mm)	H (mm)	A (mm)
2000A	20	20	30
630A, 800A 1000A, 1250A 1600A	15	15	25

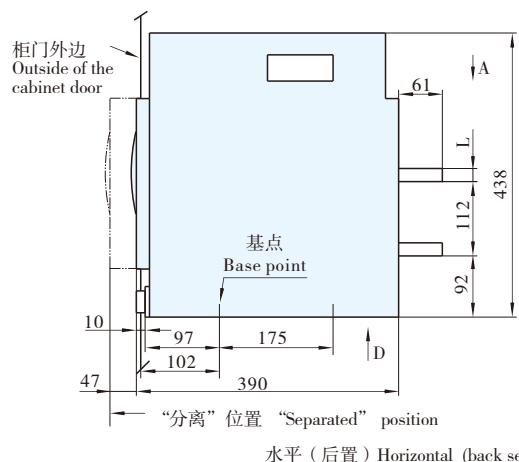

水平 (后置) Horizontal (back set)

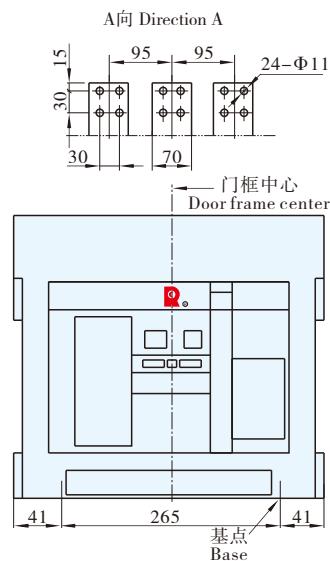


D向 Direction D

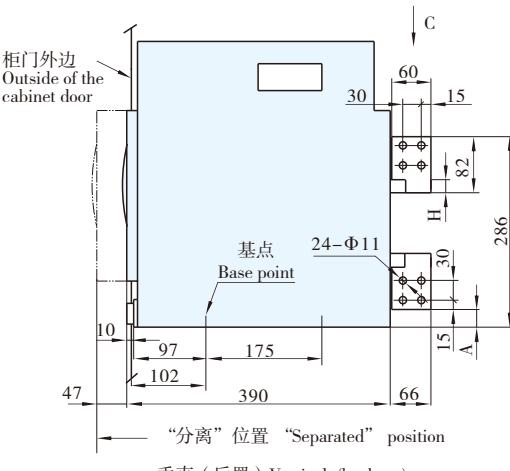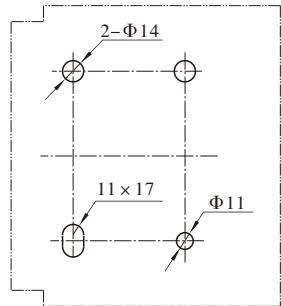

垂直 (后置) Vertical (back set)

C向 Direction C

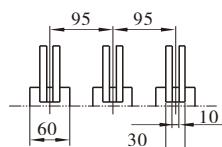








断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

- CW2-2000四极智能型万能式断路器（抽屉式）

CW2-2000 Intelligent Universal Circuit Breaker with four poles (draw-out type)

电流规格 Current specifications	L (mm)	H (mm)	A (mm)
2000A	20	20	30
630A, 800A 1000A, 1250A 1600A	15	15	25

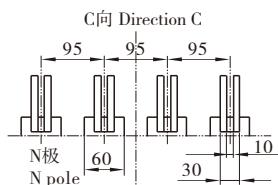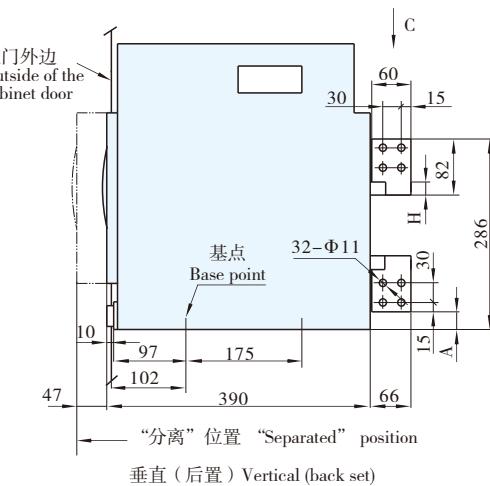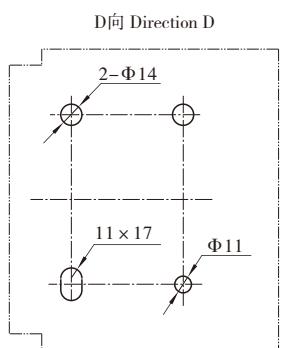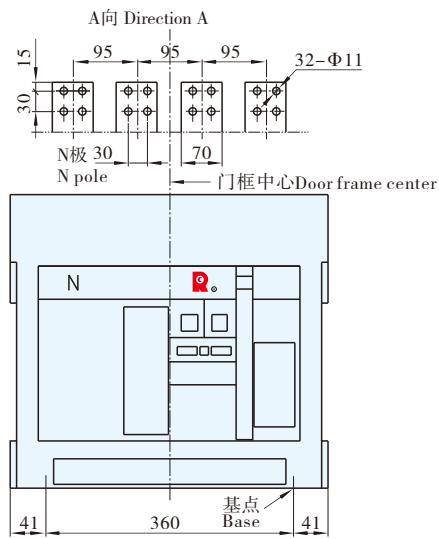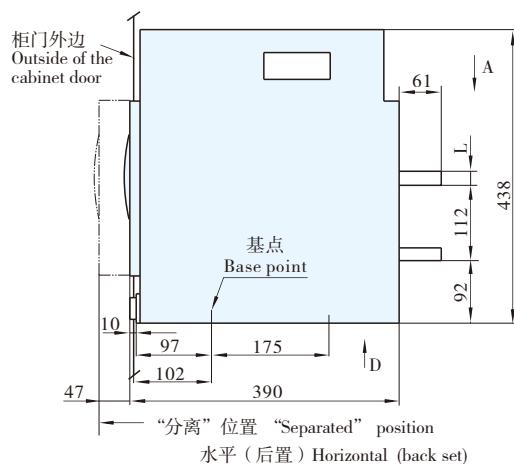




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-2000三极智能型万能式断路器（固定式）

CW2-2000 Intelligent Universal Circuit Breaker with three poles (fixed type)



电流规格 Current specifications	L (mm)	A (mm)	W (mm)	B (mm)
2000A	20	269	20	13
630A, 800A 1000A, 1250A 1600A	15	264	15	3

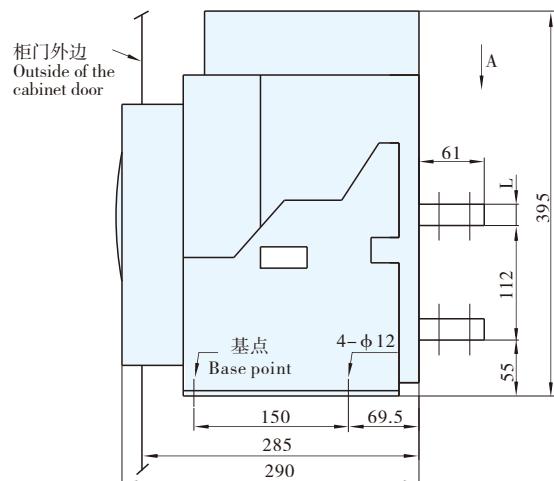

水平 (后置) Horizontal (back set)

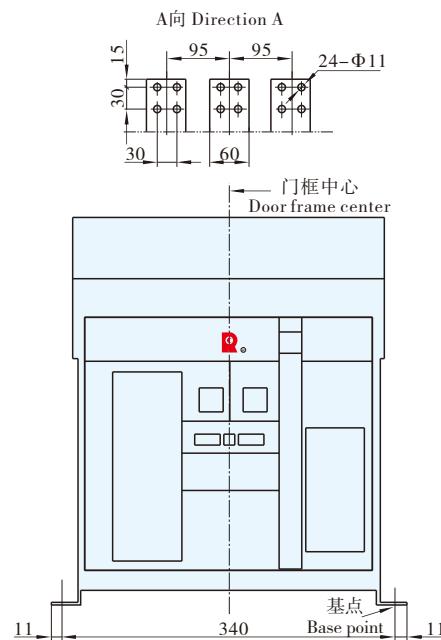

水平 (后置) Horizontal (back set)

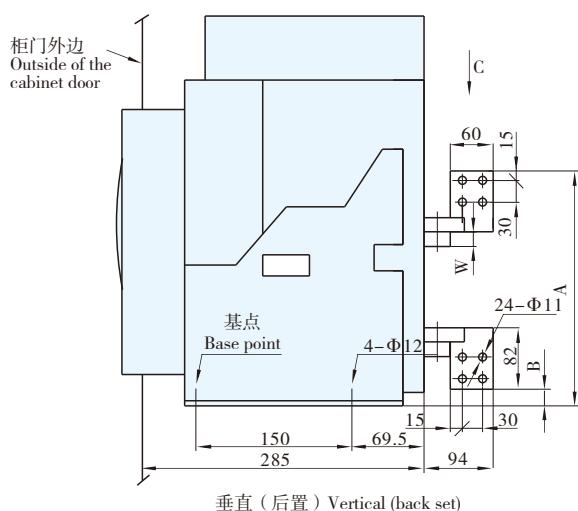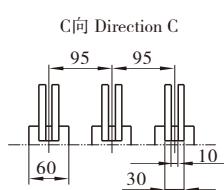

垂直 (后置) Vertical (back set)





断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS




- CW2-2000四极智能型万能式断路器（固定式）

CW2-2000 Intelligent Universal Circuit Breaker with four poles (fixed type)

电流规格 Current specifications	L (mm)	A (mm)	W (mm)	B (mm)
2000A	20	269	20	13
630A, 800A 1000A, 1250A 1600A	15	264	15	3

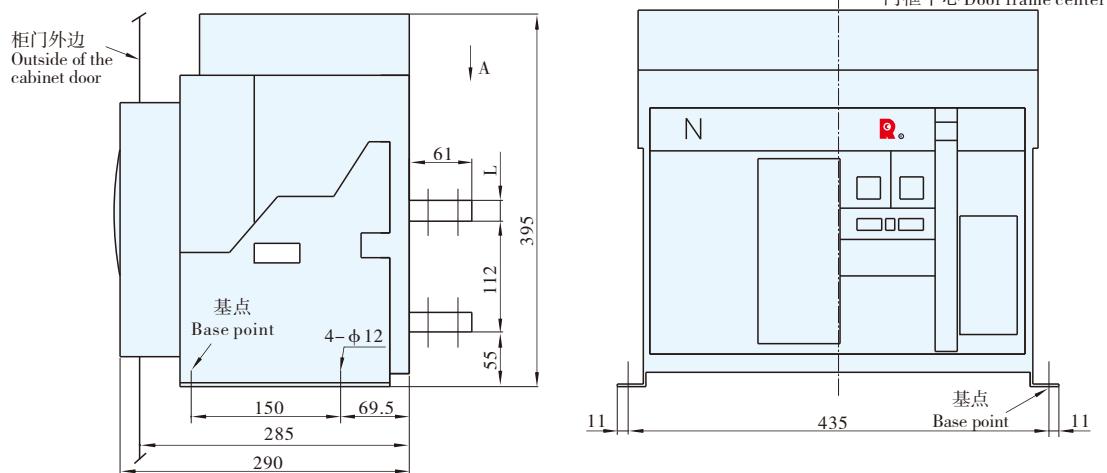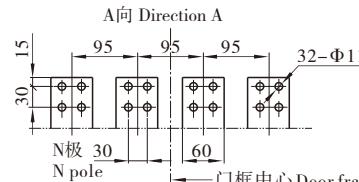

水平 (后置) Horizontal (back set)

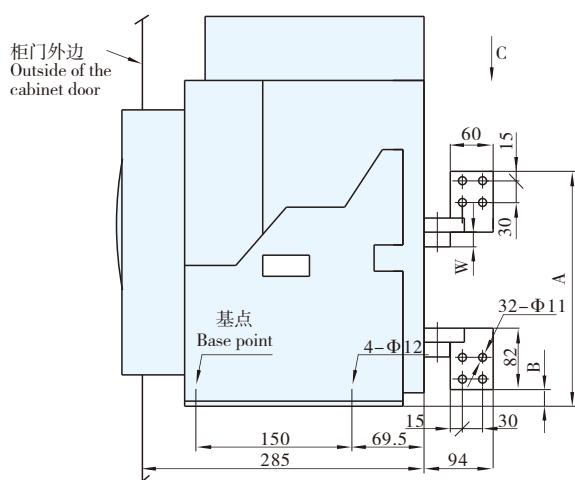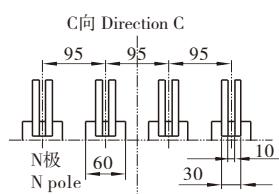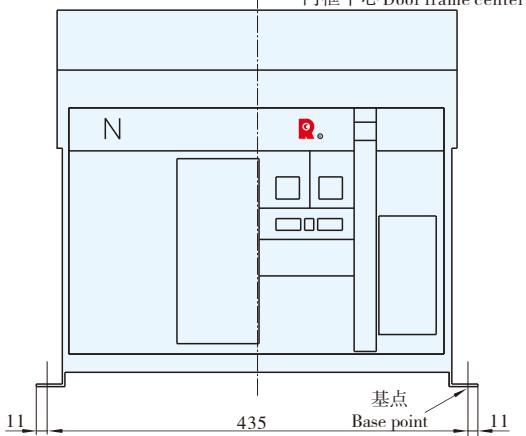

垂直 (后置) Vertical (back set)




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-2500三极智能型万能式断路器（抽屉式）

CW2-2500 Intelligent Universal Circuit Breaker with three poles (draw-out type)


电流规格 Current specifications	L (mm)
2000A, 2500A	20
1250A, 1600A	15

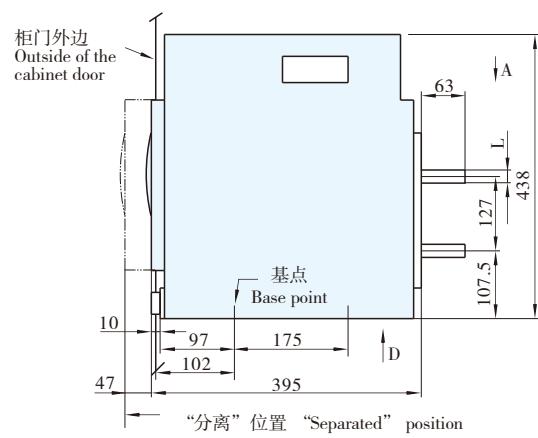


A向 Direction A

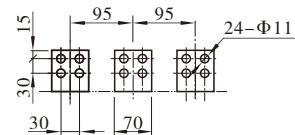


门框中心
Door frame center

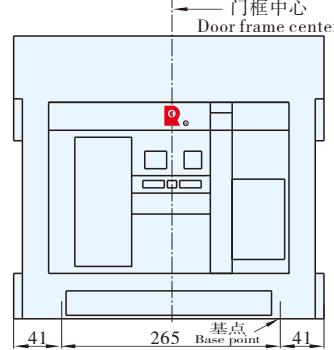


D向 Direction D

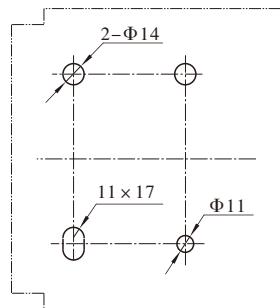

柜门外边
Outside of the cabinet door

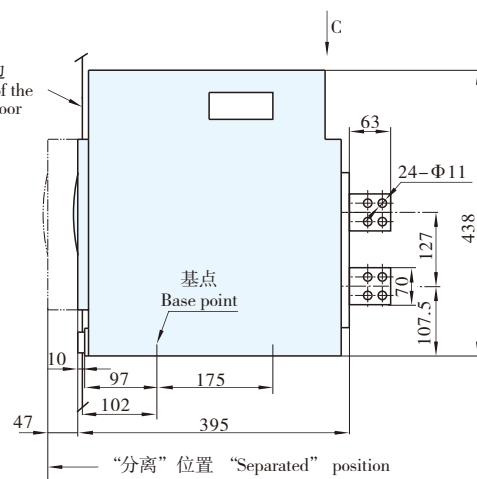

C向 Direction C







断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-2500四极智能型万能式断路器（抽屉式）

CW2-2500 Intelligent Universal Circuit Breaker with four poles (draw-out type)


电流规格 Current specifications	L (mm)
2000A, 2500A	20
1250A, 1600A	15

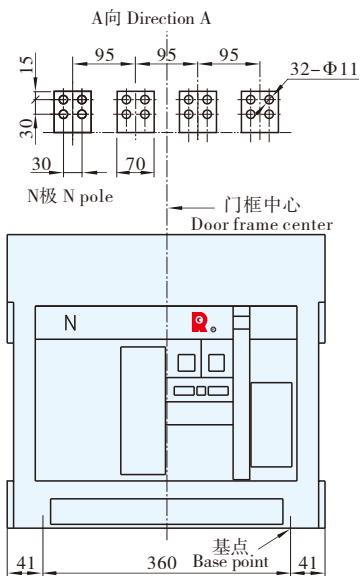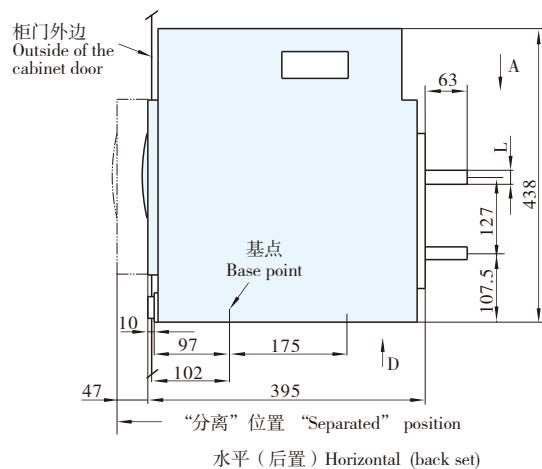


D向 Direction D

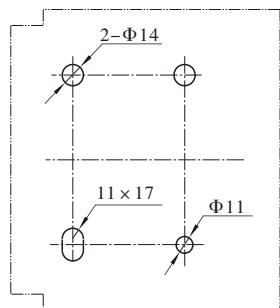

柜门外边
Outside of the cabinet door

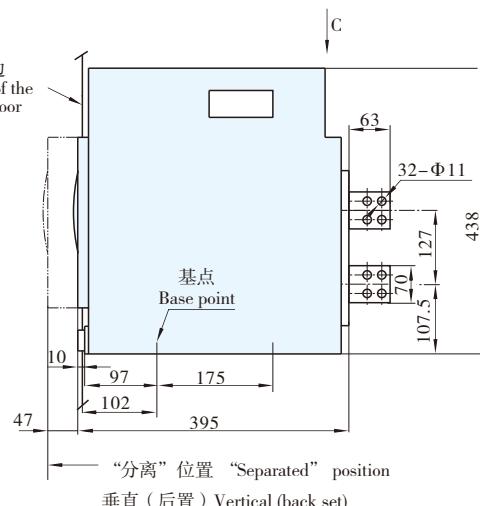

C向 Direction C

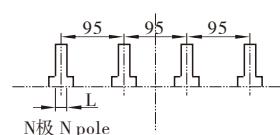





断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

- CW2-2500三极智能型万能式断路器（固定式）

CW2-2500 Intelligent Universal Circuit Breaker with three poles (fixed type)

电流规格 Current specifications	L (mm)	C (mm)
2000A, 2500A	20	132
1250A, 1600A	15	134.5

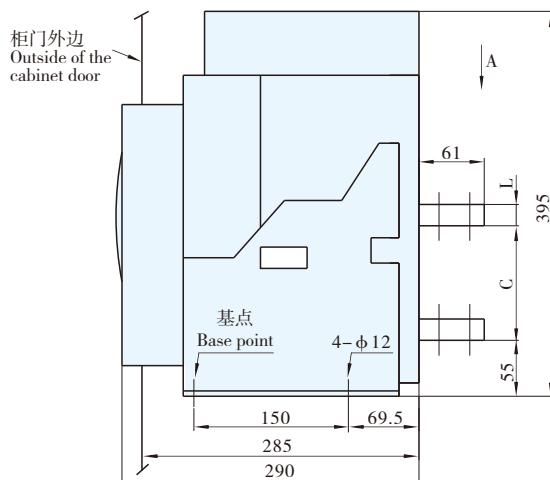
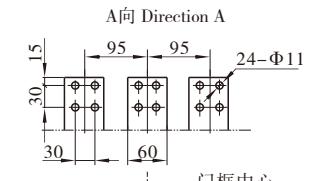


水平 (后置) Horizontal (back set)

- CW2-2500四极智能型万能式断路器（固定式）

CW2-2500 Intelligent Universal Circuit Breaker with four poles (fixed type)

电流规格 Current specifications	L (mm)	C (mm)
2000A, 2500A	20	132
1250A, 1600A	15	134.5

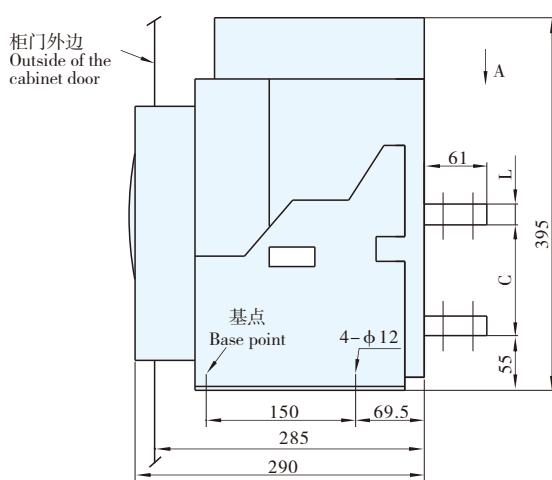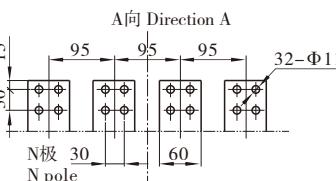


水平 (后置) Horizontal (back set)



断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

- CW2-4000三极智能型万能式断路器（抽屉式）

CW2-4000 Intelligent Universal Circuit Breaker with three poles (draw-out type)

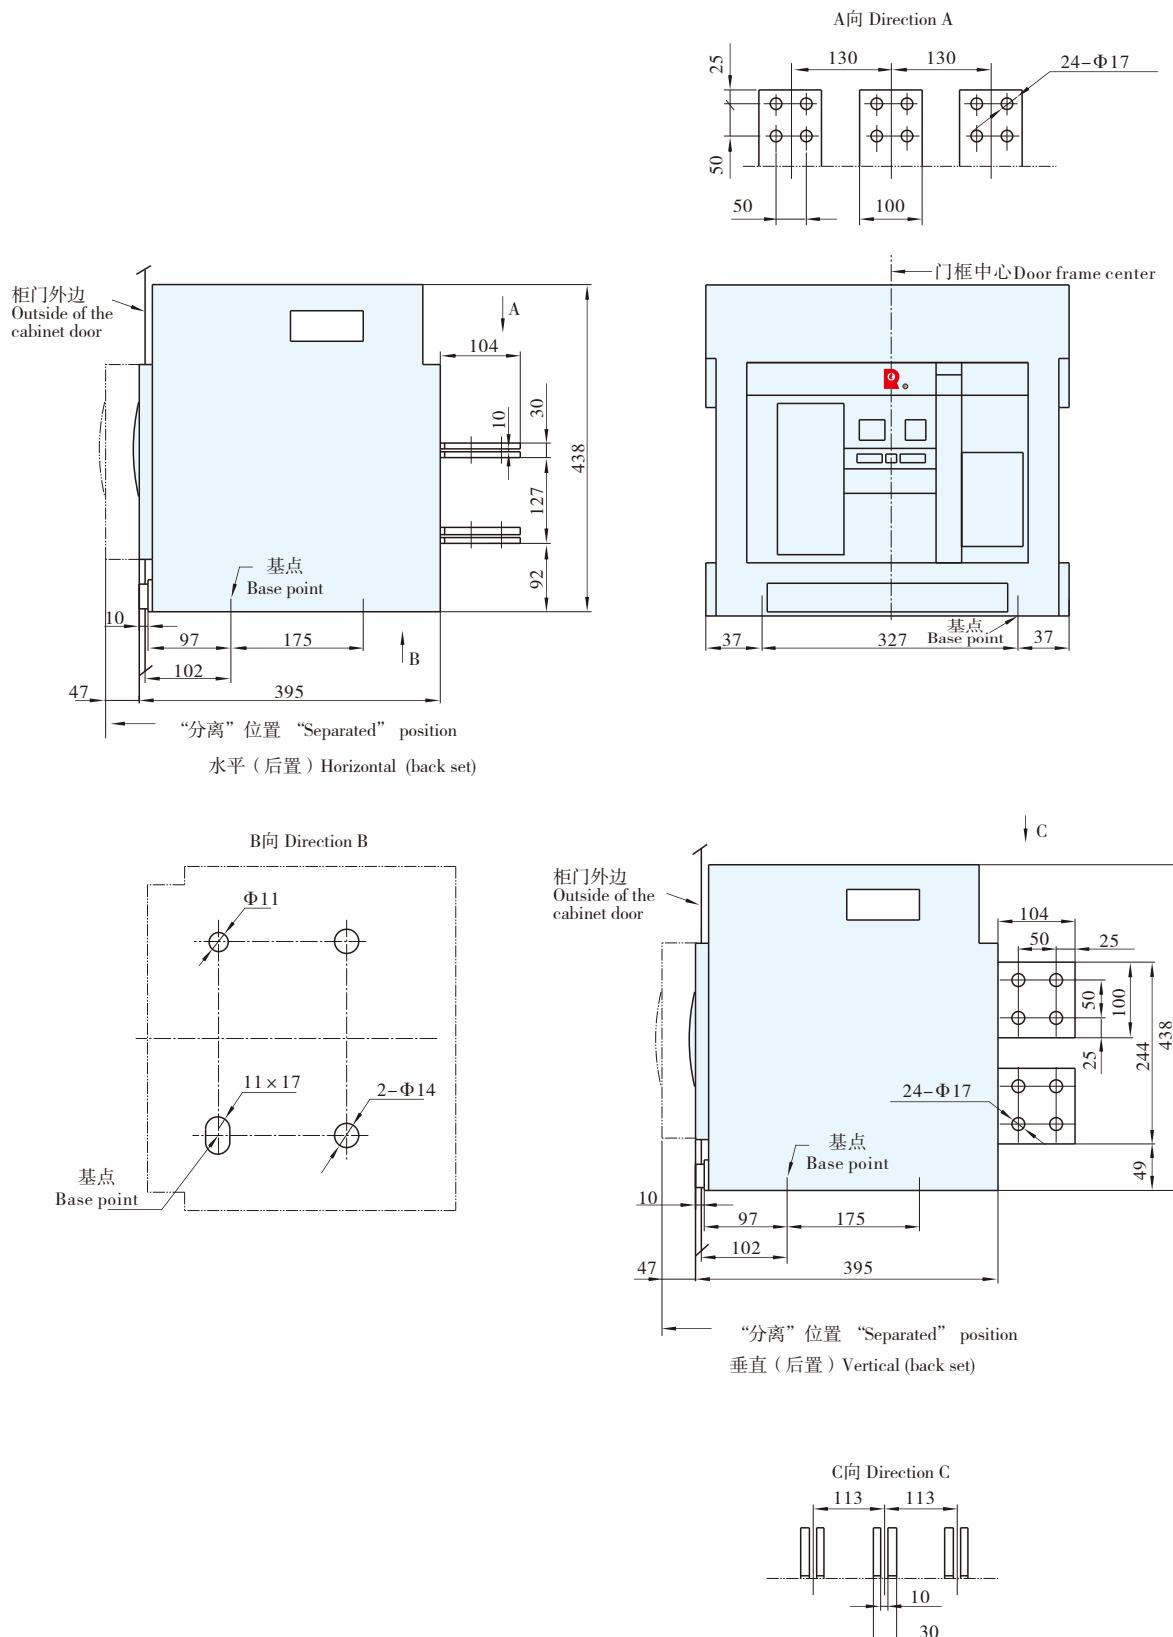






断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-4000四极智能型万能式断路器（抽屉式）

CW2-4000 Intelligent Universal Circuit Breaker with four poles (draw-out type)


A向 Direction A

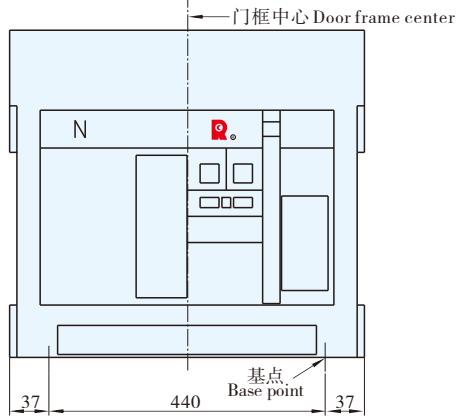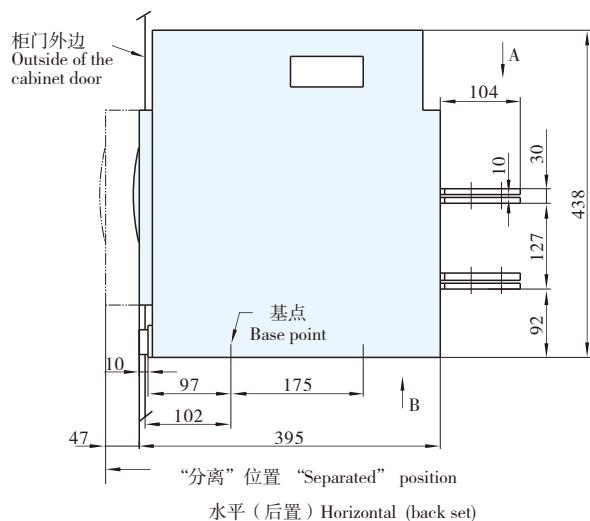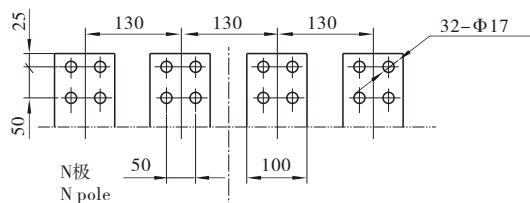


B向 Direction B

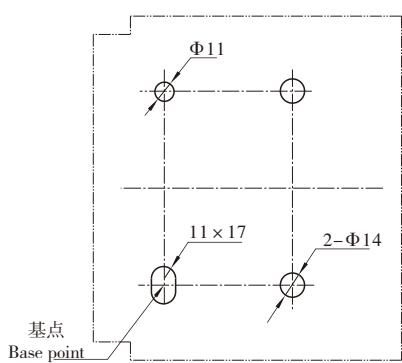

C

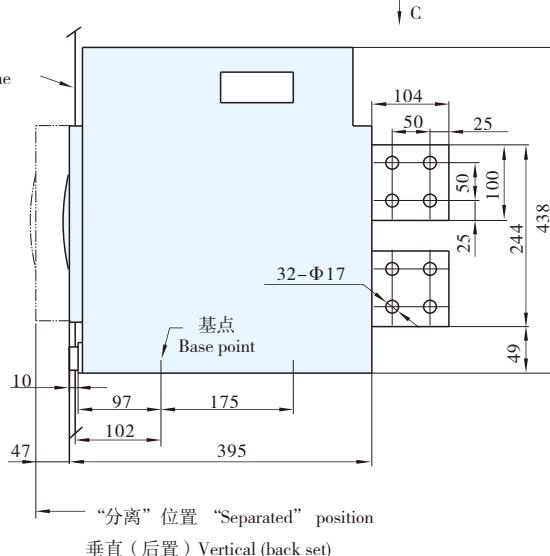

C向 Direction C

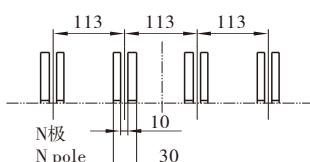




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

● CW2-4000三极智能型万能式断路器（固定式）


CW2-4000 Intelligent Universal Circuit Breaker with three poles (fixed type)

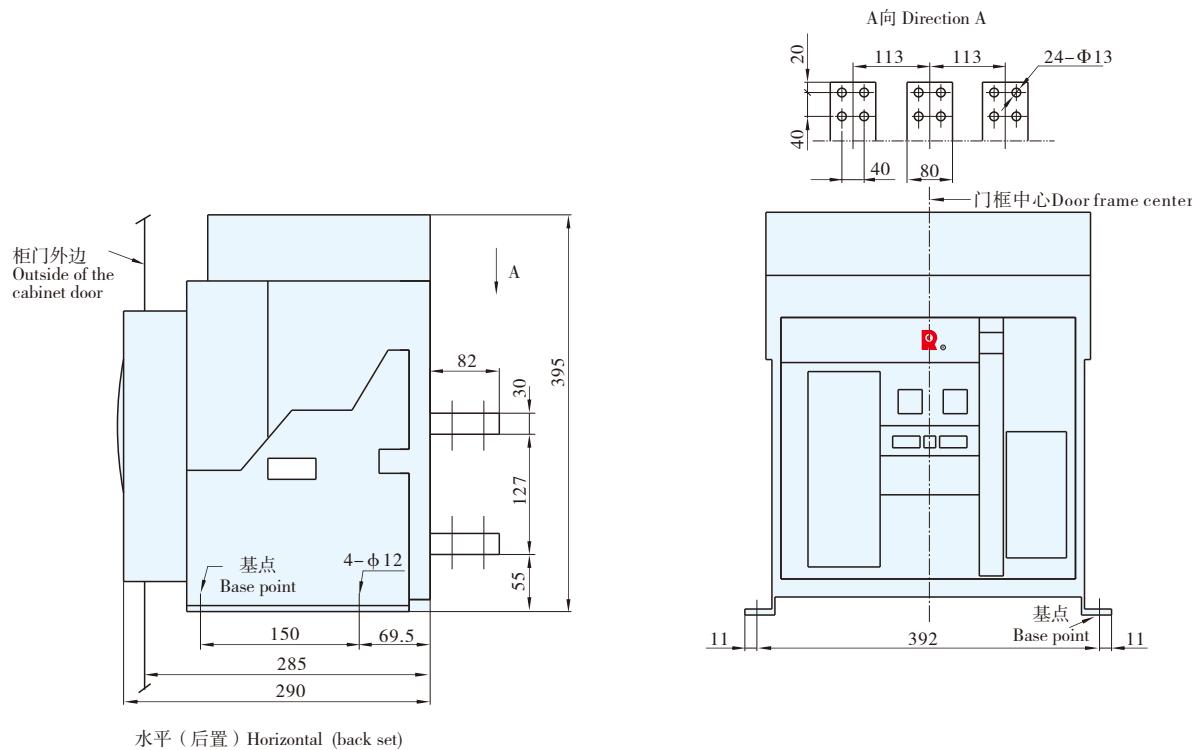

水平 (后置) Horizontal (back set)

● CW2-4000四极智能型万能式断路器（固定式）

CW2-4000 Intelligent Universal Circuit Breaker with four poles (fixed type)

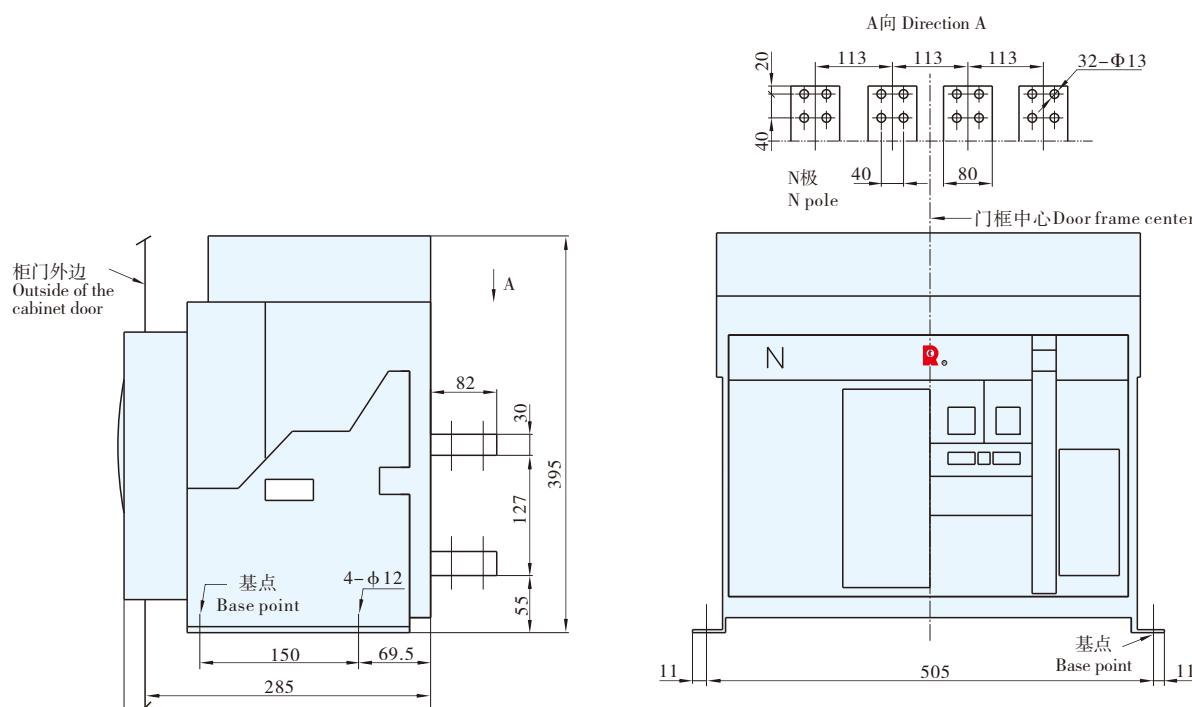


水平 (后置) Horizontal (back set)



断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-6300三极智能型万能式断路器（抽屉式）

CW2-6300 Intelligent Universal Circuit Breaker with three poles (draw-out type)

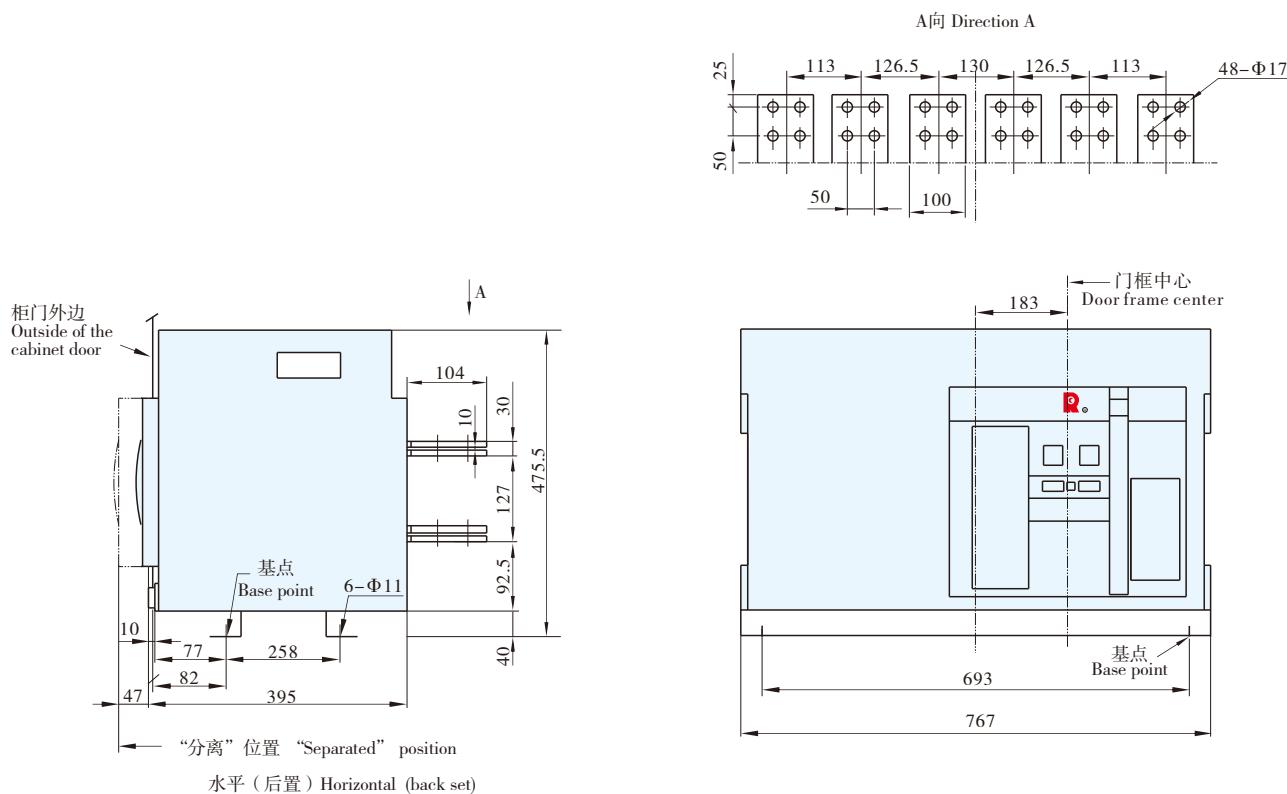

电流规格: In=4000A、5000A

Current specifications

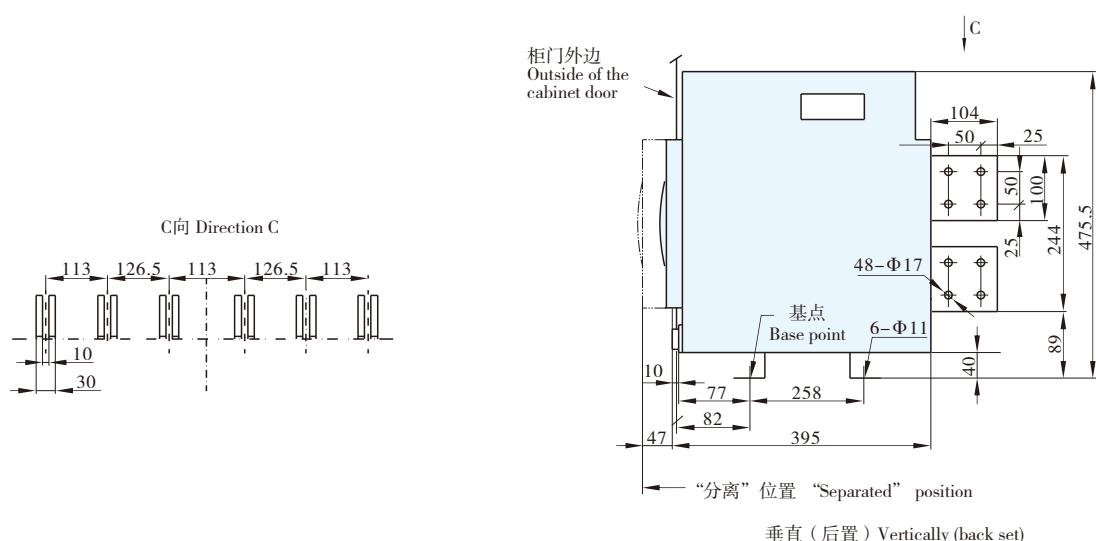

电流规格: In=4000A、5000A、6300A


Current specifications




断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS

- CW2-6300四极智能型万能式断路器（抽屉式）

CW2-6300 Intelligent Universal Circuit Breaker with four poles (draw-out type)

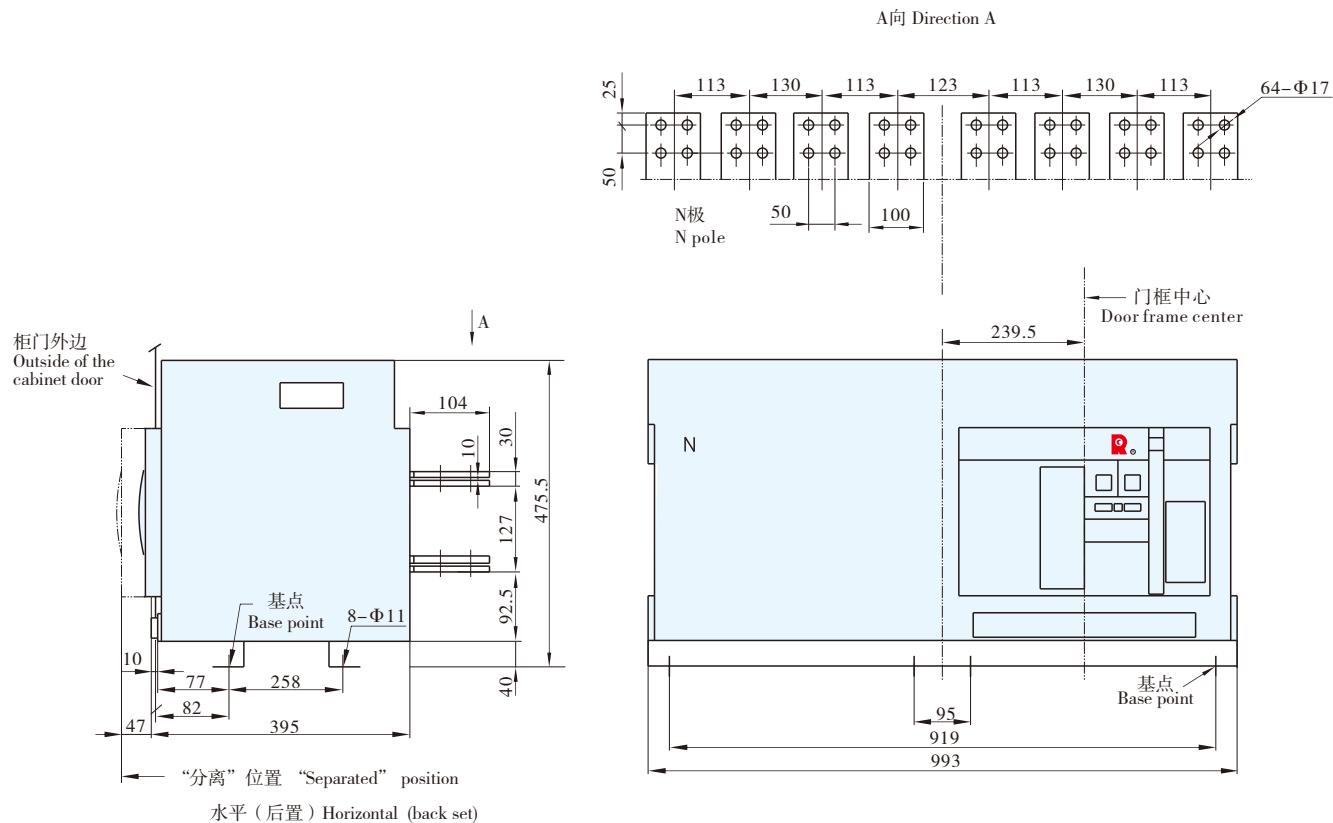

电流规格: In=4000A、5000A
Current specifications

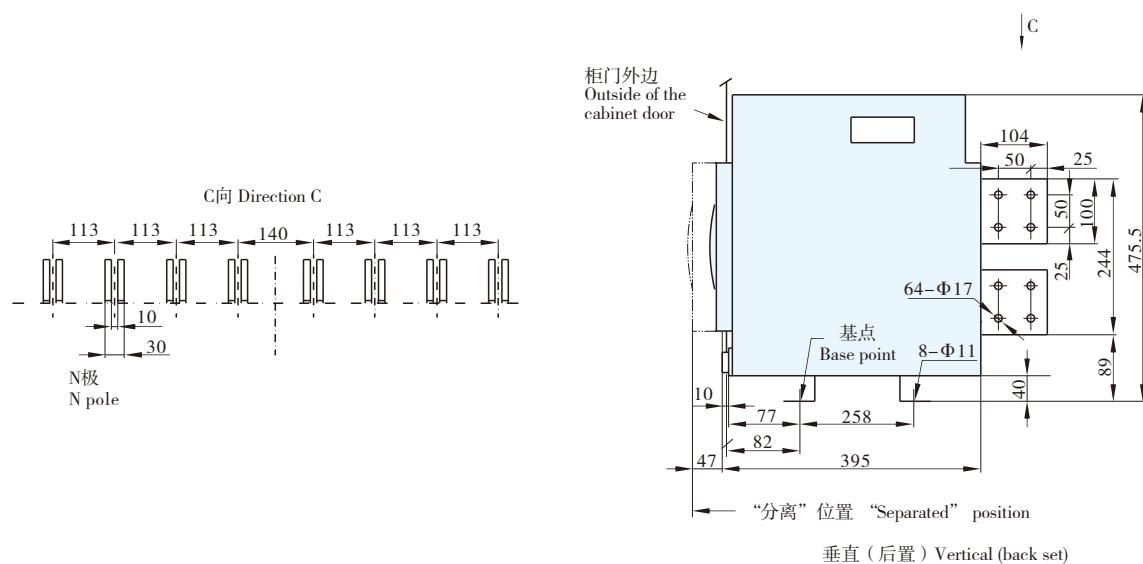


电流规格: In=4000A、5000A、6300A
Current specifications



断路器外形尺寸及安装尺寸 OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS


- CW2-6300三极智能型万能式断路器（固定式）

CW2-6300 Intelligent Universal Circuit Breaker with three poles (fixed type)

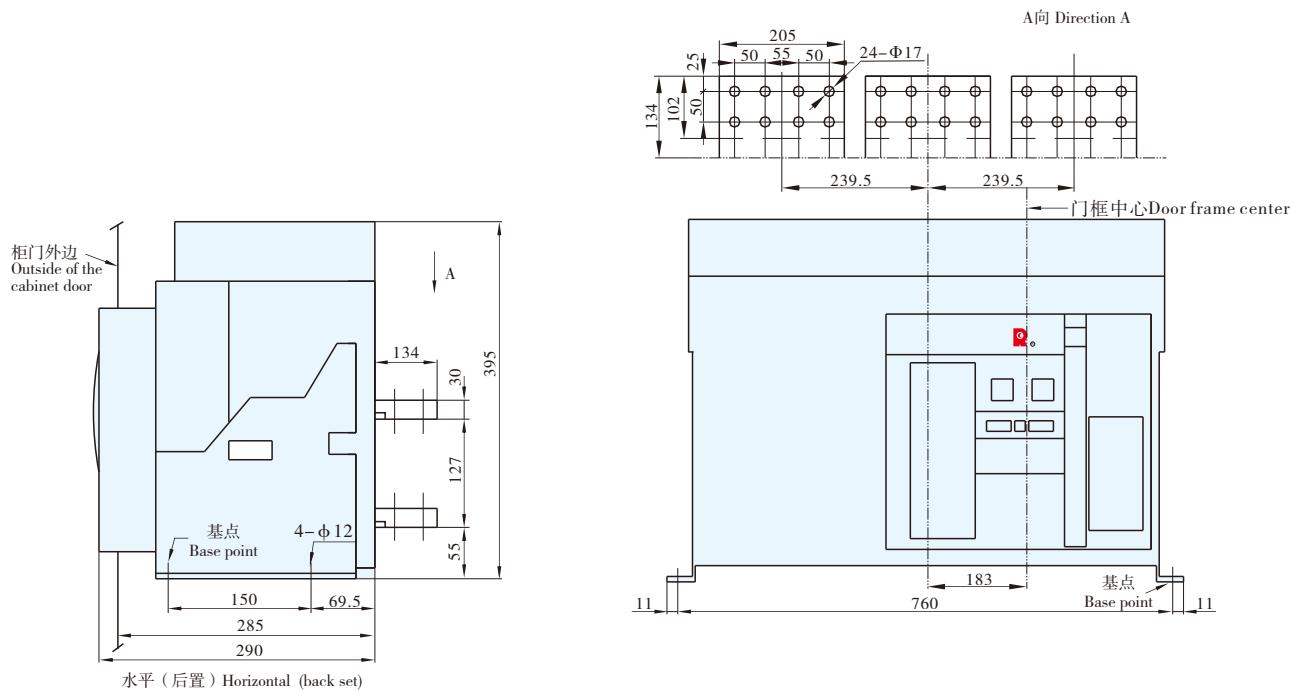

- CW2-6300四极智能型万能式断路器（固定式）

CW2-6300 Intelligent Universal Circuit Breaker with four poles (fixed type)

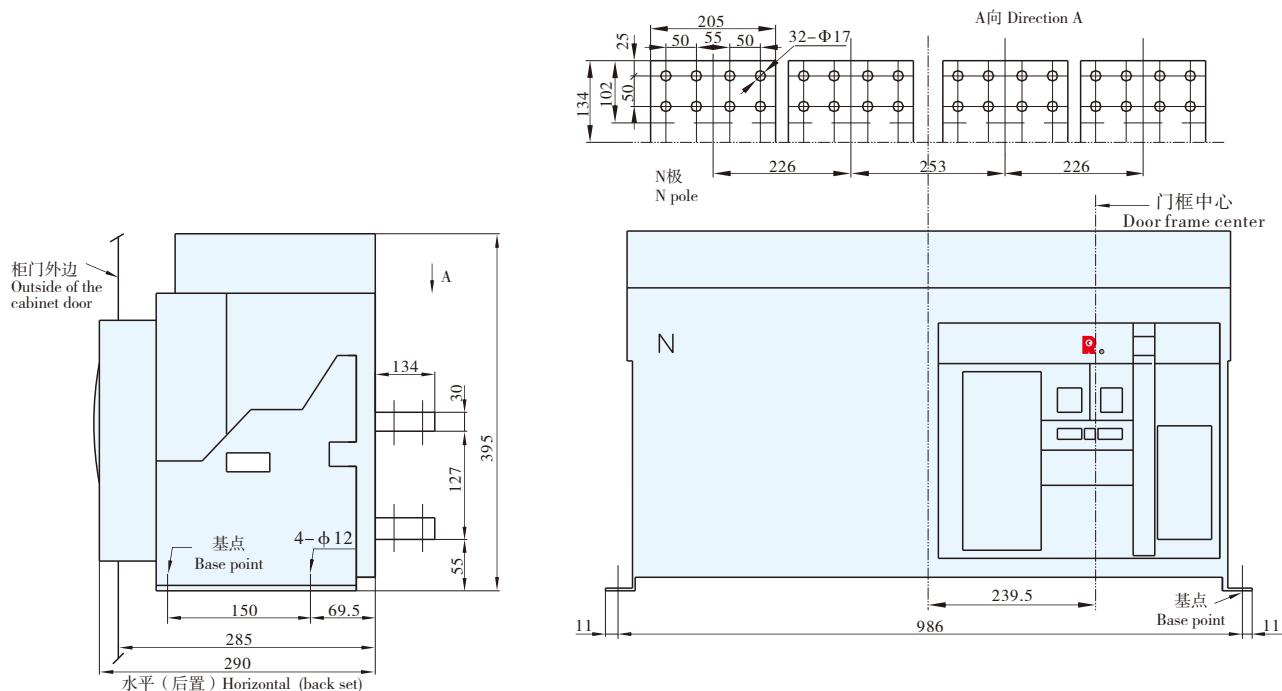



断路器门框开孔尺寸 APERTURE DIMENSIONS OF THE DOOR FRAME

- CW2-1600门框开孔尺寸 Aperture Dimension of CW2-1600 door frame


CW2-1600三极智能型万能式断路器（抽屉式）

安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为227mm

CW2-1600 Intelligent Universal Circuit Breakers with three poles (draw-out)
The drawing of aperture dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 227mm

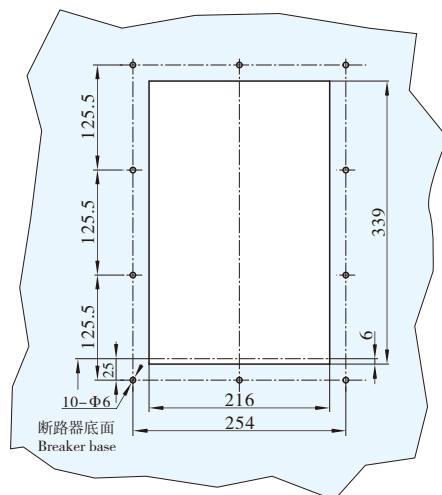


CW2-1600三极智能型万能式断路器（固定式）

安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为227mm

CW2-1600 Intelligent Universal Circuit Breakers with three poles (fixed type)
The drawing of aperture dimensions for mounting front cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 227mm

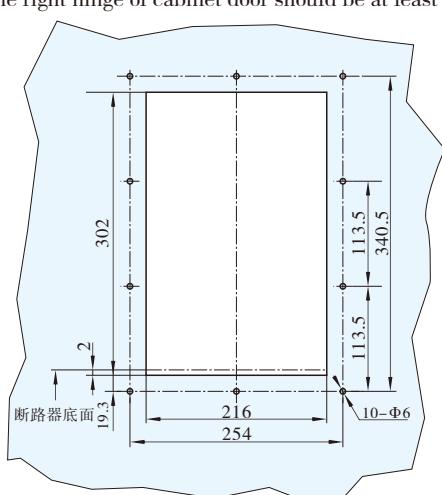


CW2-1600四极智能型万能式断路器（抽屉式）

安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为262mm

CW2-1600 Intelligent Universal Circuit Breakers with four poles (draw-out)
The drawing of aperture dimensions for mounting front cover of door frame

Distance from the panel center of the Circuit Breaker to the right hinge of cabinet door should be at least 262mm

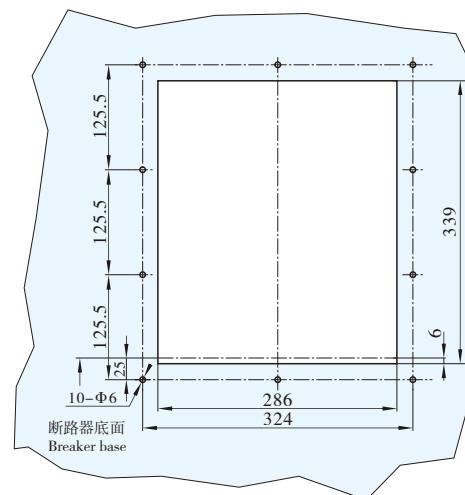


CW2-1600四极智能型万能式断路器（固定式）

安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为262mm

CW2-1600 Intelligent Universal Circuit Breakers with four poles (fixed type)
The drawing of aperture dimensions for mounting front cover of door frame

Distance from the panel center of the Circuit Breaker to the right hinge of cabinet door should be at least 262mm

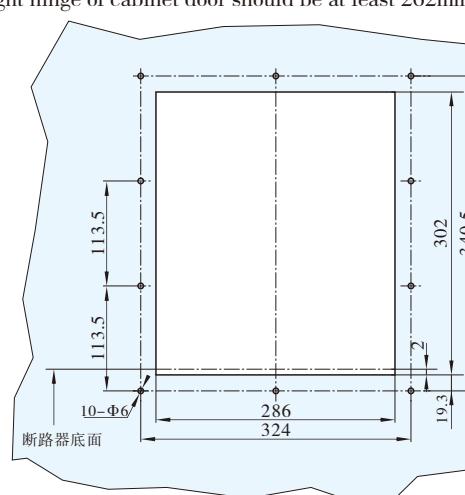



断路器门框开孔尺寸 APERTURE DIMENSIONS OF THE DOOR FRAME

● CW2-2000C/2000门框开孔尺寸 Aperture Dimension of CW2-2000C/2000 door frame

CW2-2000C/2000三极智能型万能式断路器（抽屉式） CW2-2000C/2000四极智能型万能式断路器（抽屉式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为256mm

CW2-2000C/2000 Intelligent Universal Circuit Breakers with three poles (draw-out)

The drawing of Aperture Dimensions for mounting front cover of cabubet door

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 256mm

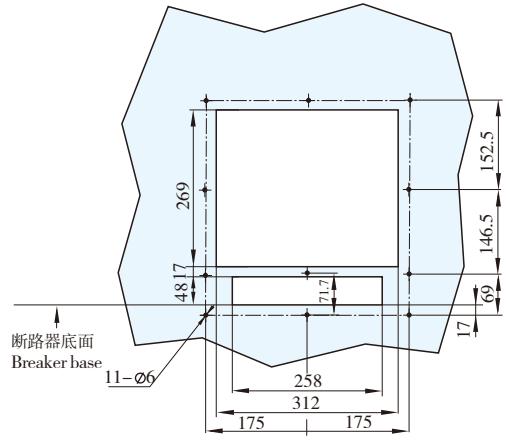

CW2-2000三极智能型万能式断路器（固定式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为256mm

CW2-2000 Intelligent Universal Circuit Breakers with three poles (fixed)

The drawing of Aperture Dimensions for mounting front cover of cabunet door

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 256mm

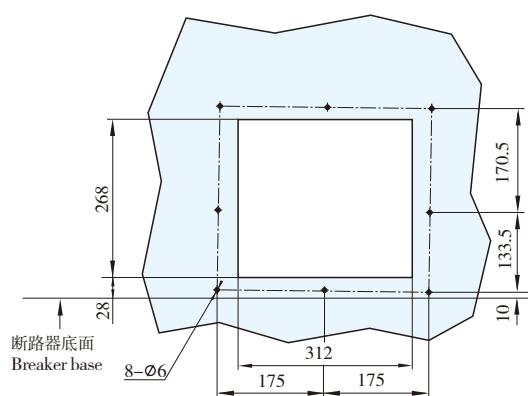


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为303.5mm

CW2-2000C/2000 Intelligent Universal Circuit Breakers with four poles (draw-out)

The drawing of Aperture Dimensions for mounting front cover of cabinut door

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 303.5mm

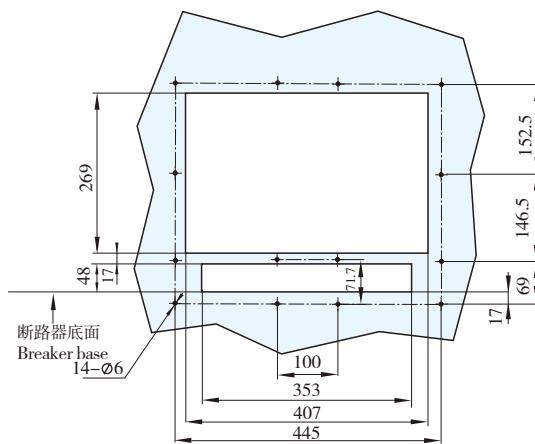

CW2-2000四极智能型万能式断路器（固定式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为303.5mm

CW2-2000 Intelligent Universal Circuit Breakers with four poles (fixed)

The drawing of Aperture Dimensions for mounting front cover of cabinut door

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 303.5mm

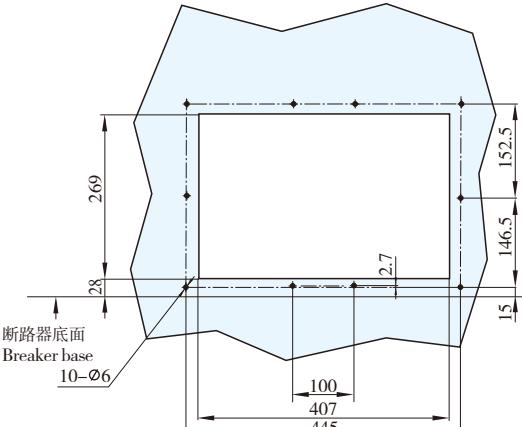



断路器门框开孔尺寸 APERTURE DIMENSIONS OF THE DOOR FRAME

- CW2-2500门框开孔尺寸 Aperture Dimension of CW2-2500 door frame

CW2-2500三极智能型万能式断路器（抽屉式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为256mm

CW2-2500 Intelligent Universal Circuit Breakers with three poles (draw-out)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 256mm

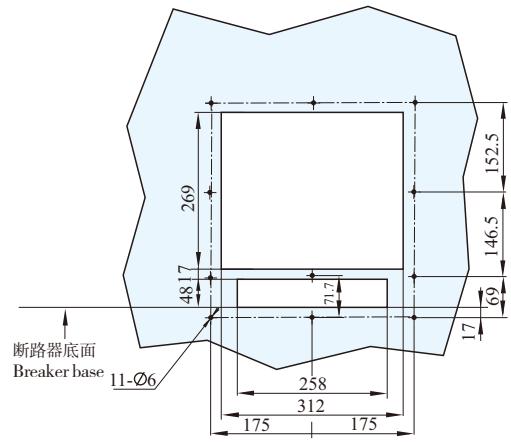

CW2-2500三极智能型万能式断路器（固定式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为256mm

CW2-2500 Intelligent Universal Circuit Breakers with three poles (fixed)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 256mm

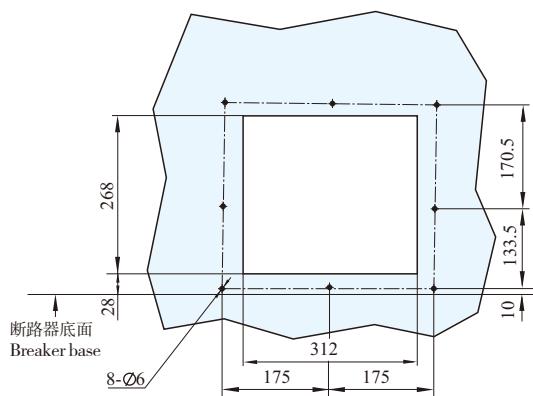

CW2-2500四极智能型万能式断路器（抽屉式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为303.5mm

CW2-2500 Intelligent Universal Circuit Breakers with four poles (draw-out)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 303.5mm

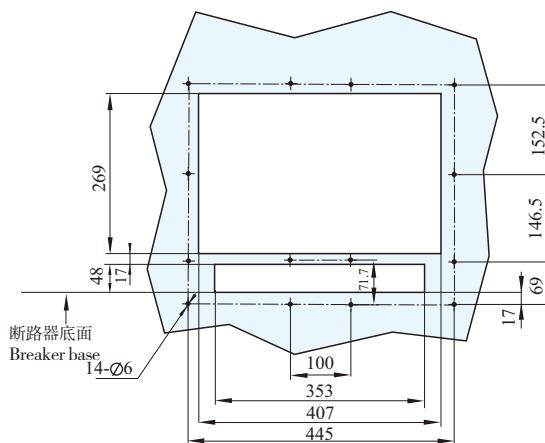

CW2-2500四极智能型万能式断路器（固定式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为303.5mm

CW2-2500 Intelligent Universal Circuit Breakers with four poles (fixed)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 303.5mm

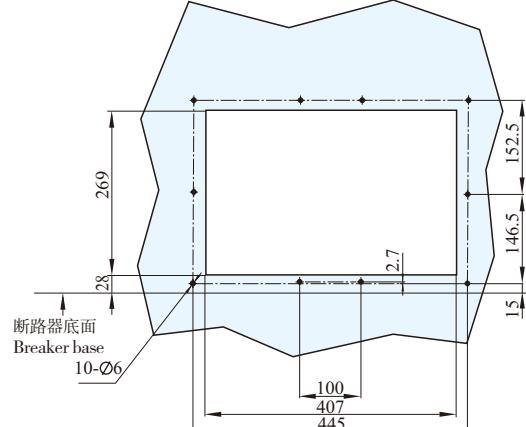



断路器门框开孔尺寸 APERTURE DIMENSIONS OF THE DOOR FRAME

- CW2-4000门框开孔尺寸 Aperture Dimension of CW2-4000 door frame

CW2-4000三极智能型万能式断路器（抽屉式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为264mm

CW2-4000 Intelligent Universal Circuit Breakers with three poles (draw-out)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 264mm

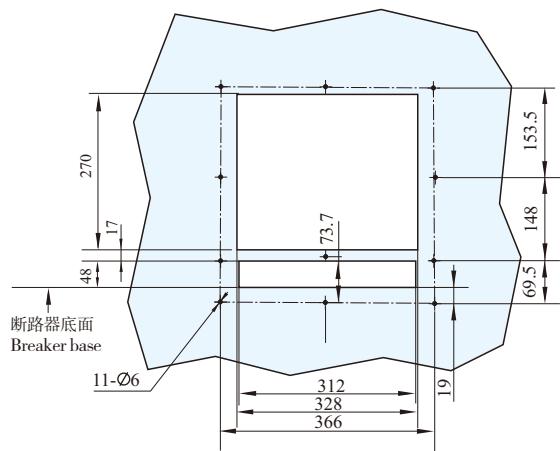

CW2-4000三极智能型万能式断路器（固定式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为264mm

CW2-4000 Intelligent Universal Circuit Breakers with three poles (fixed)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 264mm

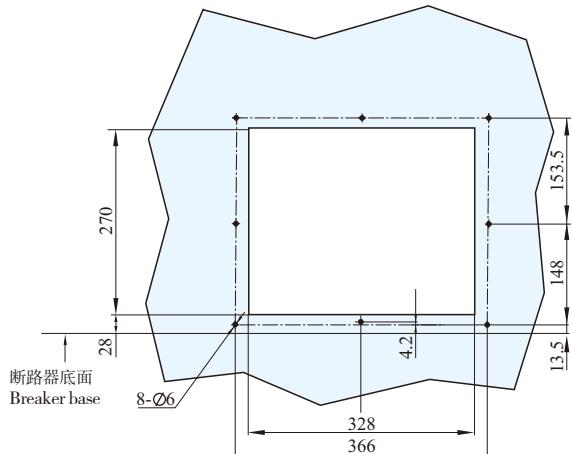

CW2-4000四极智能型万能式断路器（抽屉式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为320.5mm

CW2-4000 Intelligent Universal Circuit Breakers with four poles (draw-out)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 320.5mm

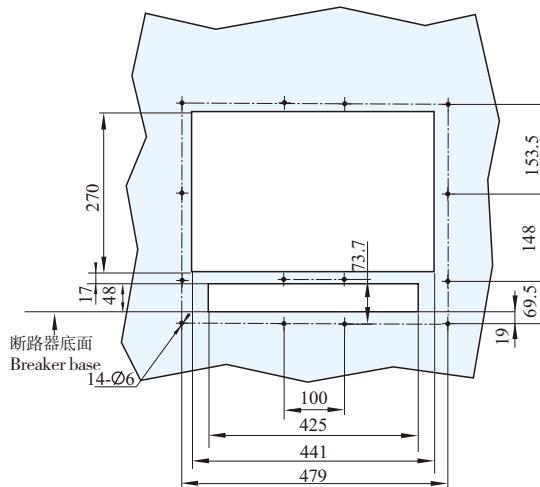

CW2-4000四极智能型万能式断路器（固定式）


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为320.5mm

CW2-4000 Intelligent Universal Circuit Breakers with four poles (fixed)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 320.5mm

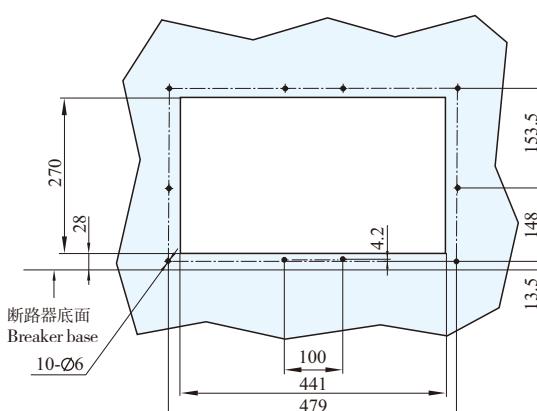



断路器门框开孔尺寸 APERTURE DIMENSIONS OF THE DOOR FRAME

- CW2-6300门框开孔尺寸 Aperture Dimension of CW2-6300 door frame

CW2-6300三极智能型万能式断路器(抽屉式)


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为264mm

CW2-6300 Intelligent Universal Circuit Breakers with three poles (draw-out)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 264mm

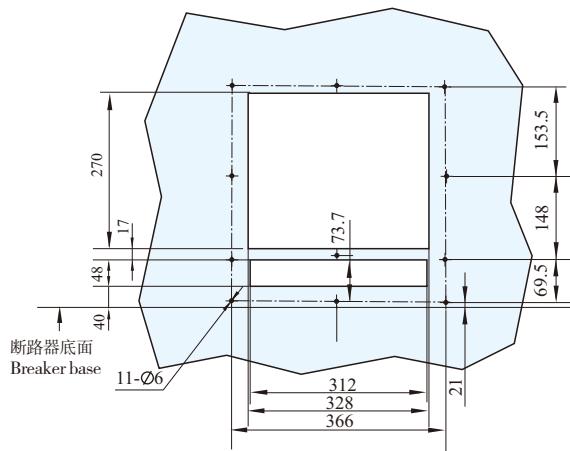

CW2-6300三极智能型万能式断路器(固定式)


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为264mm

CW2-6300 Intelligent Universal Circuit Breakers with three poles (fixed)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 264mm

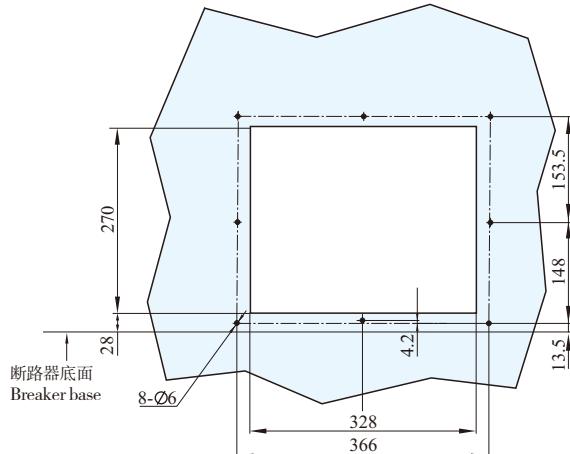

CW2-6300四极智能型万能式断路器(抽屉式)


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为320.5mm

CW2-6300 Intelligent Universal Circuit Breakers with four poles (draw-out)

The drawing of Aperture Dimensions for mounting cover of door frame

Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 320.5mm

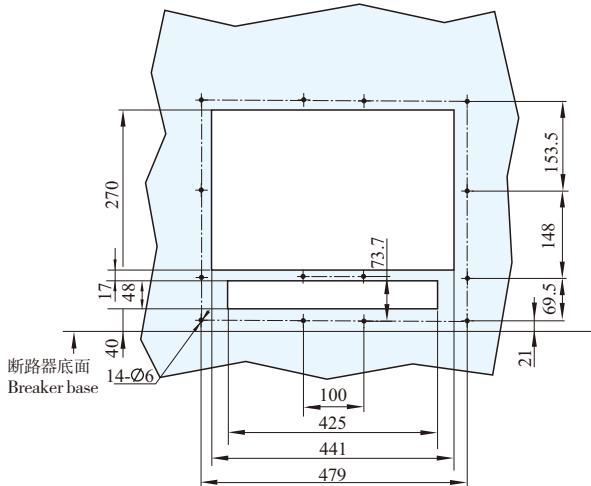

CW2-6300四极智能型万能式断路器(固定式)


安装门框前盖开孔图

控制面板中心离柜门右铰链最小距离为320.5mm

CW2-6300 Intelligent Universal Circuit Breakers with four poles (fixed)

The drawing of Aperture Dimensions for mounting cover of door frame



Distance from the panel center of the circuit breaker to the right hinge of cabinet door should be at least 320.5mm

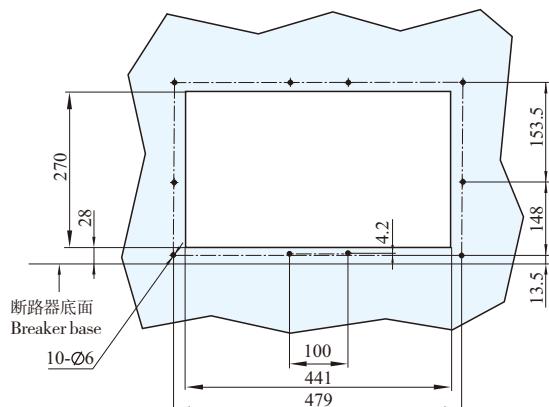



断路器安装安全间隙 MOUNTING SAFETY CLEARANCE



● 抽屉式断路器 Draw-out breaker

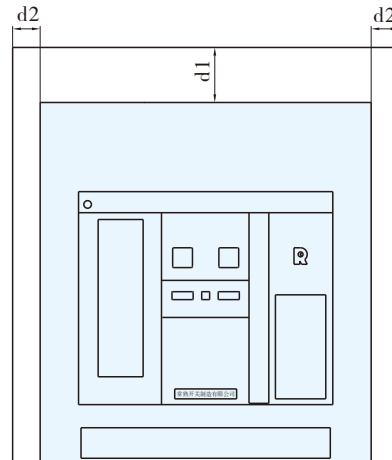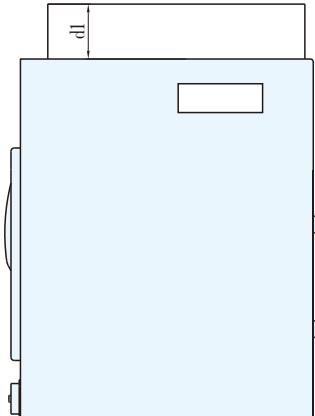

断路器与柜壁或带电部件最小距离
Minimn distance between breaker with switchboard wall or live part.

	柜壁 Switchboard wall	带电部分 Live part
d1(注note)(mm)	0	60
d2(mm)	0	60

● 固定式断路器 Fixed breaker

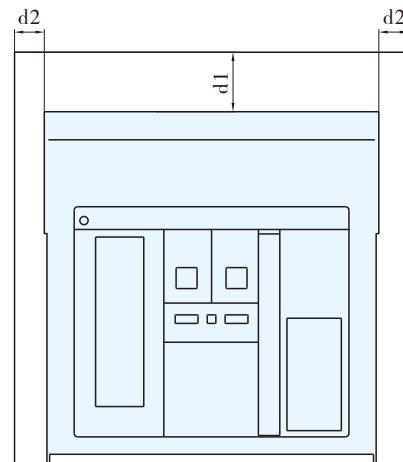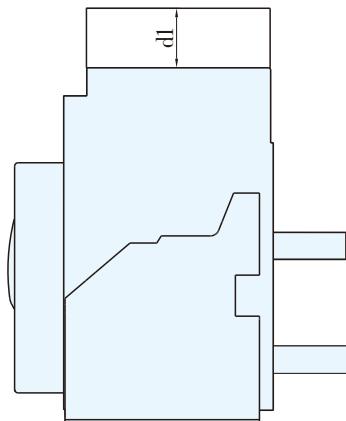

断路器与柜壁或带电部件最小距离
Minimn distance between breaker with switchboard wall or live part.

	柜壁 Switchboard wall	带电部分 Live part
d1(注note)(mm)	0	60
d2(mm)	0	60


注：安全间隙要考虑两次回路的走线。

Note:secondary circuit wiring must be considered for safety clearance.




附件外形尺寸和安装尺寸 OUTLINE AND MOUNTING DIMENSIONS OF ACCESSORIES


● 专用电源模块Special power module

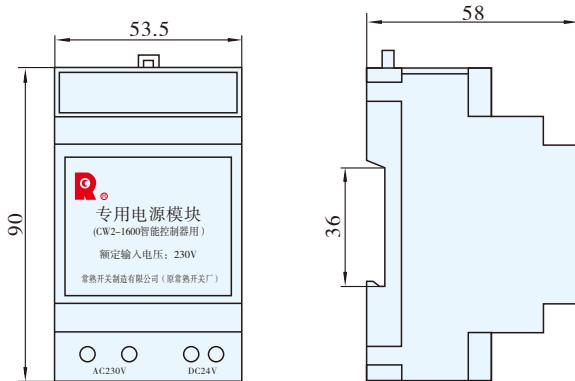

● 直流电源模块DC power supply module

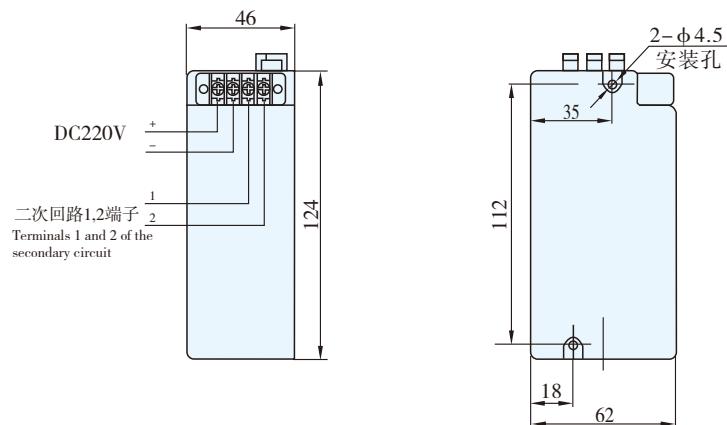


● DC24V电源模块DC24V power module

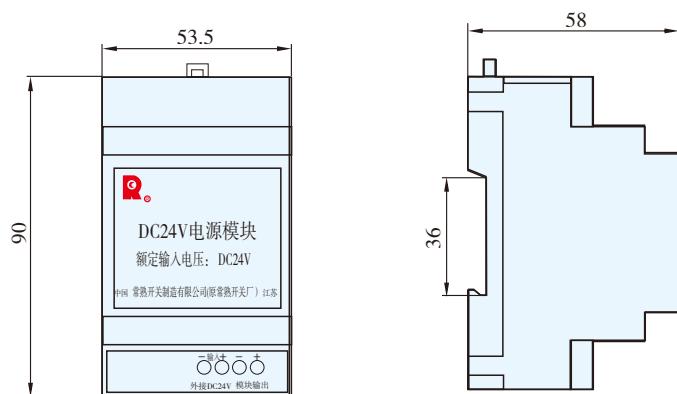





附件外形尺寸和安装尺寸 OUTLINE AND MOUNTING DIMENSIONS OF ACCESSORIES


● 电压转换模块 Voltage changover module

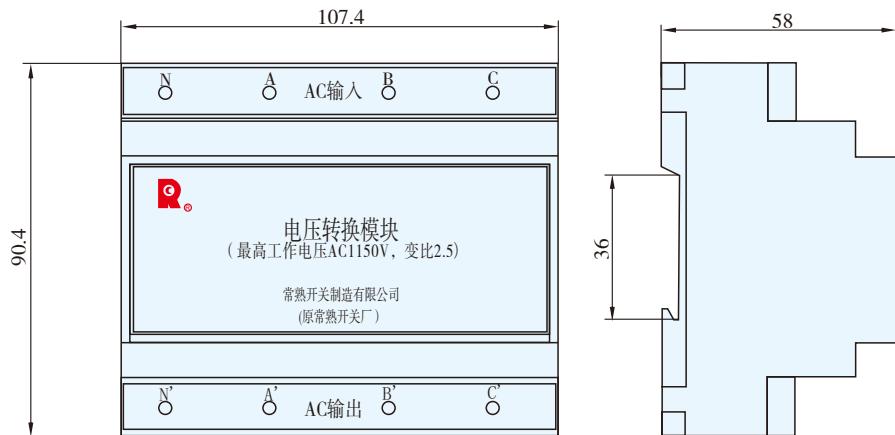

● 外接中性线互感器 Neutral transformer external connected

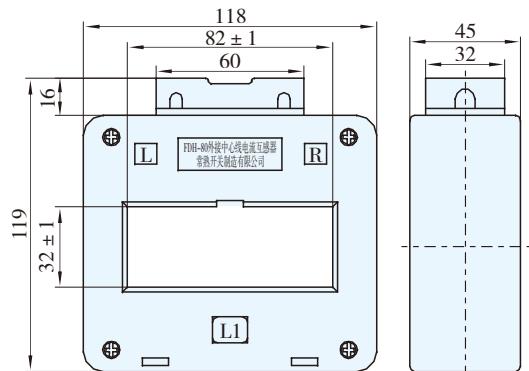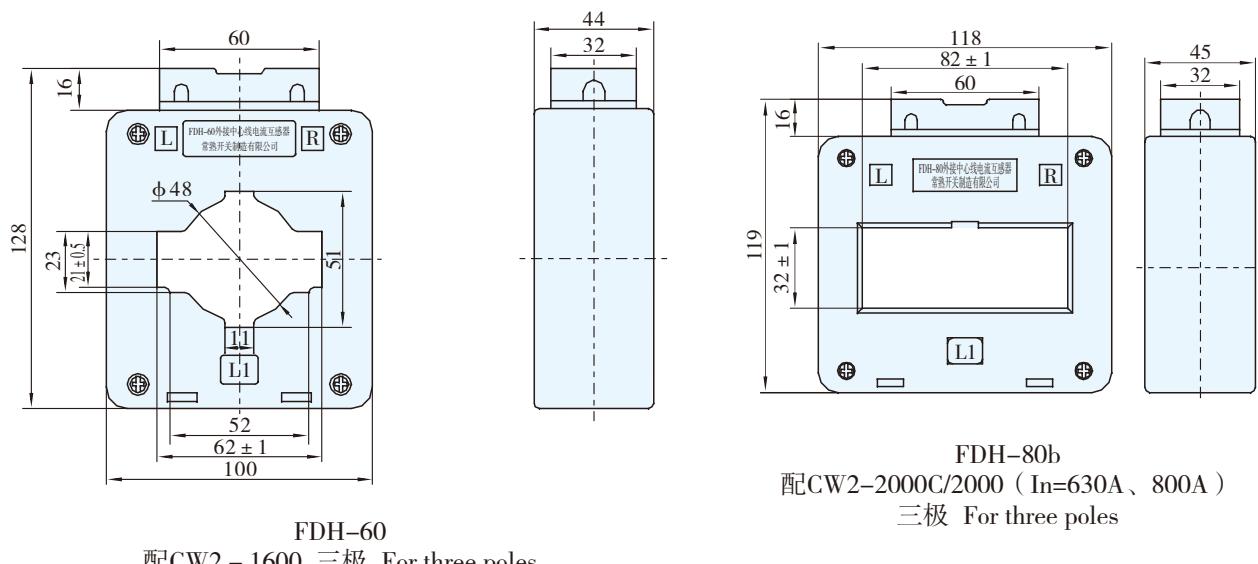


FDH-80
配CW2-2000C/2000/2500 (In=1000A ~ 2500A)
三极 For three poles

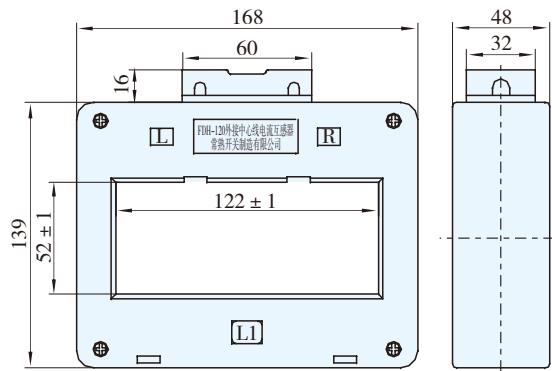

FDH-120
配CW2-4000/6300 三极 For three poles




附件外形尺寸和安装尺寸 OUTLINE AND MOUNTING DIMENSIONS OF ACCESSORIES

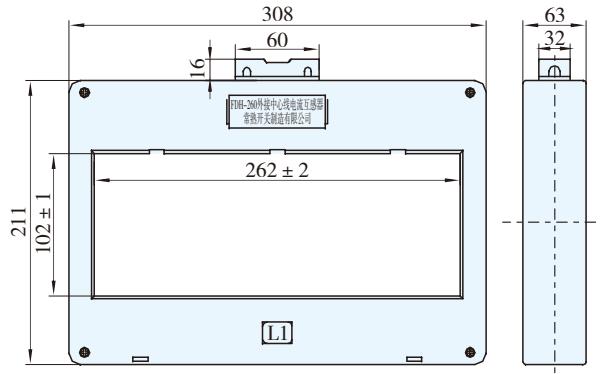


FDH-260
配CW2-4000/6300 三极 For three poles

注：当断路器为CW2-4000/6300三极时，用户可根据N极母线大小选择中性极互感器FDH-120或FDH-260。

- 抽屉座通信模块Draw-out socket communication module

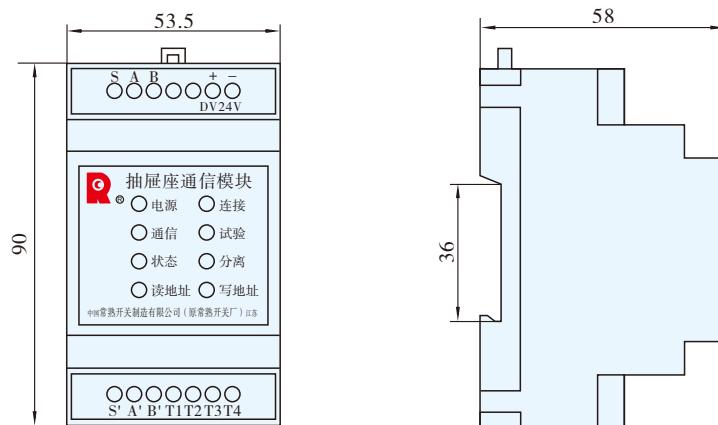

- CW2-1600断路器欠电压脱扣器延时模块Delay module of under-voltage release of CW2-1600 breaker

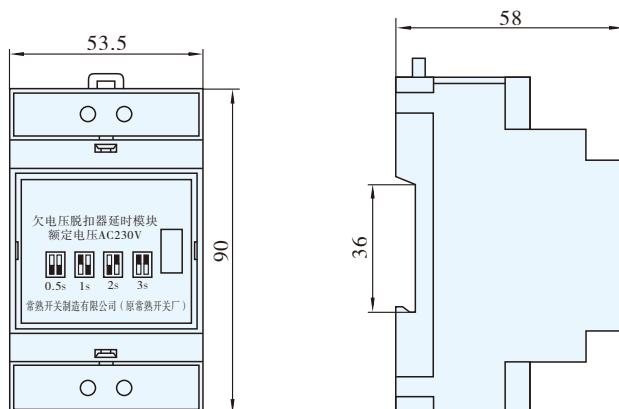



自动电源转换系统外形尺寸及安装尺寸


OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS
OF AUTOMATIC POWER SUPPLY SWITCH SYSTEM

- FZZ两路电源转换

FZZ two supply transfer



- 转接器

The switching unit

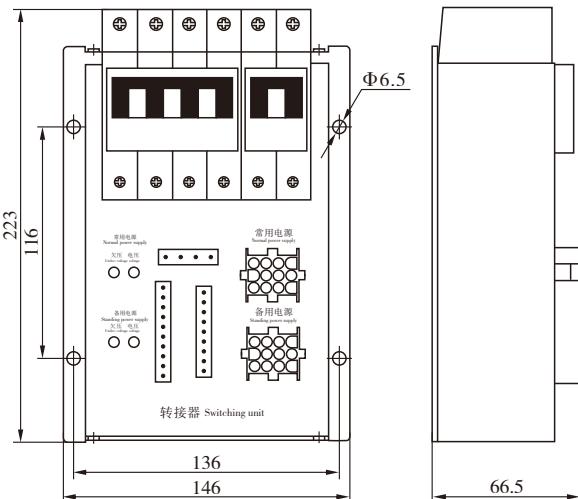



- R、S型自动转换控制器

Type R and S Automatic transfer controller

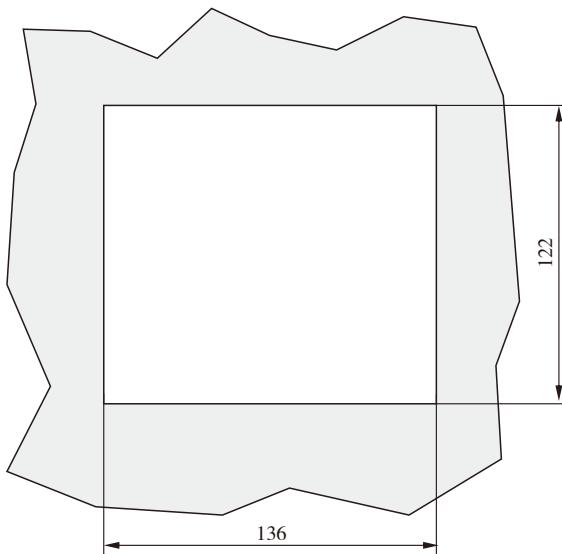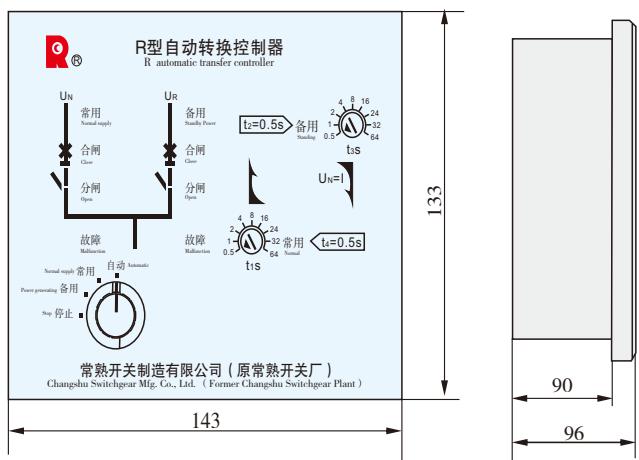

- F型自动转换控制器

Type F automatic transfer controller

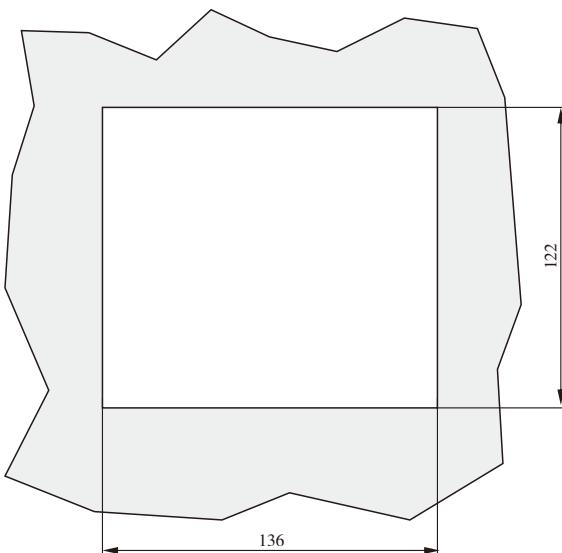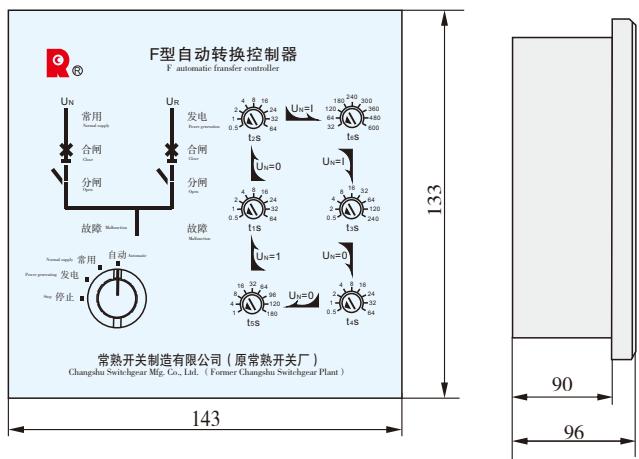




自动电源转换系统外形尺寸及安装尺寸

OUTLINE DIMENSIONS AND MOUNTING DIMENSIONS
OF AUTOMATIC POWER SUPPLY SWITCH SYSTEM


- ZR、ZS、ZF、ZTR、ZTS、ZTF自动转换控制器

Type ZR,ZS,ZF,ZTR,ZTS,ZTF automatic transfer controller

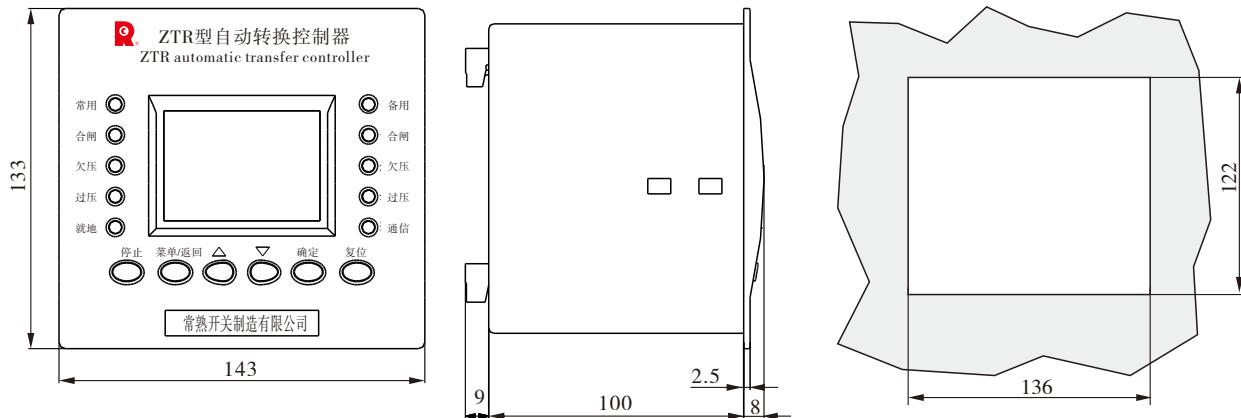


- 两进线一母联和三电源转换 FLZ two incoming one bus couple supply and three supplies transfer

● WTT3/WTB3/WTT5自动转换控制器 WTT3/WTB3/WTT5 automatic transfer controller

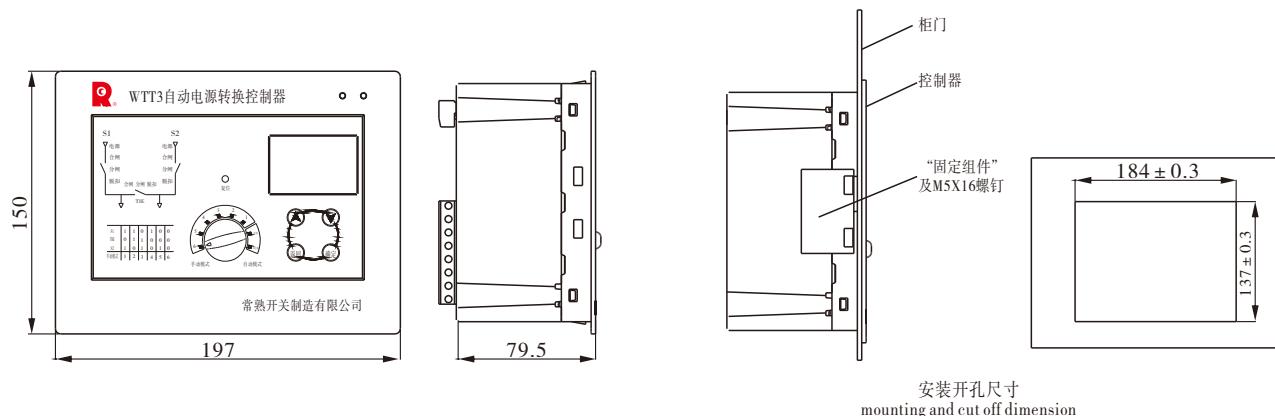


- 转接器 Adapter (WTT3/WTB3/WTT5自动转换控制器)


(WTT3/WTB3/WTT5 automatic transfer controller)

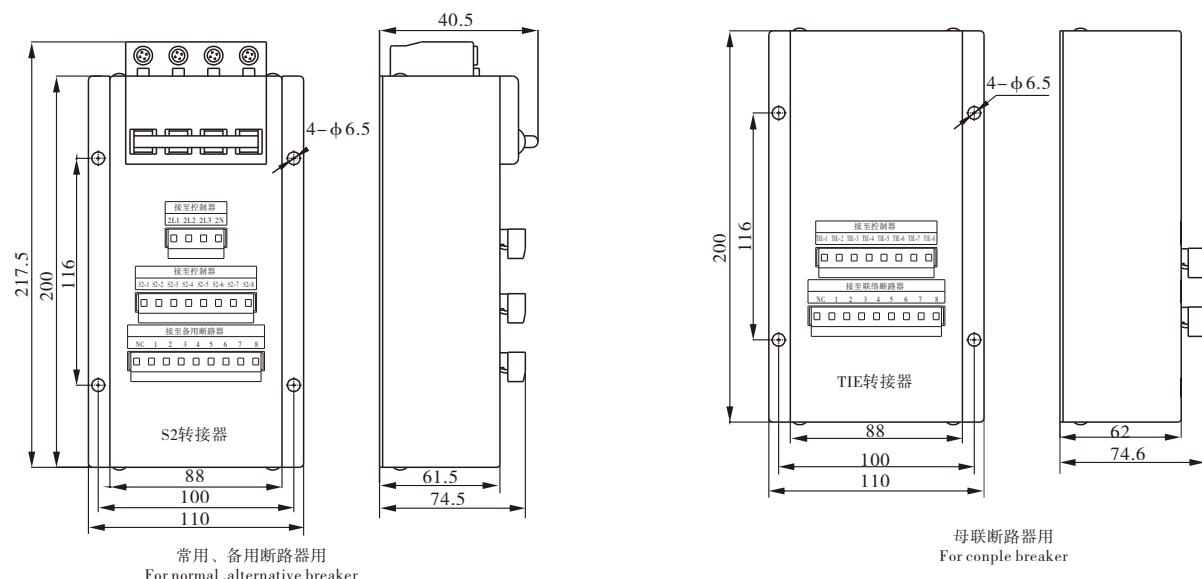

CW2-1600断路器二次回路接线图配 L25、M25/MY25、M26/MY26、P25、P26 型智能控制器
 Wiring diagram of the secondary circuit of CW2-1600 circuit breakers
 equipped with type L25, M25/MY25, M26/MY26, P25 and P26 intelligent controllers

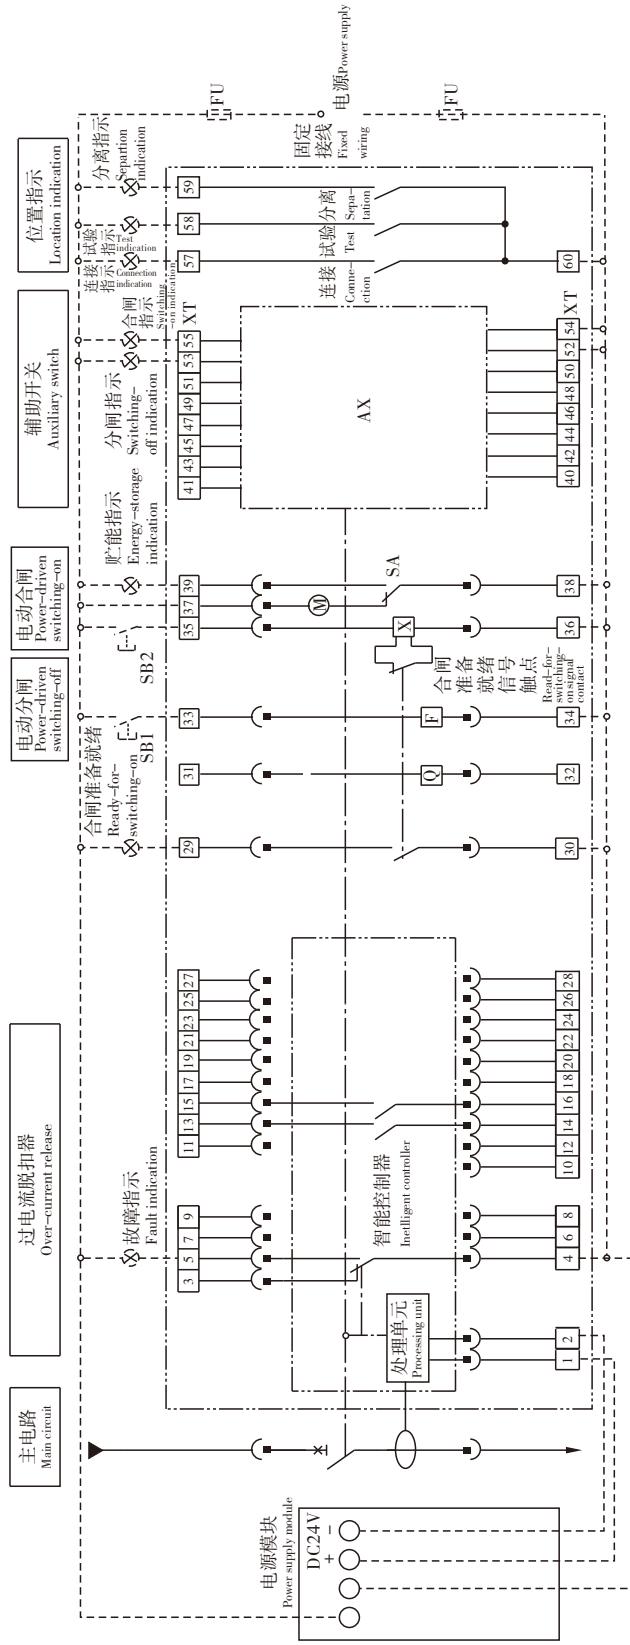

辅助开关型式 The pattern of auxiliary switch

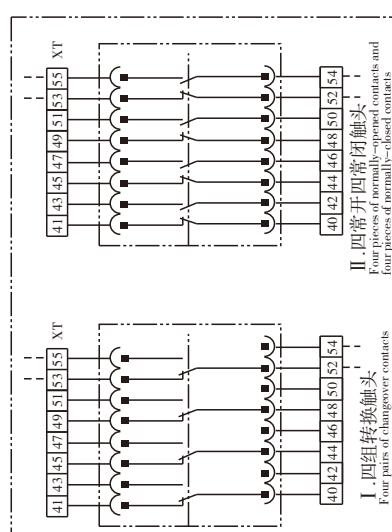

注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.




注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.



注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.



注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.



注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.



注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.



注：虚线部分由用户自接。若处理单元、欠压脱扣器、分励脱扣器、合闸电磁铁等额定电压不同应分别接不同电源线。In the following cable, √: standard configuration; ○: optional configuration; ×: none.

In the following cable, √: standard configuration; ○: optional configuration; ×: none.


特别注意：辅助电源电压为AC230V、400V时，需通过CW2-1600智能控制器专用电源模块转换成DC24V接入1、2端子；DC110V、220V时需通过直流电源模块转换成DC24V接入1、2端子。辅助电源电压为DC24V时，需通过DC24V转DC24V转DC24V接入1、2端子。

Special Note: When the voltage of auxiliary power supply is AC230V or AC400V, power supply module of CW2-1600 intelligent should be transformed into DC24V in connection with terminals of 1 and 2.


When the voltage of auxiliary power supply is DC110V or DC24V, power supply module should be transformed into DC24V in connection with terminals of 1 and 2.

When the voltage of auxiliary power supply is DC24V, power supply module should be transformed into DC24V in connection with terminals of 1 and 2.

CW2-1600断路器二次回路接线图配H26/HY26、P25、P26通信型智能控制器 Wiring diagram of the secondary circuit of CW2-1600 circuit breakers equipped with type H26/HY26, P25 and P26 communicate intelligent controllers


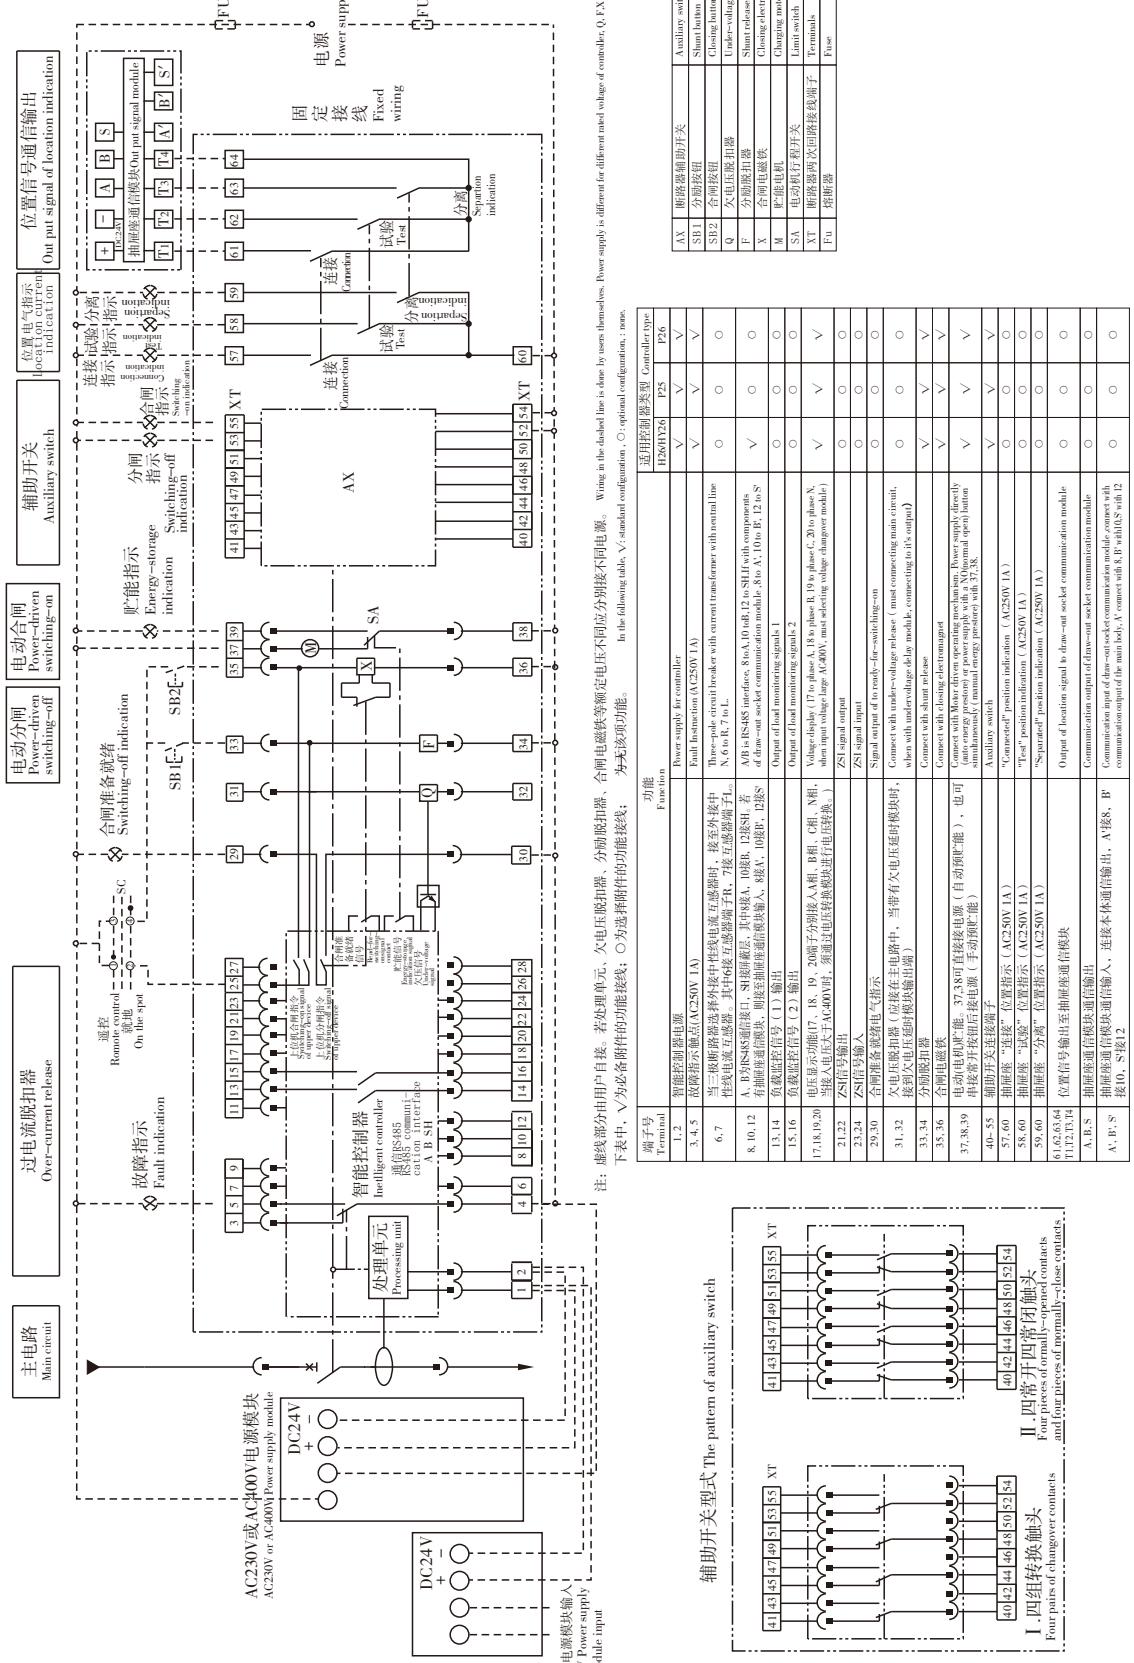


CW2-2000C ~ 6300断路器二次回路接线图配 L25、M25/MY25、M26/MY26、P25、P26 型智能控制器
Wiring diagram of the secondary circuit of CW2-2000C-6300 circuit breakers equipped with type
L25,M25/MY25,M26/MY26,P25 and P26 intelligent controllers

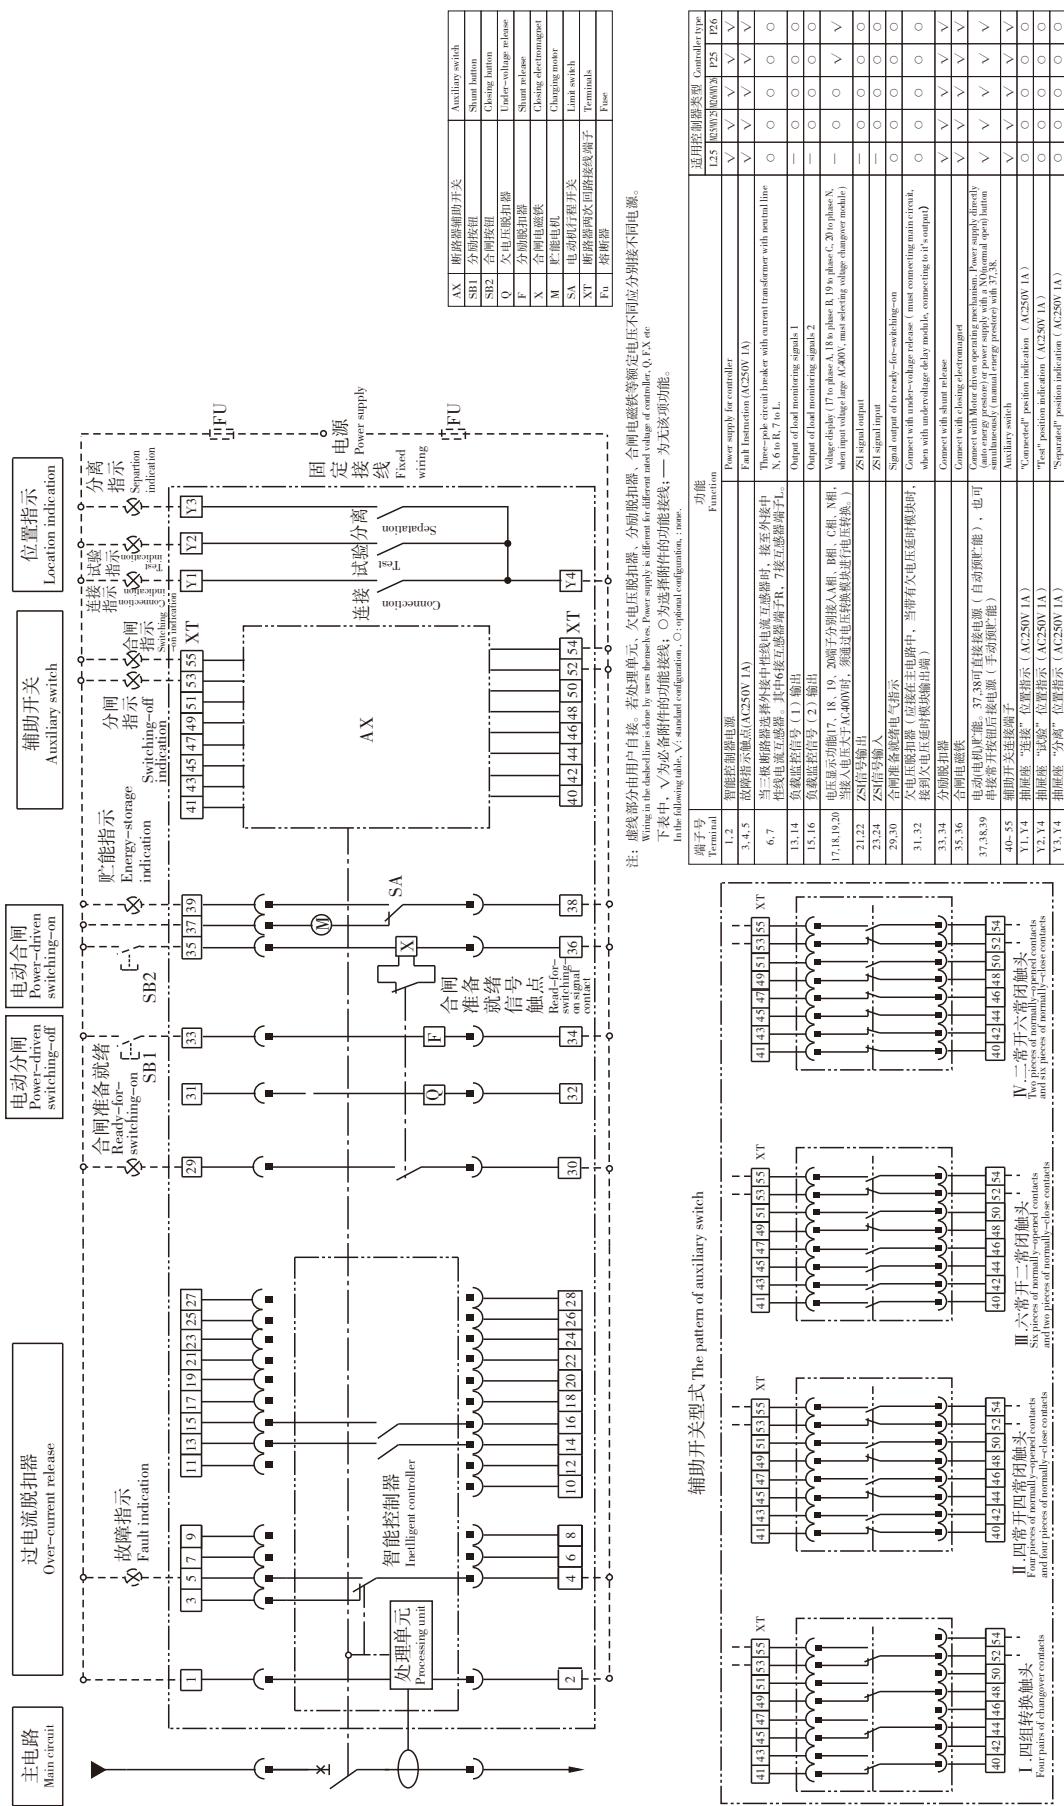




**CW2-2000C ~ 6300断路器二次回路接线图配H26/HY26、P25、P26通信型智能控制器
equipped with type H26/HY26, P25 and P26 communicate intelligent controllers**

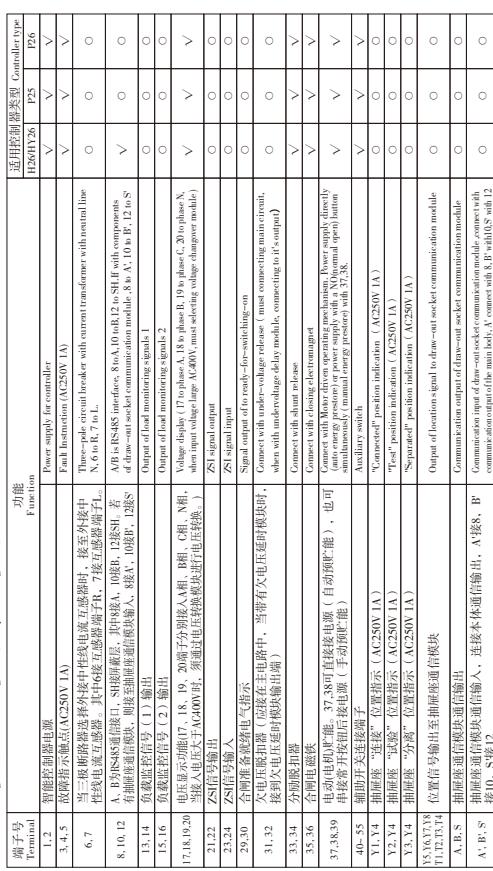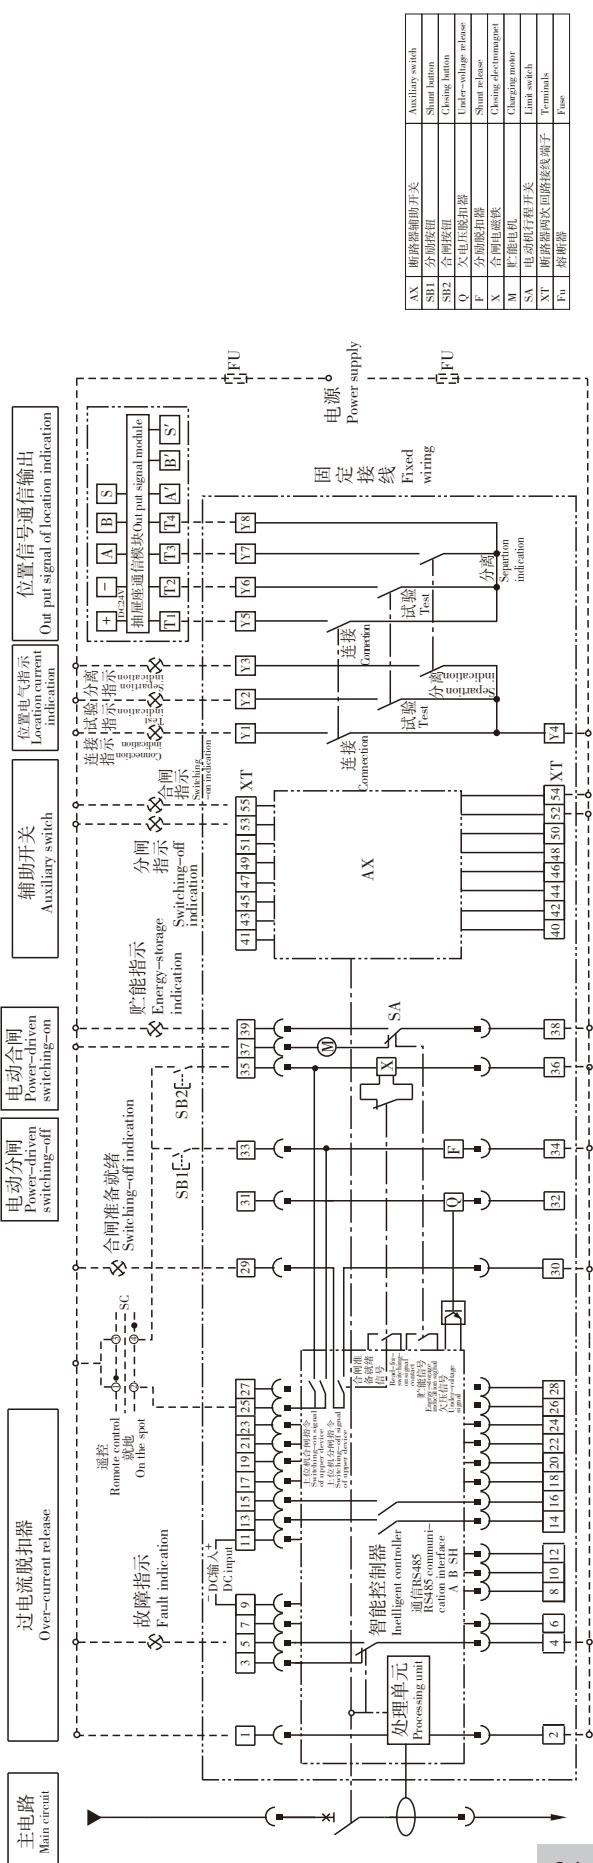

注：接线部分由用户自接。若带单位，X为该条接线的功能接线；○为选装部件的功能接线。
In busbar part, users self-connect. If with unit, X is the functional connection of this line; ○ is optional component connection.

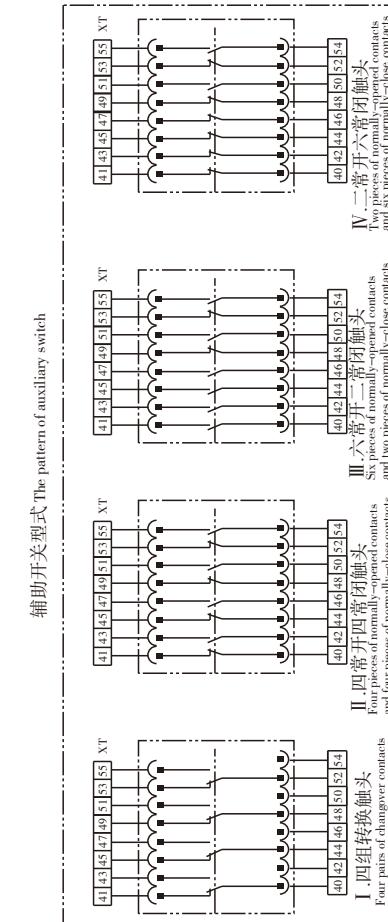


特别注意：辅助电源电压为DC110V、220V时需通过直流电源模块转换成DC24V接入1、2端子。
Special Note: When the voltage of power supply is DC110V or DC220V, DC power supply module should be transformed into DC24V in connection with terminals of 1 and 2.



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (R、S型自动转换控制器)
CW2—1600断路器
 Wiring diagram of the automatic power supply system for normal supply to standby
 supply system (R,S automatic transfer controller)
 CW2-1600 circuit breakers

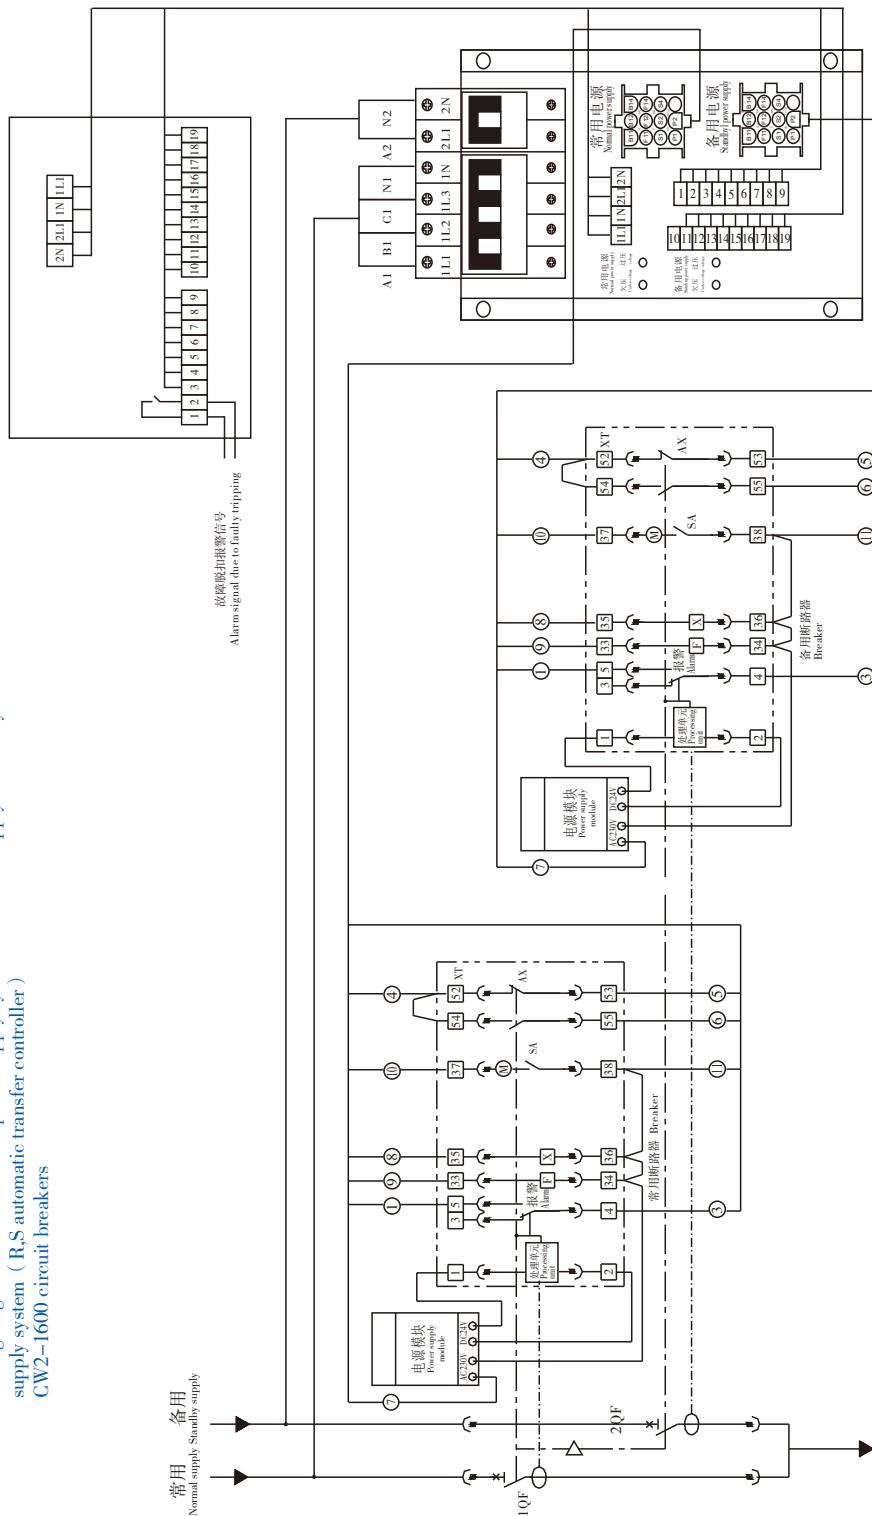

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器电压为DC24V、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。
 Note:1.As shown in the above diagram the breaker is open and connecting,it has been charged and there is no current in the loop.
 2.When ATS is used DC24V voltage or intelligent controller,AC230V voltage for shunt release, closing magnet and automatic operation mechanism.

AX—Auxiliary switch

F—Shunt release


X—The electro-magnet to close the breaker

M—Charging motor

SA—Overtravel-limit switch for the charging motor of the breaker

XT—Terminals for the secondary circuit of the breaker

常用-发电自动电源转换系统电气线路图 (F型自动转换控制器)
CW2-1600 断路器
 Wiring diagram of the automatic power supply switch system for normal
 supply to power generating supply system (F automatic transfer controller)
 CW2-1600 circuit breakers

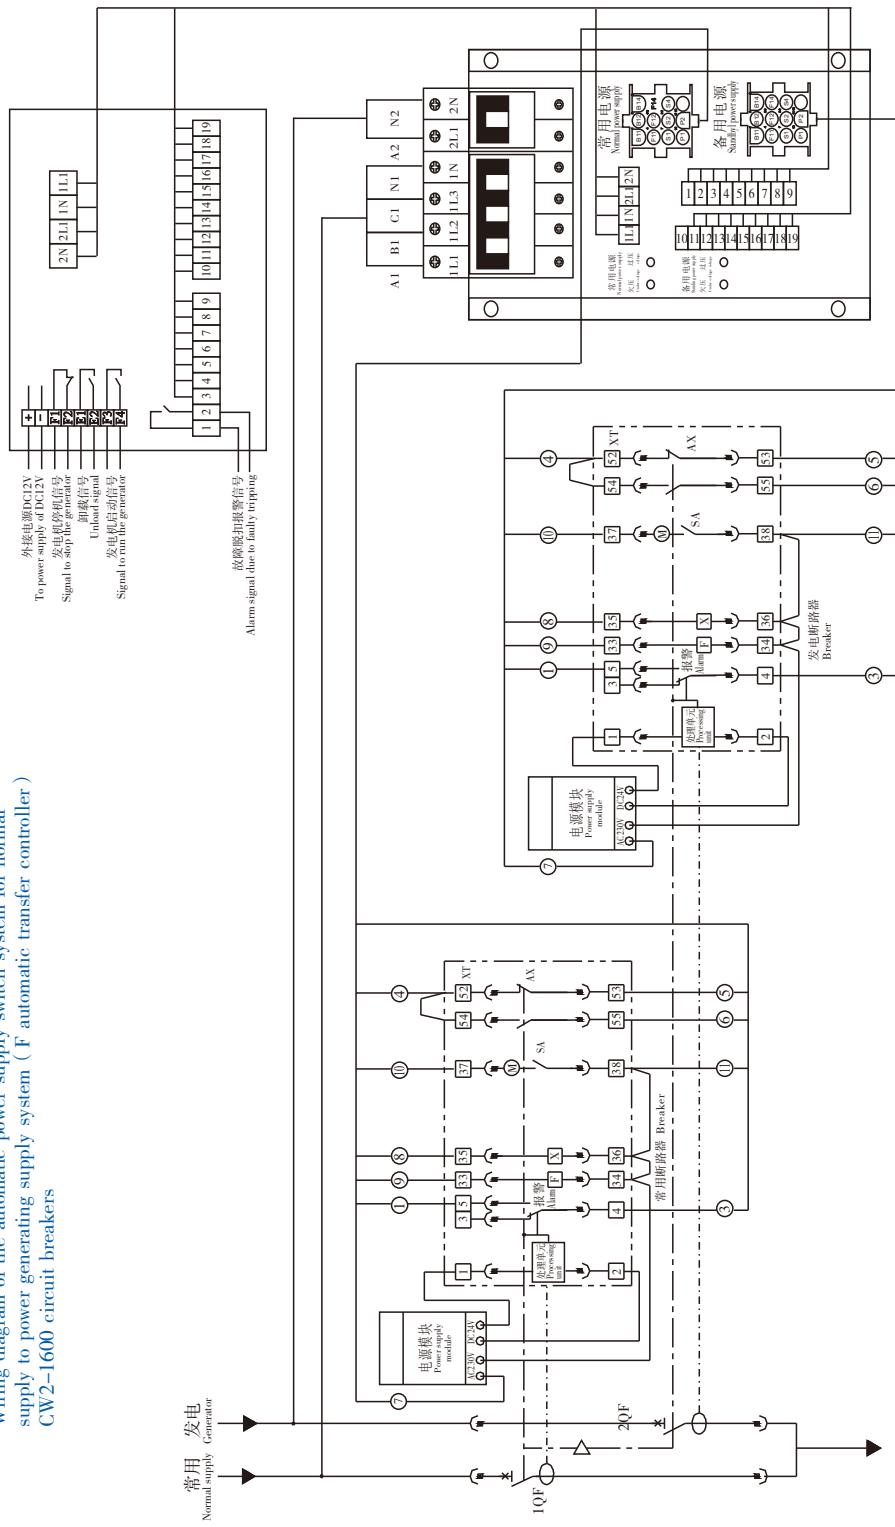

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器电压为DC24V，分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。


Note:1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.
 2. When ATS is used DC24V voltage for intelligent controller, AC230V voltage for shunt release, closing magnet and automatic operation mechanism.

- AX—Auxiliary switch
- F—Shunt release
- X—The electro-magnet to close the breaker
- M—Charging motor
- SA—Overtravel-limit switch for the charging motor of the breaker
- XT—Circuit breaker secondary connection terminal
- 说明：当常用电源正常时，发电机启动信号（F3、F4）、发电机停机信号（F1、F2）处于断开位置。
 当常用电源失电后，发电机停机信号（F1、F2）经5延时后闭合。
 当发电机电源发出后，发电机启动信号（F3、F4）立即断开，卸载信号（E1、E2）经1延时后闭合。
 当常用电源恢复正常后，卸载信号（E1、E2）立即断开，发电机停机信号（F1、F2）经6延时后断开。



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZR型、ZS型自动转换控制器)
CW2-1600断路器
 Wiring diagram of the automatic power supply system for normal supply to standby
 supply system (ZR/ZS automatic transfer controller)
CW2-1600 circuit breaker

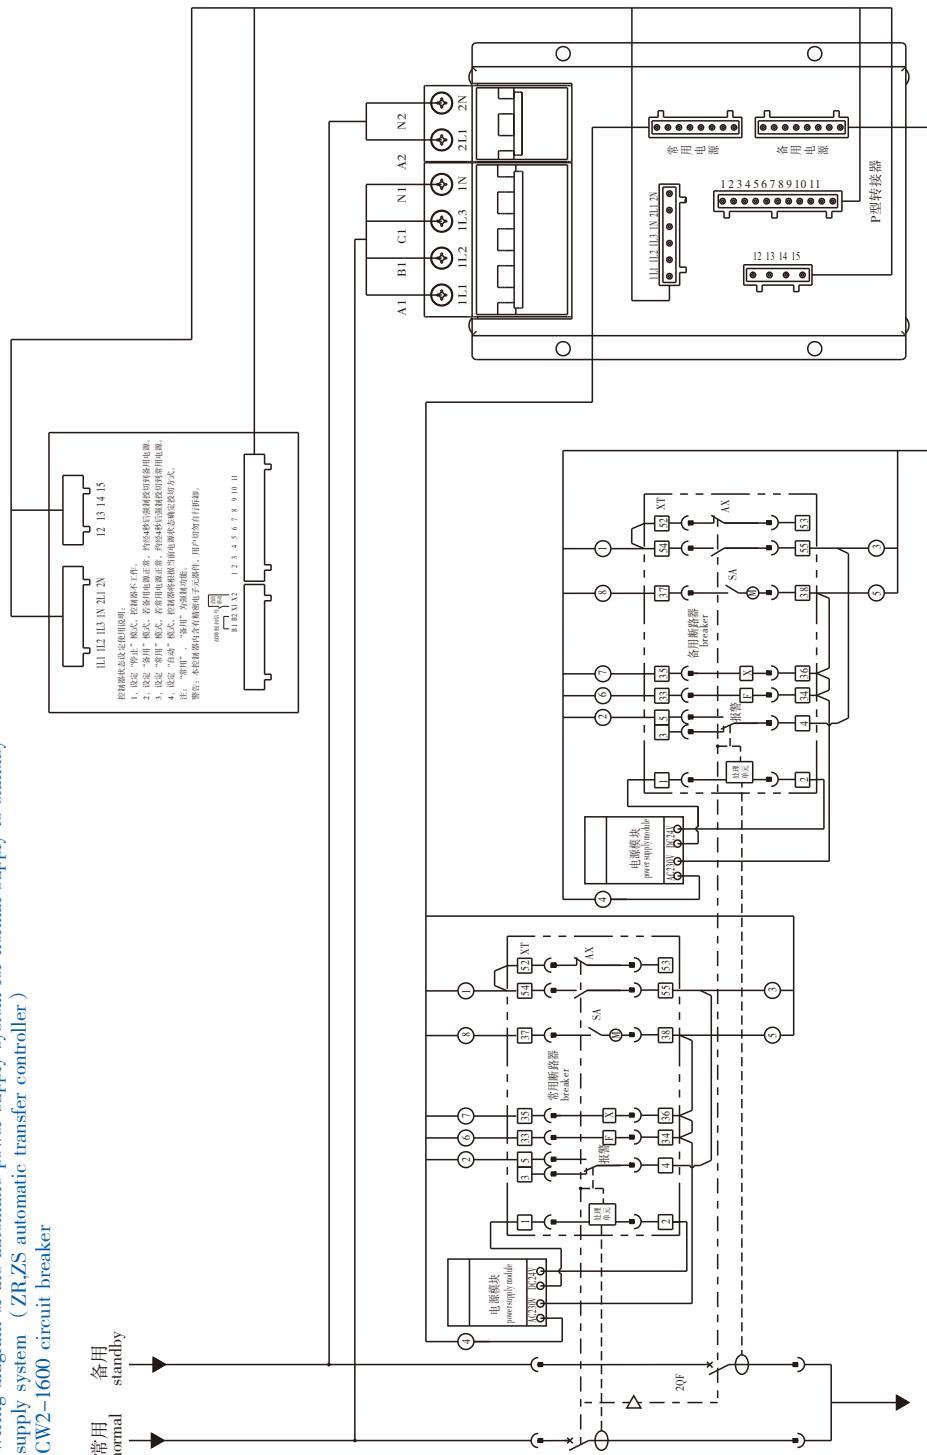

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。
 2.当采用自动电源转换系统供电时，断路器智能控制器电压为DC24V，分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram the breaker is open and connecting it has been charged and there is no current in the loop.
 2. When ATS is used DC24V voltage for intelligent controller, AC230V voltage for shunt release, closing magnet and automatic operation mechanism.


AX—断路器辅助开关
 F—Shunt release
 X—The electro-magnet to close the breaker
 M—Charging motor
 SA—Overtravel-limit switch for the shunt release, closing magnet and automatic operation mechanism
 XT—Terminals for the secondary circuit of the breaker

AX—Auxiliary switch
 F—Shunt release
 X—The electro-magnet to close the breaker
 M—Charging motor
 SA—Overtravel-limit switch for the shunt release, closing magnet and automatic operation mechanism
 XT—Terminals for the secondary circuit of the breaker



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-发电自动电源转换系统电气线路图 (ZF型自动转换控制器)
CV2-1600断路器
Wiring diagram of the automatic power supply system for normal supply to standby
supply system (ZF automatic transfer controller)
CW2-1600 circuit breaker

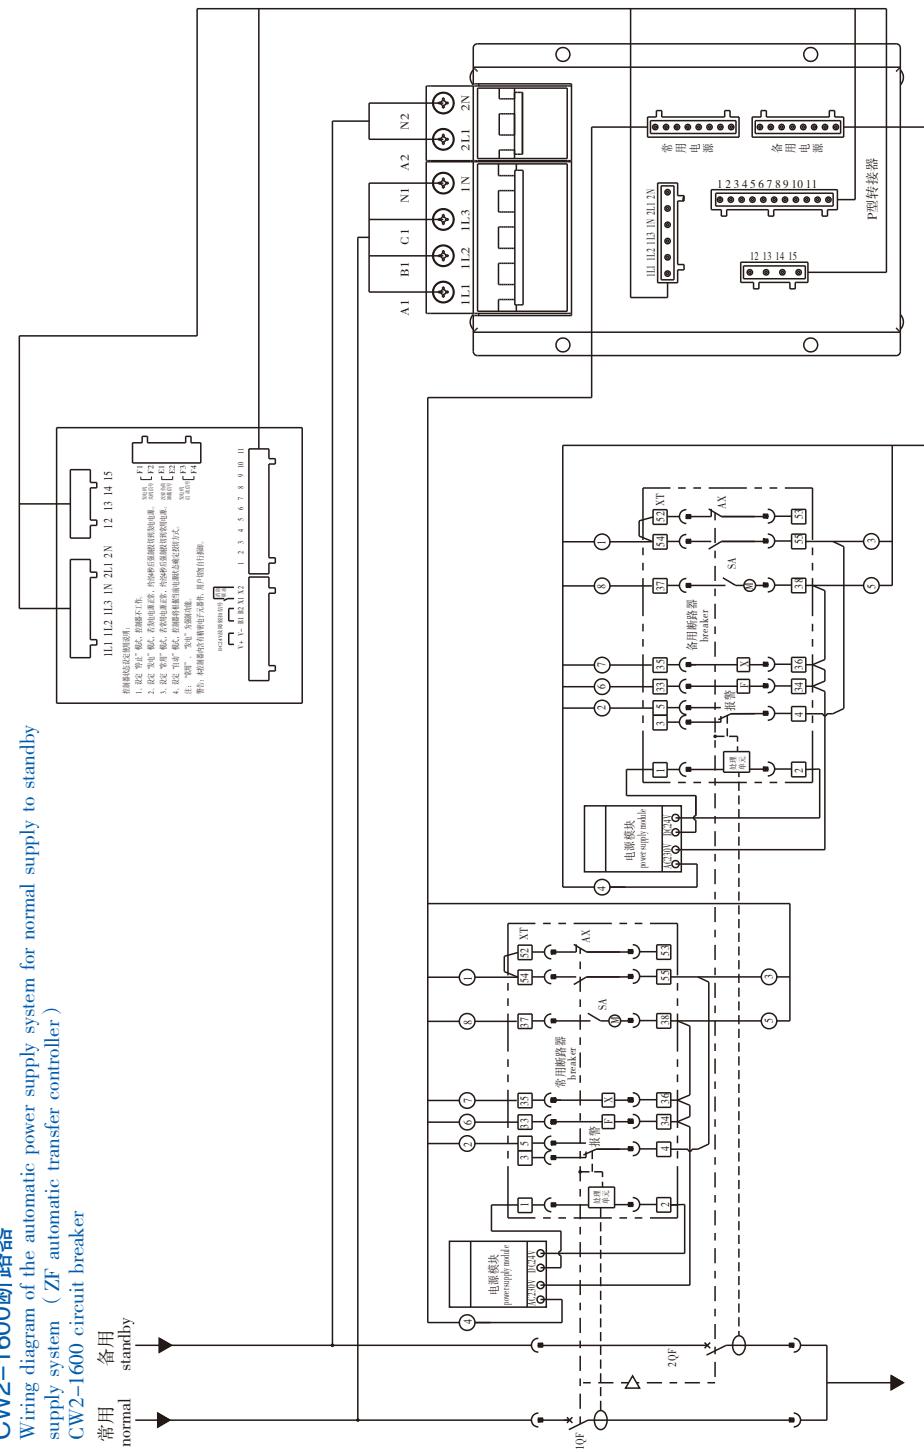

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。


2.当采用自动电源转换系统供电时，断路器智能控制电压为DC24V，分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。
Note: 1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.
2. When ATS is used DC24V voltage for intelligent controller, AC230V voltage for shunt release, closing magnet and automatic operation mechanism.

- 说明：当常用电源正常时，发电机启动信号（F3、F4）、发电机停机信号（F1、F2）立即闭合，发电机启动信号（F3、F4）经5延时后闭合。当常用电源失电后，发电机停机信号（F1、F2）经5延时后闭合。当发电机电源发出后，发电机启动信号（F3、F4）立即断开，卸载信号（E1、E2）经1延时后闭合。当常用电源恢复正常后，卸载信号（E1、E2）立即断开，发电机停机信号（F1、F2）经6延时后断开。



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZTR型, ZTS型自动转换控制器)
CW2-1600断路器
Wiring diagram of the automatic power supply system for normal supply to standby
supply system (ZTR,ZTS automatic transfer controller)
CW2-1600 circuit breaker

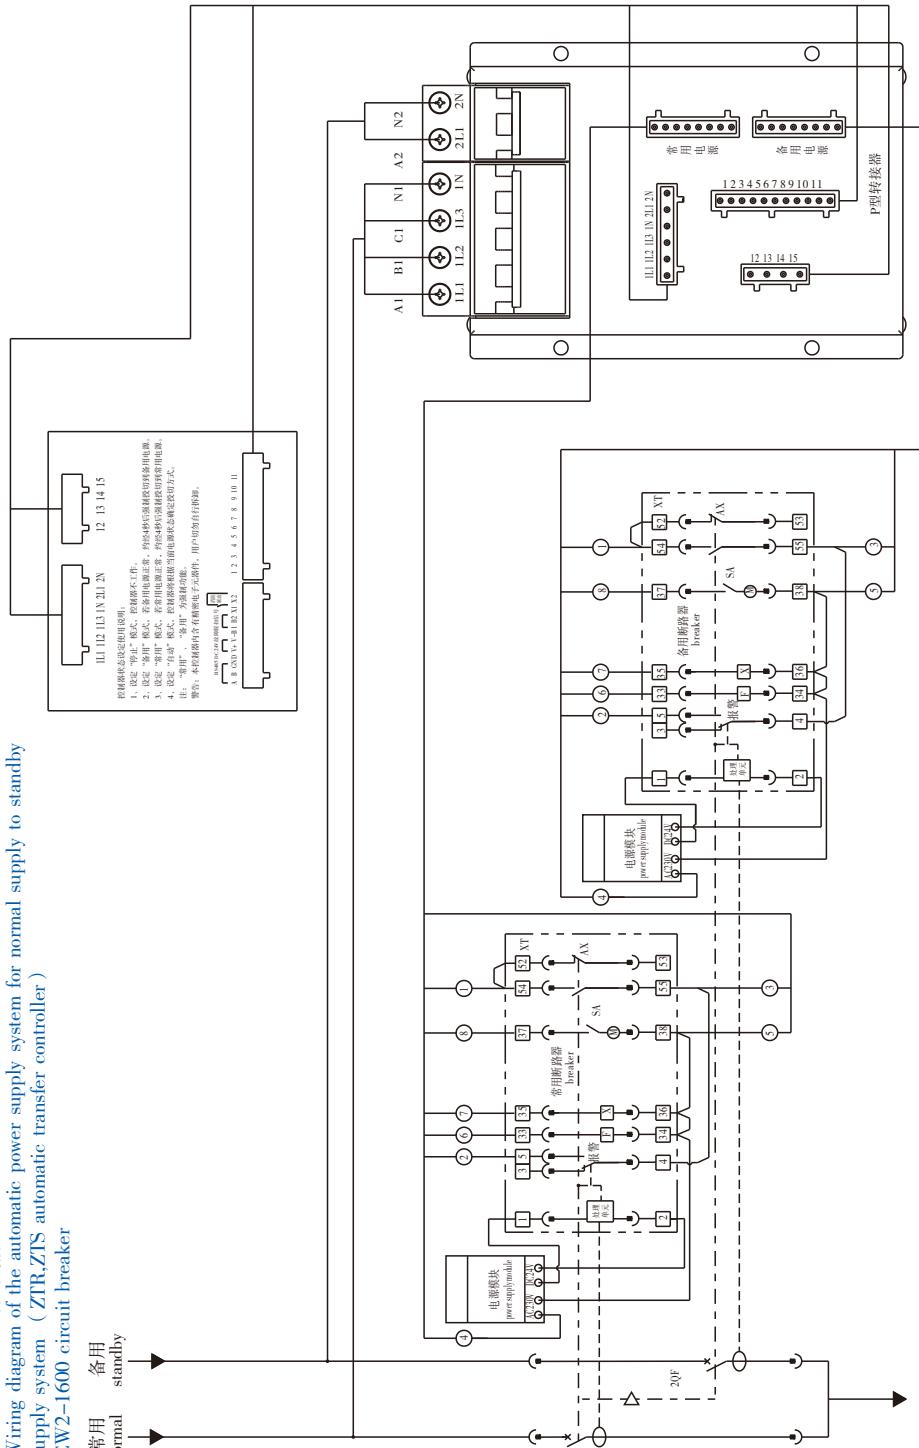

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器电压为DC24V，分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。
Note: 1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.
2. When ATS is used DC24V voltage for intelligent controller, AC230V voltage for shunt release, closing magnet and automatic operation mechanism.

AX—断路器辅助开关
F—断路器分励脱扣器
X—断路器合闸电磁铁

M—断路器贮能电机
SA—断路器贮能电机行程开关

XT—断路器二次回路接线端子

AX—Auxiliary switch
F—Shunt release

X—The electro-magnet to close the breaker

M—Charging motor

SA—Overtravel-limit switch for the charging motor of the breaker

XT—Terminals for the secondary circuit of the breaker




自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZTF型自动转换控制器)

CW2-1600断路器
Wiring diagram of the automatic power supply system for normal supply to standby supply system (ZTF automatic transfer controller)

CW2-1600 circuit breaker

常用
normal
→
备用
standby
→

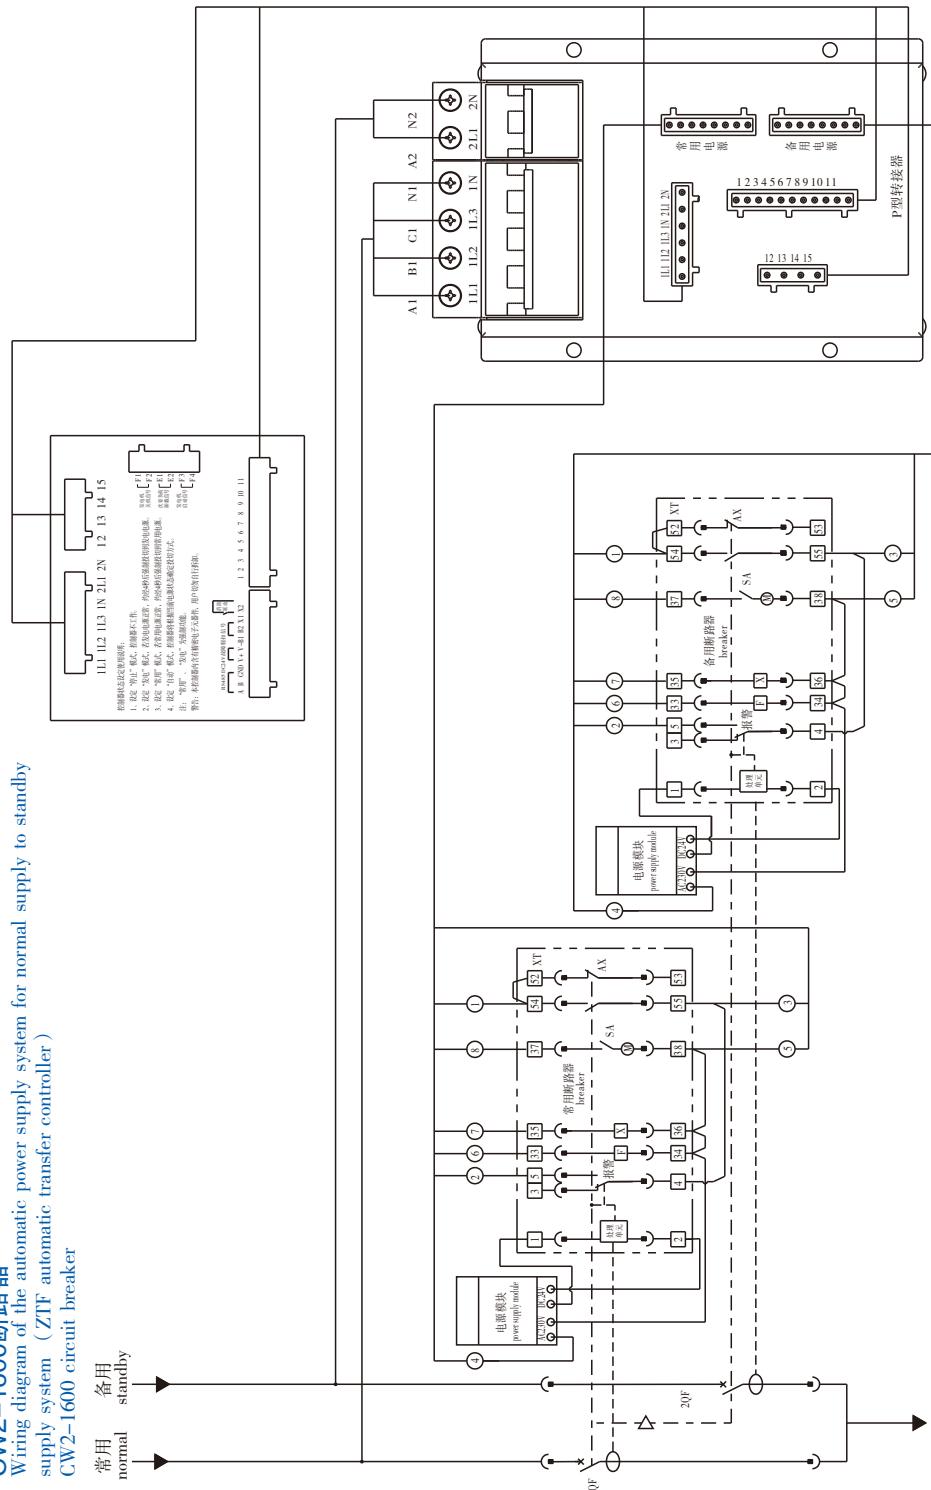

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。
2.当采用自动电源转换系统供电时，断路器智能控制器电压为DC24V，分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram, the breaker is open and connecting, it has been charged and there is no current in the loop.
2. When ATS is used DC24V voltage for intelligent controller, AC230V voltage for shunt release, closing magnet and automatic operation mechanism.

AX—断路器辅助开关

F—Shunt release

X—The electro-magnet to close the breaker

M—Charging motor


SA—Overtravel-limit switch for the charging motor of the breaker
XT—Terminals for the secondary circuit of the breaker

说明：当常用电源正常时，发电机启动信号（F3、F4）、发电机停机信号（F1、F2）均处于断开位置。
当常用电源失电后，发电机停机信号（F1、F2）经0.5延时后闭合。
启动信号（F3、F4）经1延时后闭合。
当发电机电源发出后，发电机启动信号（F3、F4）立即断开，卸载
信号（E1、E2）经1延时后闭合。
当常用电源恢复后，卸载信号（E1、E2）立即断开，发电机停机信
号（F1、F2）经0.6延时后断开。



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (R、S型自动转换控制器)
 CW2-2000C ~ 6300断路器
 Wiring diagram of the automatic power supply system for normal supply to standby
 supply system (R,S automatic transfer controller)
 CW2-2000C ~ 6300 circuit breakers

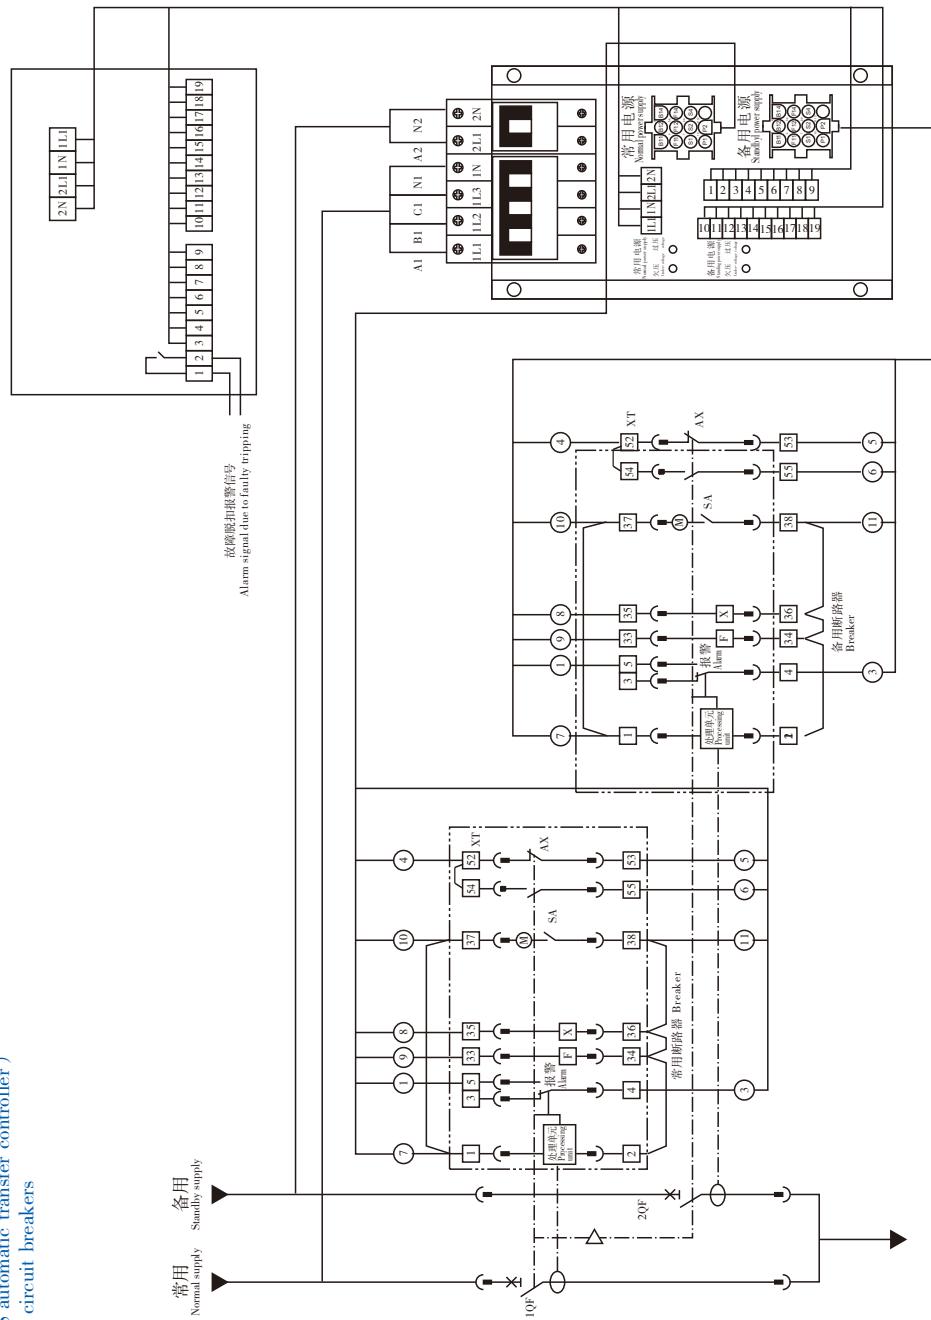

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。
 2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram the breaker is open and connecting; it has been charged and there is no current in the loop.
 2. When ATS is used all voltage ratings are AC230V for intelligent controller, shunt release, closing magnet and automatic operation mechanism.

AX—断路器辅助开关

F—断路器分励脱扣器

X—断路器合闸电磁铁

M—断路器贮能电机


SA—断路器贮能电机行程开关

XT—断路器二次回路接线端子



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-发电自动电源转换系统电气线路图 (F型自动转换控制器)
CW2-2000C ~ 6300断路器
 Wiring diagram of the automatic power supply switch system for normal
 supply to power generating supply system (F automatic transfer controller)
CW2-2000C ~ 6300 circuit breakers

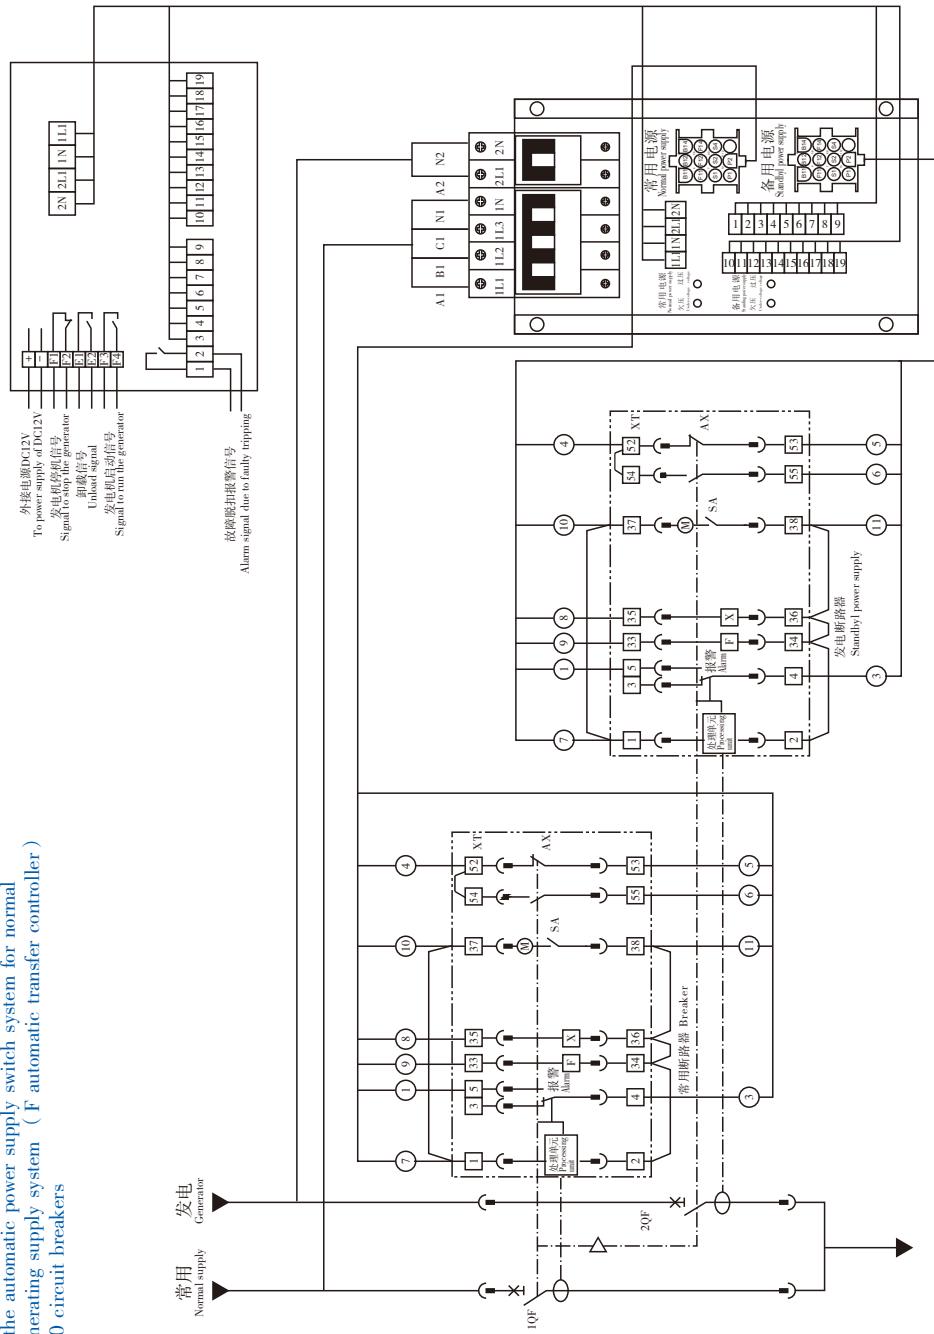

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。
 Note: 1. As shown in the above diagram the breaker is open and connecting; it has been charged and there is no current in the loop.
 2. When ATS is used all voltage ratings are AC230V for intelligent controller, shunt release, closing magnet and automatic operation mechanism.

AX-断路器辅助开关
 F-断路器分励脱扣器
 X-断路器合闸电磁铁
 M-断路器储能电机
 SA-断路器储能电动机行程开关
 XT-断路器二次回路接线端子


说明：当常用电源正常时，发电机启动信号（F3、F4）、发电机停机信号（F1、F2）、卸载信号（E1、E2）均处于断开位置。
 当常用电源失电后，发电机停机信号（F1、F2）立即闭合，发电机启动信号（F3、F4）经5延时后闭合。
 当发电机电源发出后，发电机启动信号（F3、F4）立即断开，卸载信号（E1、E2）经5延时后闭合。
 当常用电源恢复后，卸载信号（E1、E2）立即断开，发电机停机信号（F1、F2）经6延时后断开。

AX-Auxiliary switch
 F-Shunt release
 X-The electro-magnet to close the breaker
 M-Charging motor
 SA-Overtravel-limit switch for the charging motor of the breaker
 XT-Terminals for the secondary circuit of the breaker



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZR型, ZS型自动转换控制器)
CW2-2000C~6300断路器
 Wiring diagram of the automatic power supply system for normal supply to standby
 system (ZRZS automatic transfer controller)
CW2-2000C~6300 circuit breaker

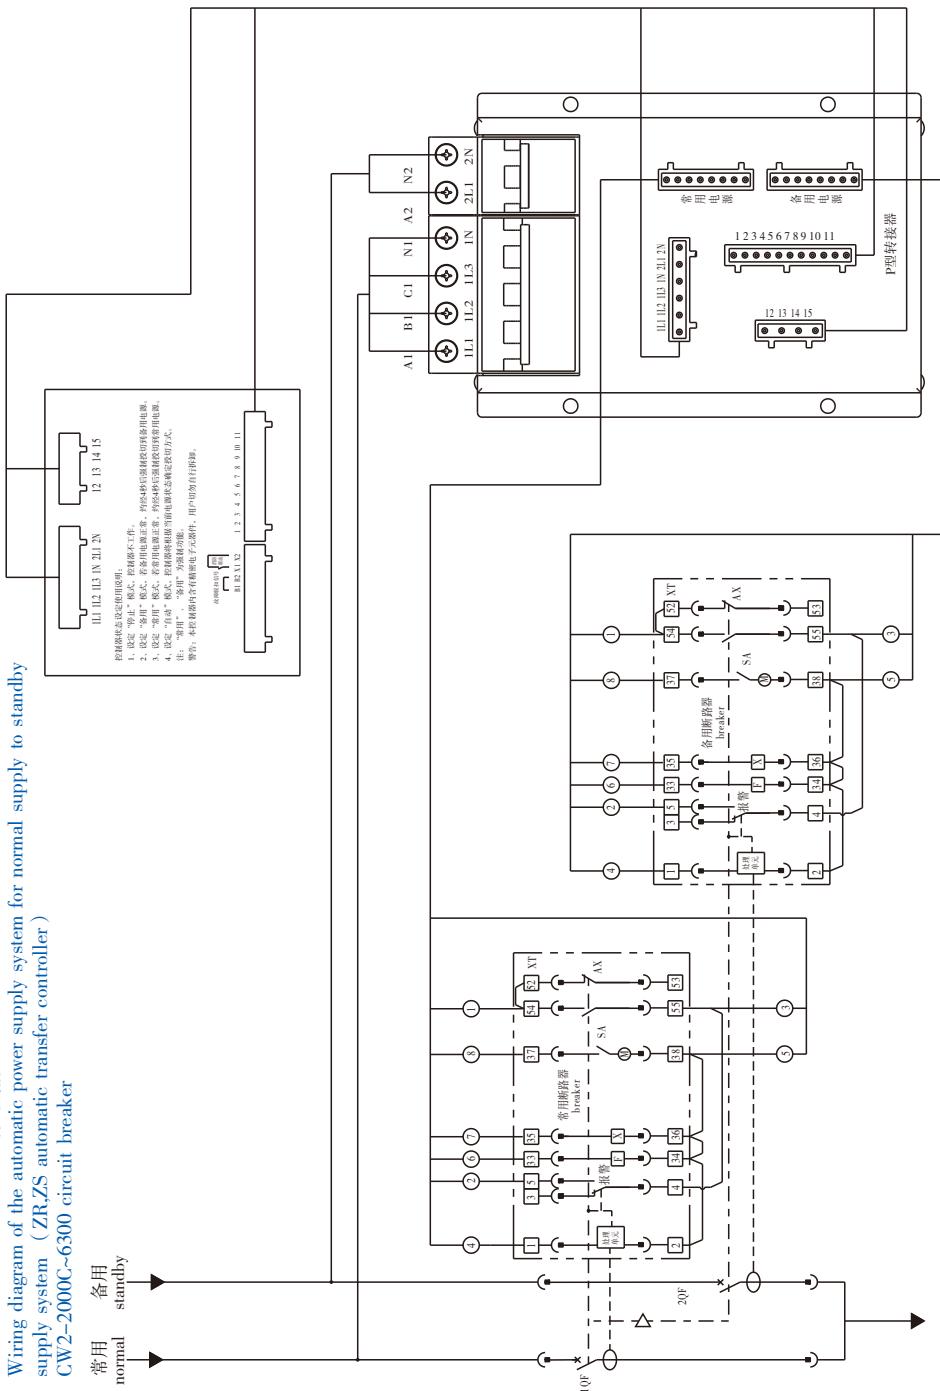

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。
 2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.
 2. When ATS is used all voltage are AC230V voltage for intelligent controller, shunt release, closing magnet and automatic operation mechanism.

AX—断路器辅助开关

F—断路器分励脱扣器
X—断路器合闸电磁铁

M—断路器贮能电机
SA—断路器贮能电机行程开关
XT—断路器二次回路接线端子

AX—Auxiliary switch

F—Shunt release

X—The electro-magnet to close the breaker

M—Charging motor


SA—Overtravel-limit switch for the changing motor of the breaker

XT-Terminals for the secondary circuit of the breaker



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZF型自动转换控制器)
CW2-2000C~6300断路器
Wiring diagram of the automatic power supply system for normal supply to standby
supply system (ZF automatic transfer controller)
CW2-2000C~6300 circuit breaker

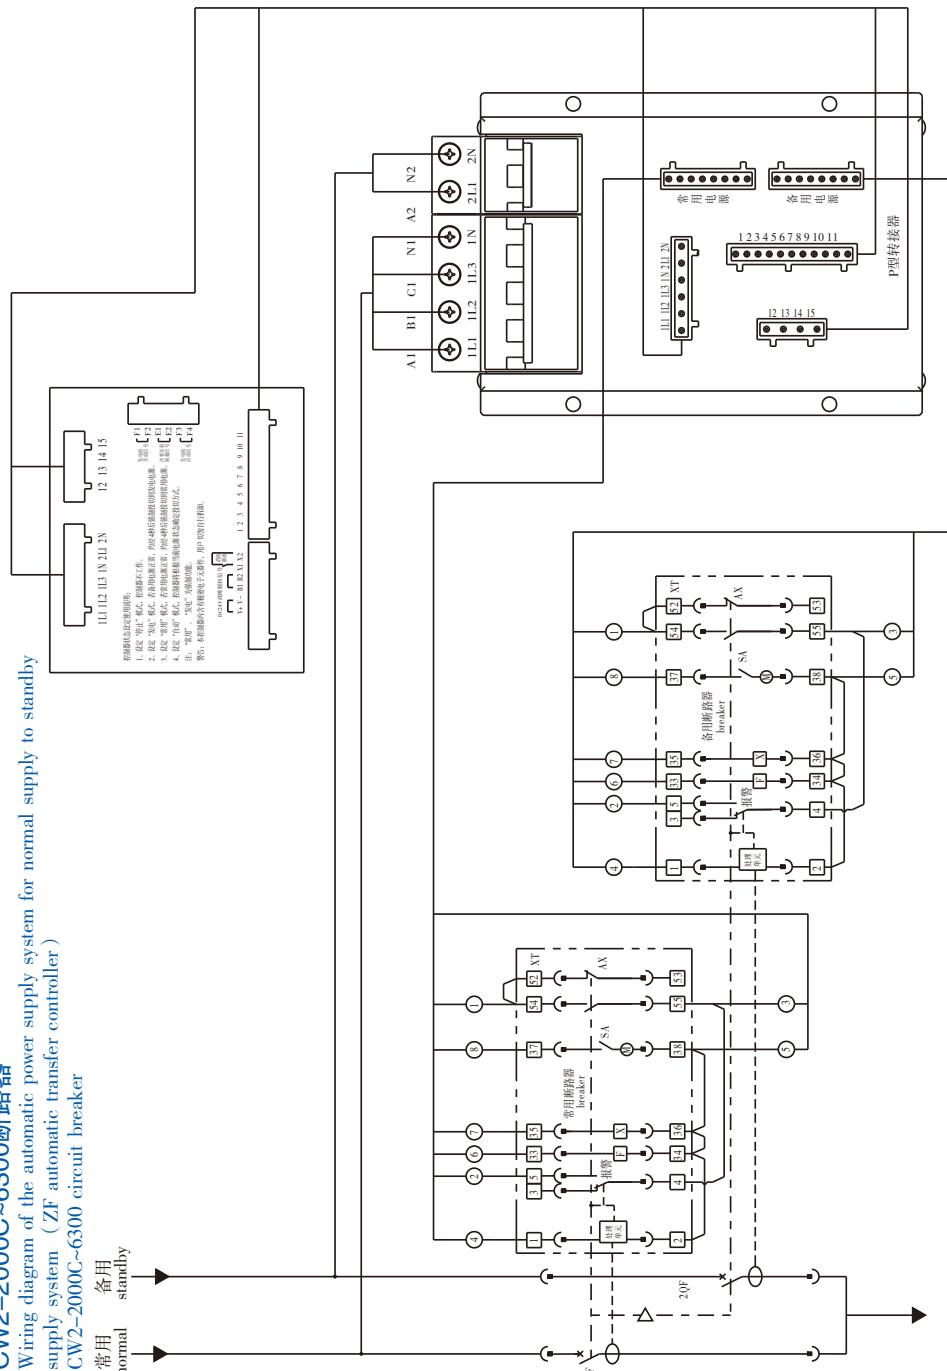

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram, the breaker is open and connecting, it has been charged and there is no current in the loop.

2. When ATS is used all voltage are AC230V voltage for intelligent controller shunt release closing magnet and automatic operation mechanism.

AX—断路器辅助开关

F—断路器分励脱扣器

X—断路器合闸电磁铁

M—充电电机


SA—断路器欠压能电动机行程开关

XT—断路器二次回路接线端子



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZTR型, ZTS型自动转换控制器)
CW2-2000C~6300断路器
Wiring diagram of the automatic power supply system for normal supply to standby supply system (ZTR,ZTS automatic transfer controller)
CW2-2000C~6300 circuit breaker

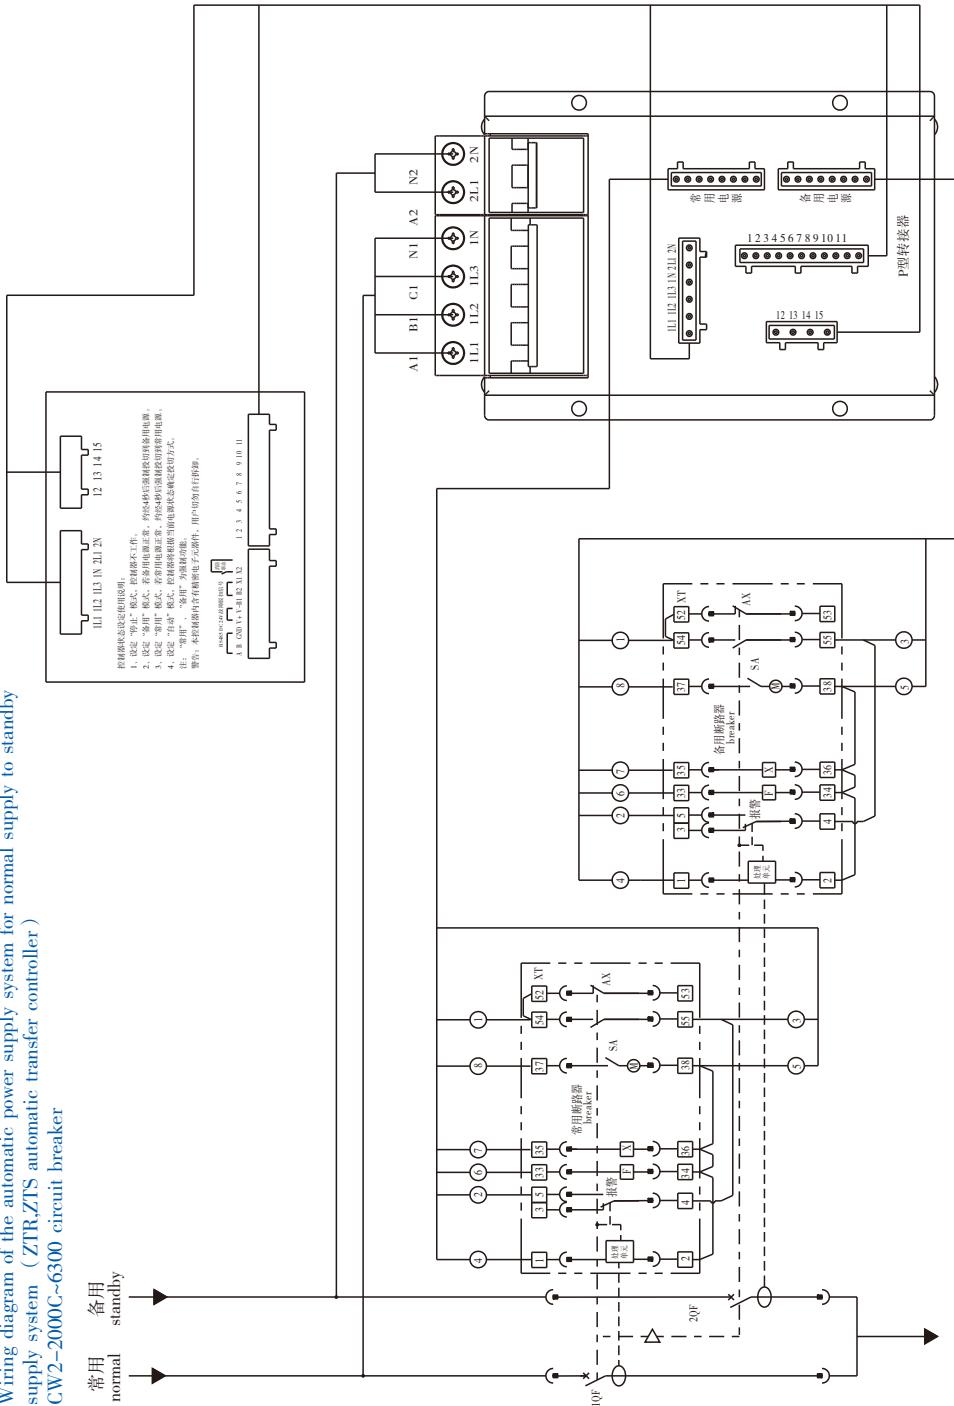

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。
 2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note:1. As shown in the above diagram the breaker is open and connecting,it has been charged and there is no current in the loop.
 2. When ATS is used all voltage are AC230V voltage for intelligent controller shunt release, closing magnet and automatic operation mechanism.

AX-Auxiliary switch

F-Shunt release

X-The electro-magnet to close the breaker

M-Charging motor

SA—Overtravel-limit switch for the charging motor of the breaker

XT-Terminals for the secondary circuit of the breaker
 AX-Auxiliary switch
 F-Shunt release
 X-The electro-magnet to close the breaker
 M-Charging motor
 SA—Overtravel-limit switch for the charging motor of the breaker
 XT-Terminals for the secondary circuit of the breaker




自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

常用-备用自动电源转换系统电气线路图 (ZTF型自动转换控制器)

CW2-2000C~6300断路器
Wiring diagram of the automatic power supply system (ZTF automatic transfer controller)

CW2-2000C~6300 circuit breaker
常用
备用
normal
standby

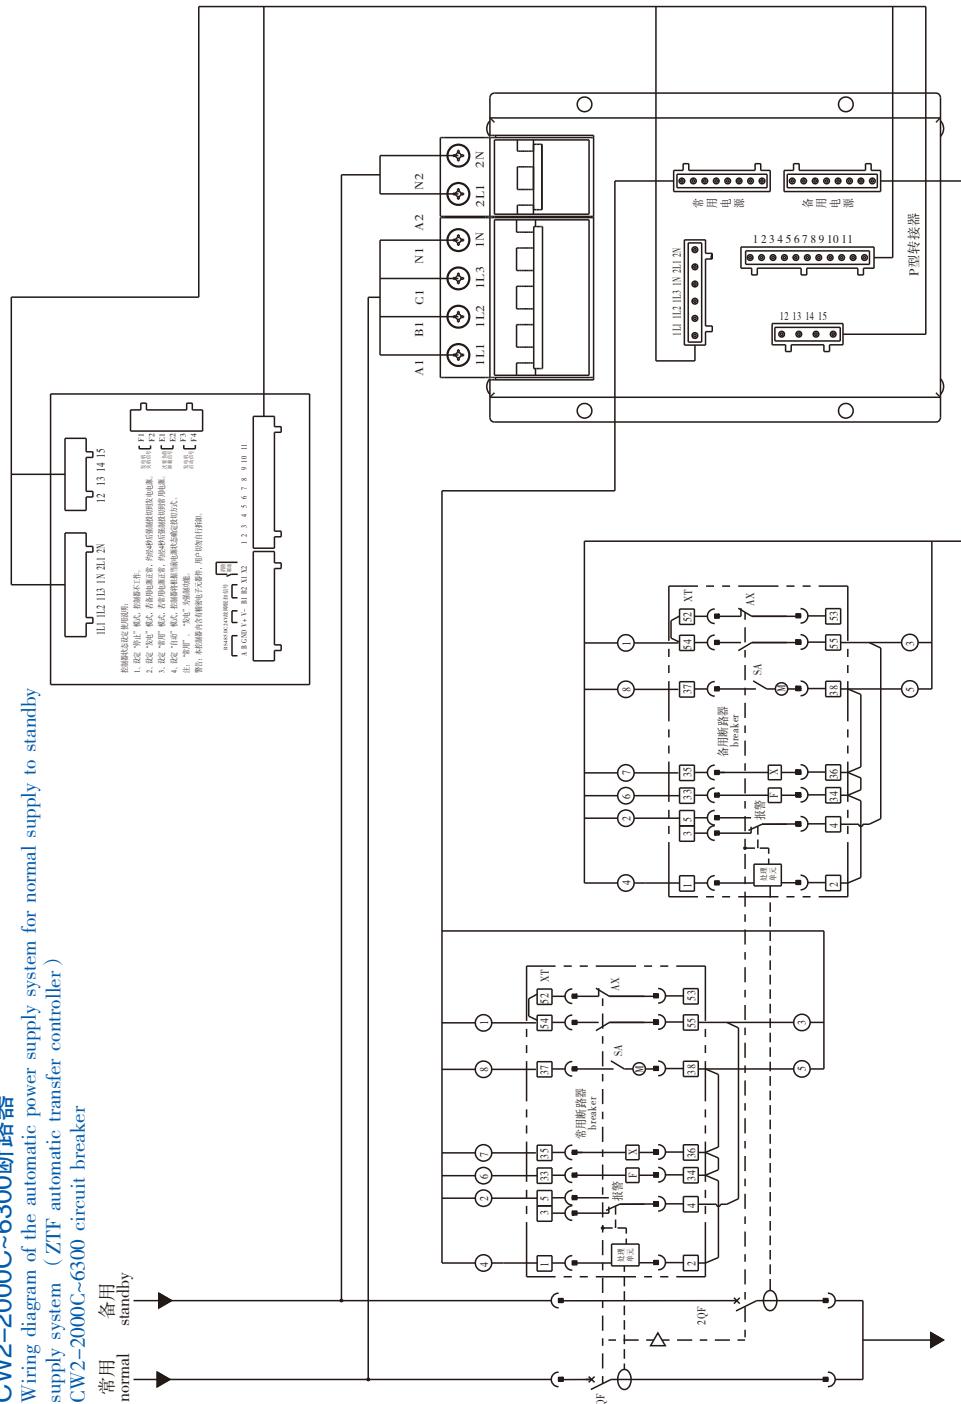

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。
Note: 1. As shown in the above diagram the breaker is open and connecting it has been charged and there is no current in the loop.
2. When ATS is used all voltage are AC230V voltage for intelligent controller shunt release closing magnet and automatic operation mechanism.

AX—断路器辅助开关
F—断路器分励脱扣器
X—断路器合闸电磁铁
M—断路器贮能电机
SA—断路器贮能电动机行程开关
XT—断路器二次回路接线端子

说明：当常用电源正常时，发电机启动信号（F3、F4）、发电机停机信号（F1、F2）均处于断开位置。

当常用电源失电后，发电机停机信号（F1、F2）立即闭合，发电机启动信号（F3、F4）经5延时后闭合。

当发电机电源发出后，发电机启动信号（F3、F4）立即断开，卸载信号（E1、E2）经6延时后闭合。

当常用电源恢复后，卸载信号（E1、E2）立即断开，发电机停机信号（F1、F2）经6延时后断开。

说明：当常用电源正常时，发电机启动信号（F3、F4）、发电机停机信号（F1、F2）、卸载信号（E1、E2）均处于断开位置。

当常用电源失电后，发电机停机信号（F1、F2）立即闭合，发电机启动信号（F3、F4）经5延时后闭合。


当发电机电源发出后，发电机启动信号（F3、F4）立即断开，卸载信号（E1、E2）经6延时后闭合。

当常用电源恢复后，卸载信号（E1、E2）立即断开，发电机停机信号（F1、F2）经6延时后断开。



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

两进线-母联自动电源转换系统电气线路图 (WTT3/WTB3 自动转换控制器)
CW2-1600断路器
Wiring diagram of the automatic power supply system for two incoming one couple (WTT3/WTB3 automatic transfer controller)
CW2-1600 circuit breaker

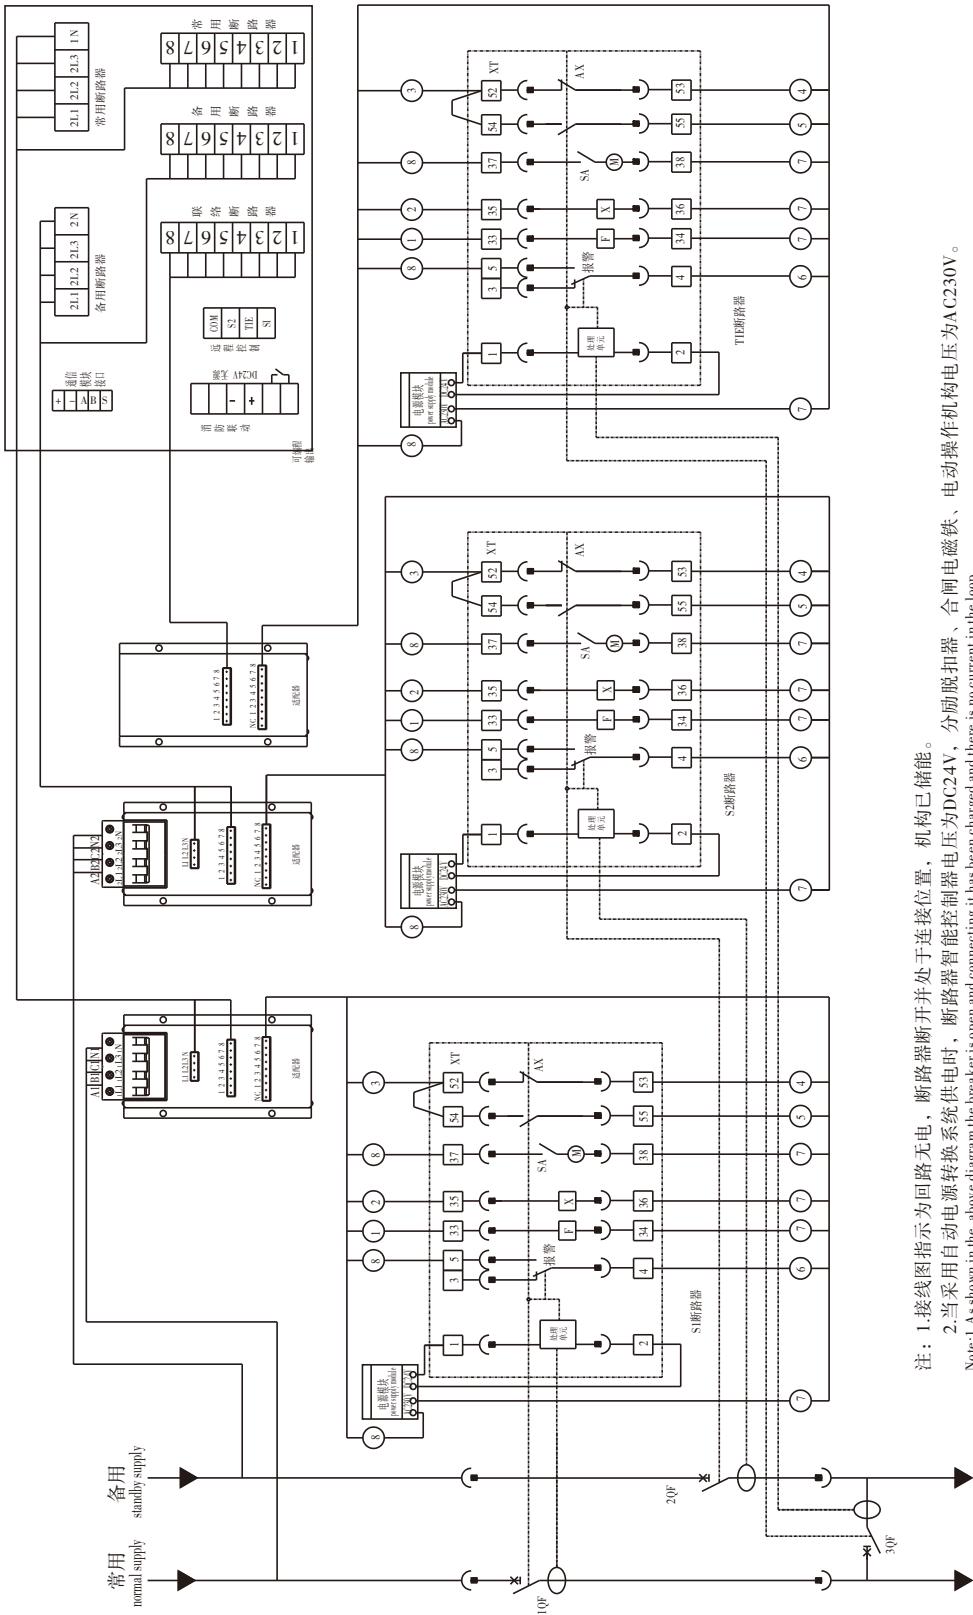

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。

2.当采用自动电源转换系统供电时，断路器智能控制器电压为DC24V，分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.

2. When ATS is used DC24V voltage for intelligent controller, AC230V voltage for shunt release, closing magnet and automatic operation mechanism.

AX-Auxiliary switch

F-Shunt release

X-The electro-magnet to close the breaker

M-Charging motor


SA-Switch for the charging motor's overtravel limit

XT-Terminals for the secondary circuit of the breaker



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

两进线-母联自动电源转换系统电气线路图 (WTT3/WTB3 自动转换控制器)
CW2-2000C~6300断路器
 Wiring diagram of the automatic power supply system for two incoming one couple (WTT3/WTB3 automatic transfer controller)
CW2-2000C-6300 circuit breaker

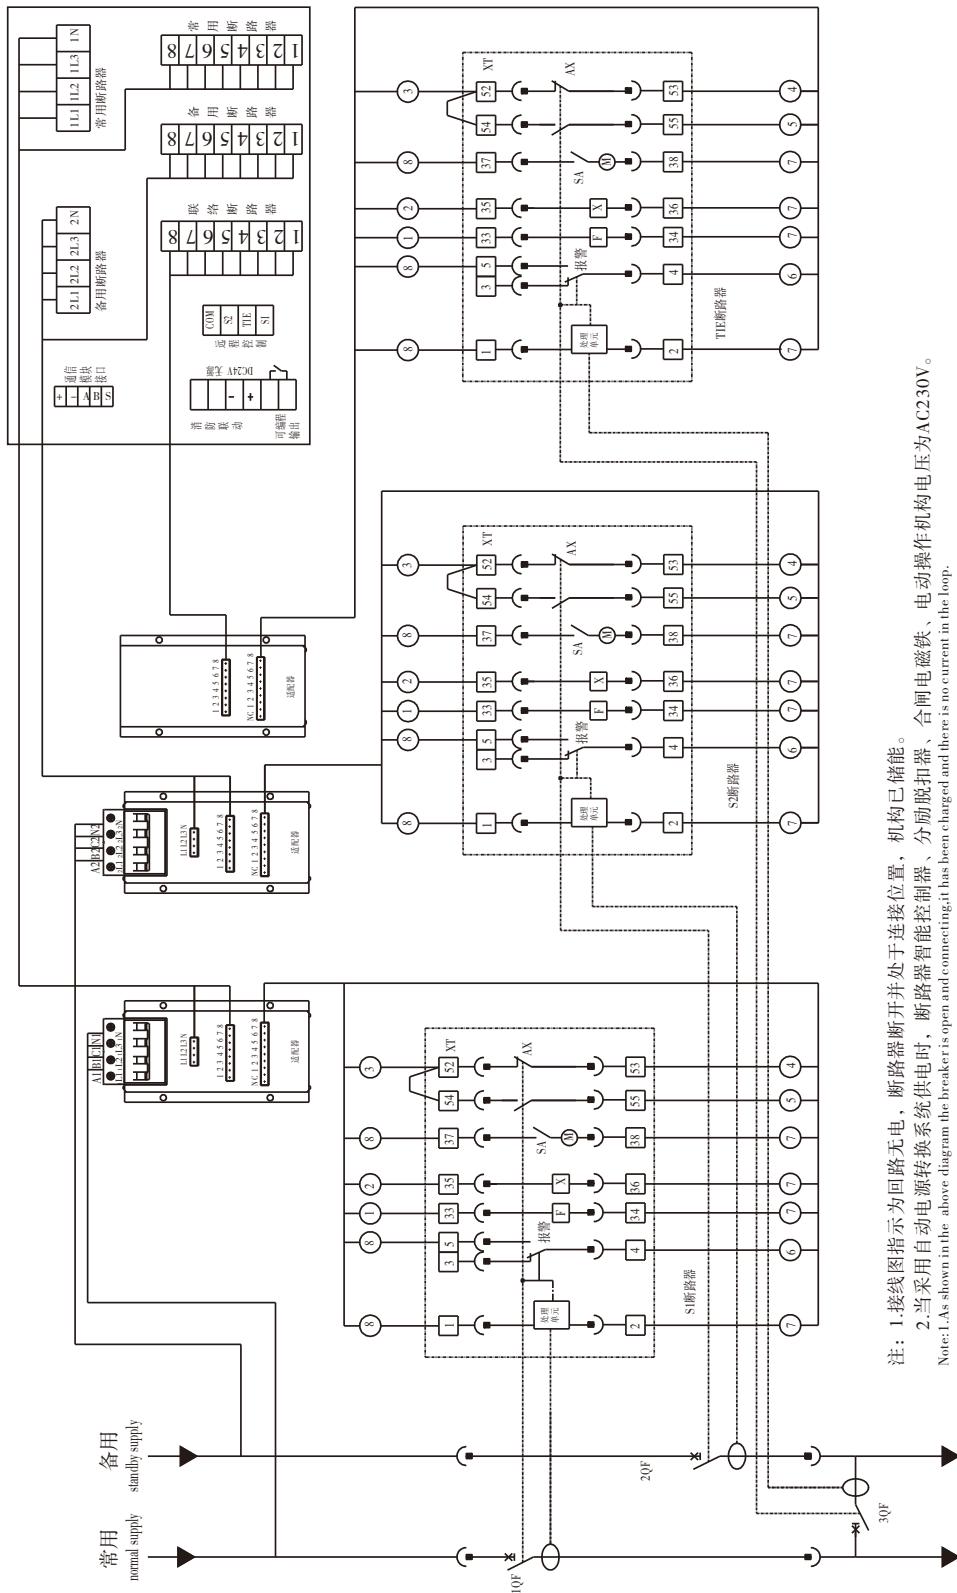

注：1.接线图指示为回路无电，断路器断开并处于连接位置，机构已储能。
 2.当采用自动电源转换系统供电时，断路器智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

Note: 1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.
 2. When ATS is used all voltage are AC230V voltage for intelligent controller, shunt release, closing magnet and automatic operation mechanism.

AX—Auxiliary switch

F—Shunt release

X—The electro-magnet to close the breaker

M—Charging motor


SA—Over travel-limit switch for the charging motor of the breaker

XT—Terminals for the secondary circuit of the breaker

三电源自动电源转换系统电气线路图 (WTT5型自动转换控制器)
CW2-1600
Wiring diagram of automatic power supply system for three supplys (WTT5 automatic transfer controller)
CW2-1600 circuit breaker



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

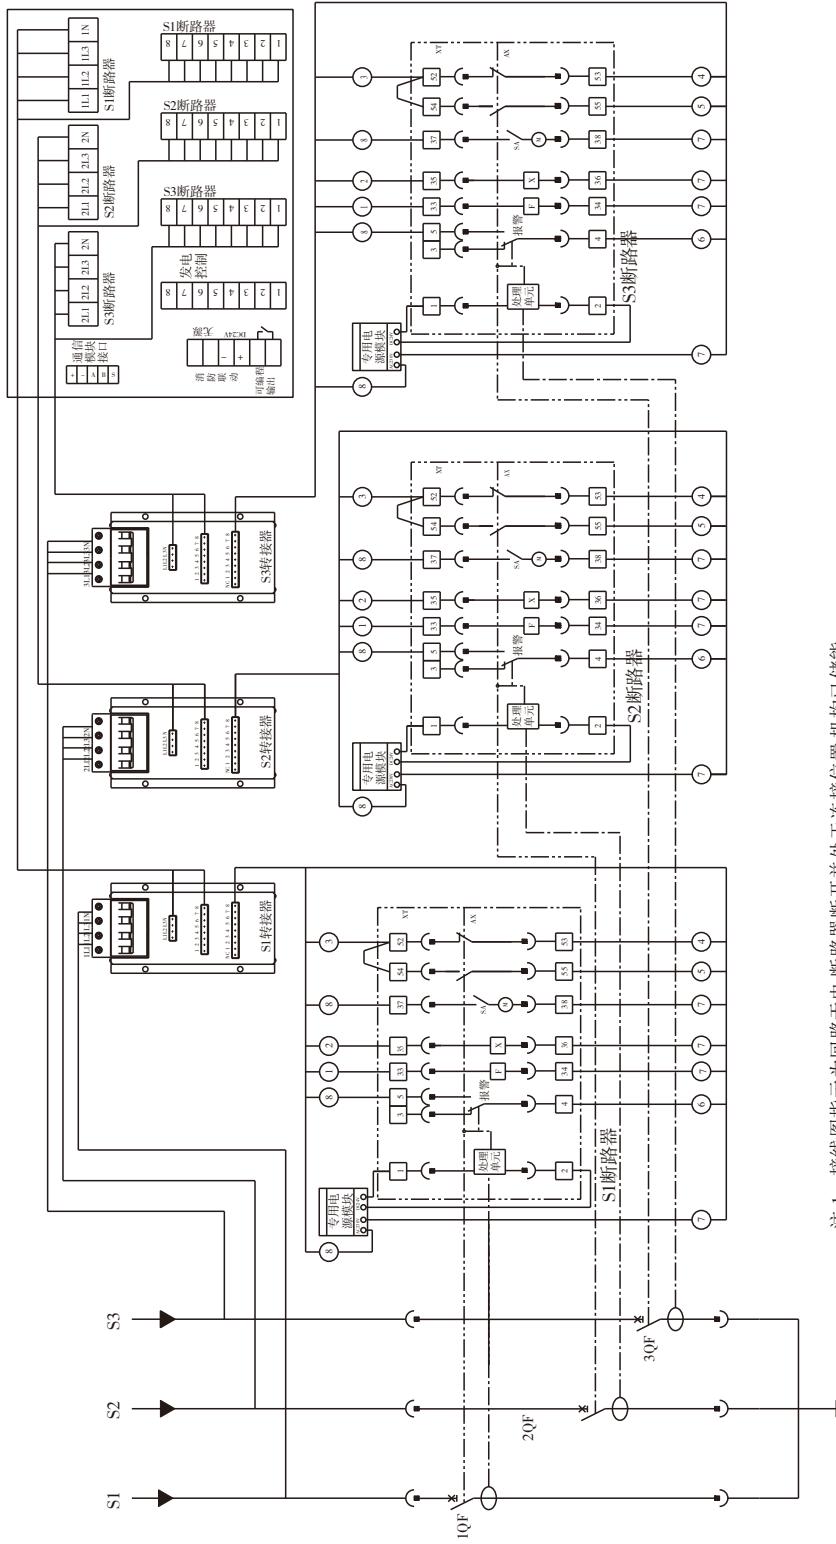

注:1、接线图指示为回路无电,断路器断开并处于连接位置,机构已储能。
2、断路器智能控制电压为DC24V,分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。
3、断路器辅助开关为转换触头时,接线端子52、54之间的连接线不必连接。
Note:1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.
2. When ATS is used all voltages are AC230V voltage for intelligent controller shunt release, closing magnet and automatic operation mechanism.
3. Wire of 53,54 terminals isn't connected for changer contacts.


AX—断路器辅助开关
F—断路器分励脱扣器
X—断路器合闸电磁铁
M—断路器贮能电动机
SA—断路器贮能电动机行程开关
XT—断路器二次回路接线端子

AX—Auxiliary switch
F—Shunt release
X—The electro-magnet to close the breaker
M—Charging motor
SA—Over travel-limit switch for the charging motor of the breaker
XT—Terminals for the secondary circuit of the breaker

三电源自动电源转换系统电气线路图 (WTT5型自动转换控制器)
 CW2-2000C ~ 6300
 Wiring diagram of automatic power supply system for three supplys (WTT5 automatic transfer controller)
 CW2-2000C ~ 6300 circuit breaker



自动电源转换系统电气线路图 WIRING DIAGRAM OF THE AUTOMATIC POWER SUPPLY SYSTEM

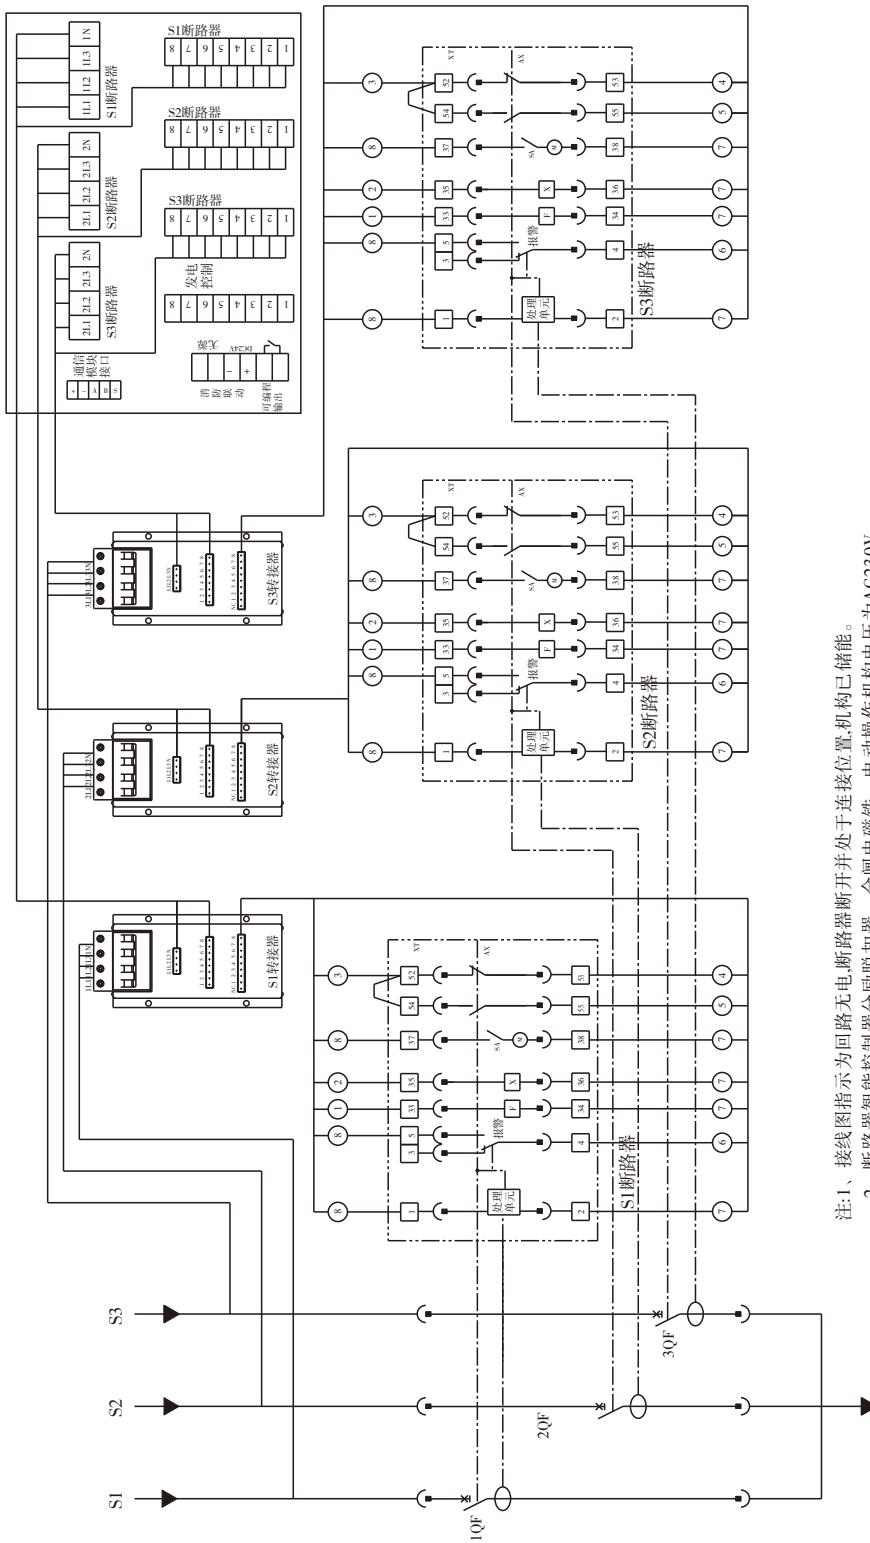

注:1、接线图指示为回路无电,断路器断开并处于连接位置,机构已储能。

2、断路器智能控制器分励脱扣器、合闸电磁铁、电动操作机构电压为AC230V。

3、断路器辅助开关为转换触头时,接线端子52、54之间的连接线不必连接。

Note: 1. As shown in the above diagram the breaker is open and connecting, it has been charged and there is no current in the loop.

2. When ATS is used all voltages are AC230V voltage for intelligent controller shunt release, closing magnet and automatic operation mechanism.

3. Wire of 53,54 terminals isn't connected for changer contacts.

AX—断路器辅助开关

F—Shunt release

X—The electro-magnet to close the breaker

M—Charging motor

SA—Over travel-limit switch for the charging motor of the breaker

XT—Terminals for the secondary circuit of the breaker



本公司结合开发智能电器、成套设备和控制系统的经验，推出了三位一体的Riyear-PowerNet配电监控系统，满足了智能电网对用户端系统智能控制的要求。这套系统以高性能的可通信智能配电元件为基础，将现场的低压配电系统和计算机网络紧密结合，集遥测、遥信、遥控、遥调等功能于一体，是传统配电系统的理想升级。

监控系统除支持本公司所有的可通信元件外，也支持各种不同厂商的具有标准协议的可通信元件，支持包括Modbus、ModBus TCP、Profibus-DP、DeviceNet等各种标准通信总线，还提供简单配电、网络型配电、无线型配电、混合型配电系统等各种连接方式，是功能强大、开放灵活的监控系统。用户可根据实际需要建立适合自己的完善的监控系统，实现远程掌控整个配电系统的运行情况。

监控系统主要包括可靠的系统控制软件、丰富的通信网络和高性能的各类可通信配电元件：系统控制软件实现系统管理功能；通信网络提供现场智能元件和上位监控主机间的连接，进行数据传输，协议的转换；可通信配电元件负责采集现场信息和现场控制，通过通信接口提供给监控系统进行远程管理。

On the experience of developing intelligent equipment, complete equipment and control system, we release the Trinity Riyear-PowerNet power distribution monitoring system to fulfill the requirements of intelligent electrified wire netting on the intelligent control of user's terminal system. This system, on the basis of high-performance communicative intelligent power distribution component, deeply combine the power distribution system on-the-spot with the computer network and has the function of tele-detection, tele-communication, tele-control and tele-adjustment. It is a fantastic upgrade of conventional power distribution system.

The monitoring system not only supports all kinds of communicative components of our company, but also supports every kind of communicative components made by different manufacturers according to the standard protocol. It supports Modbus, ModBus TCP, Profibus-DP, DeviceNet and every kind of standard communication buses. Thus, it provides simple power distribution, mixed type power distribution and every kind of connection ways. It is a functionally strong, open and flexible monitoring system. Users can build their own complete monitoring system fits to themselves according to the need in practice to achieve mastering the whole power distribution's operation condition remotely.

The monitoring system mainly includes reliable systematic control software, complete communication network and all kinds of communicative power distribution component of high performance: the system control software to achieve system management function; the communication network to provide the connection between the intelligent component on-the-spot and the up-position monitoring host, to perform data transmission and the transformation of the protocol; the communicative power distribution component to handle the gathering of the information on-the-spot, the control on-the-spot and the remote management provided to the monitoring system through the communication interface.



- 断路器通信功能

可通信型CW2智能型万能式断路器采用标准ModBus-RTU协议，通过RS485接口与上位机连接，用户可实现对断路器远距离的遥控、遥信、遥调、遥测功能。

可通信数据：

遥测：实时电流、电压、基波电流、基波电压、功率、功率因数、电能、频率、谐波电流电压含有率、谐波电流电压总畸变率数据。

遥信：报警、故障脱扣、欠电压、断路器本体位置、合闸准备就绪、分合闸位置等断路器状态数据。

遥控：远程分合断路器。

遥调：远程保护参数读取和修改。

通信参数：

波特率 19200 bps (支持 1200、2400、4800、9600、38400bps)。

通信地址：1~119。

帧格式：1位起始位，8位数据，2位停止位，偶校验（支持无校验、奇校验）。

网络特性：

通信线路为双绞屏蔽线。

一条线路可同时连接32台可通信断路器。最大接线距离1200米，可通过加装中继器延长通信距离。

- Communication function of breaker

Communicative CW2 intelligent universal communicative circuit breaker adopts standard ModBus-RTU protocol. Through the connection of the RS485 interface and the upper machine, the function of tele-control, tele-communication, tele-adjustment and tele-detection to the circuit breaker can be achieved.

Communication data:

Remote detection: real-time current、voltage、fundamental current、fundamental voltage、power、power factor、electric energy、harmonic current or voltage ratio and total distortion of current or voltage.

Remote communication: state data of circuit breakers such as alarm、fault、under-voltage、main body position of breaker、ready-for-closing、the position of closing and opening etc.

Remote control: long-distance operation if closing and opening.

Remote adjustment: long-distance fetching and modification of the setting values of breaker.

Communication parameter:

Band rate 19200bps (in favor of 1200、2400、4800、9600、38400bps).

Communication address: 1 ~ 119.

Byte format: first bit as start bit、eighth bit as data bit、second bit as stop bit、even check (in favour of non-check、odd check).

Network characteristic:


Twisted-pair shielded cables serve as communication lines.

One line can link up 32 pieces of communicative breakers at the same time.

Wiring distance is 1200m at maximum but the distance of communication can be extended by equipping with repeaters additionally.



- 通信接线端子 Wiring terminals for communication

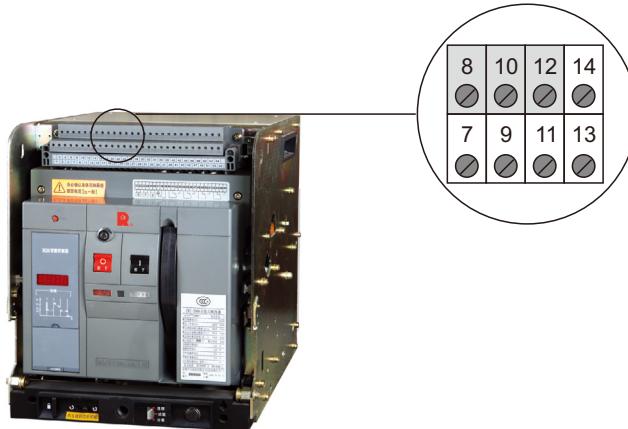

端子 Terminals	信号 Signal	功能 Function
8	DATA+(A+)	接收/发送数据+ Receive/transmit date+
10	DATA-(B-)	接收/发送数据- Receive/transmit date-
12	GND	接通信线屏蔽层 Connecting shielded layer of communication line

- 通信电缆连接 Communication cable connected



标准双绞线带屏蔽
Standard twisted-pair shielded cable

颜色/color		信号signal	功能 Function
蓝色blue		DATA+	接收/发送数据+ Receive/transmit data+
白色white		DATA-	接收/发送数据- Receive/transmit data-
通信线屏蔽层 Shielding layer		GND	接地 Grounding

如上图中使用通信电缆中的一组双绞线作为485通信线，屏蔽层用于接地。用户实际所使用的可能会有所差异，如双绞线颜色。用户可根据实际情况自行定义，但应事先明确每一通信电缆线的信号定义情况。


注意：通信电缆请使用带屏蔽的型号，在柜内走线时尽量远离强电线路。

As the above diagram shows,a group of twisted-pair lines in the standard communication cable is employed as the communication line of 485 and the sheilding lager is grounded.The actual pratice should be possibly different such as the application of the colour of the twisted-pair line.Users could define the ways of cable's usage by themselves but the definition of the signal of each line in the cable shoule be made clear in adcance.

Note:please use the type of communication cable with the shielding lager and approach to circuits with strongelectricity should be advoided as far as possible when wiring in the cabinet.



● 通信连接扩展 Communication connection eottend

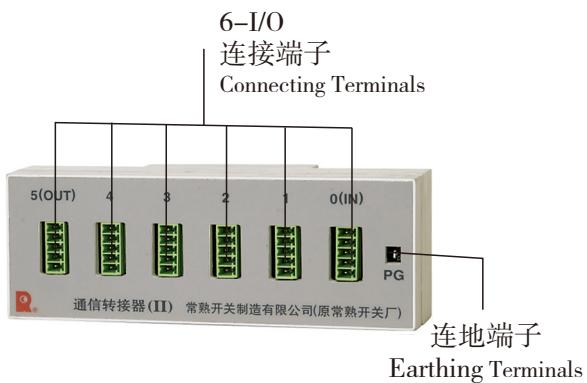

注：可多次扩展，但一条线路不应连接超过32台设备。
Note: can be expanded by several times, but one piece of circuit can not connect with 32 sets of devices at most.

通信转接器可以提高用户现场接线的效率和可靠性，它具有以下特点：

6个RS485通信接口，最多可扩展5个可通信设备
多个通信转接器可互联进行扩展（参见注）
配有通信线接地端子

可直接安装在标准35mm导轨上

The Communication Adapter can largely improve the efficiency and reliability of wiring on site by customers, which embraces the characteristics of :


Six pieces of RS485 Communication Interfaces, can join together with 5 sets of Communicative Devices at most

Several Communication Adapters can realize the expansions by their networking (Refer to Note)

Equipped with earthing terminals of communication line

Can be installed directly on the standard slideway in 35mm width

连接示意图 Connection figured diagram

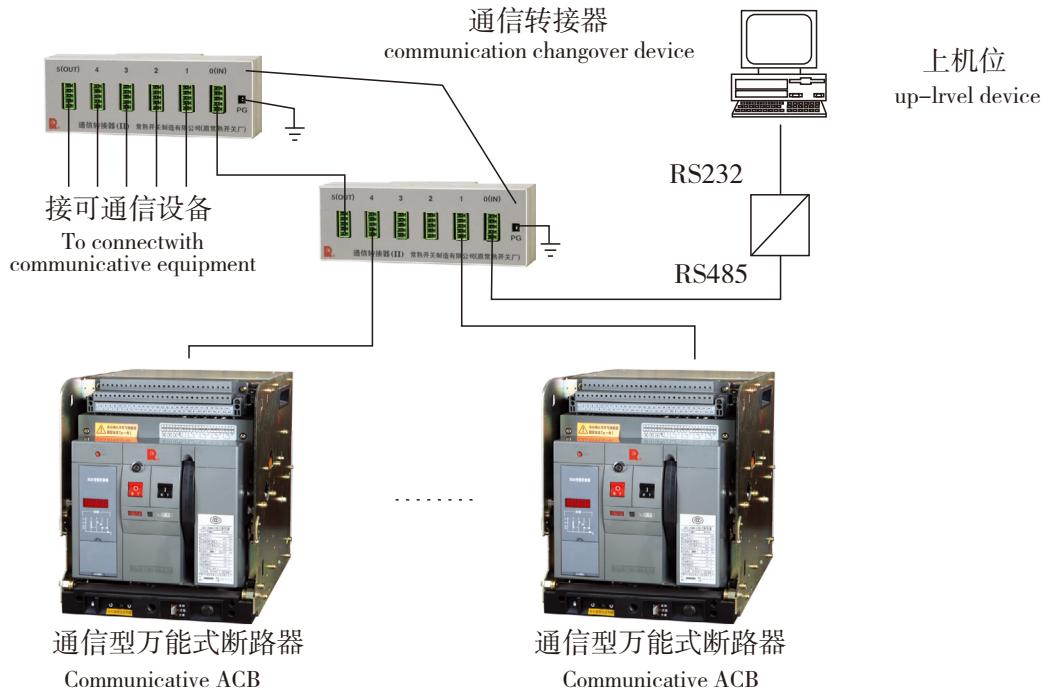



● 网络通信

我公司还提供多种通信适配器实现对Profibus-DP、DeviceNet、CAN及以太网ModBus/TCP协议的支持，为用户提供了丰富的解决方案。


用户也可使用CEPA3智能配电一体机，同我公司的可通信断路器进行连接，实现远程对断路器各项参数显示、监控、配置、历史数据保存等。同时我们还率先推出通信断路器的无线监视功能，通过配置FDM3短消息通知模块可实现断路器故障脱扣或报警的远程信息监视。

用户还可通过CI1系列远程智能I/O模块连接非通信型断路器，实现远程监测断路器合分闸状态、故障状态等重要信息。

Our company also offers several kinds of communication adapters to achieve the support of Profibus-DP, DeviceNet, CAN and Ethernet ModBus/TCP protocol and to supply the customers with lots of solutions.

The users can also connect CEPA3 intelligent power distribution monitor with our company's communicative circuit breaker to achieve the display, monitor, configuration and the previous data's maintenance of the circuit breaker's parameter remotely. At the same time, we also promote the radio monitoring function of the communicaiton circuit breaker. By the configuration of the short message informing module, we can achieve the information's remote monitoring of the circuit breaker's failure release or alarm.

The users can connnect the uncommunicative circuit breaker through CI1 series remote intelligent I/O module to achieve remotely monitoring the circuit breaker's switching-on or -off state, failure state and other important information.

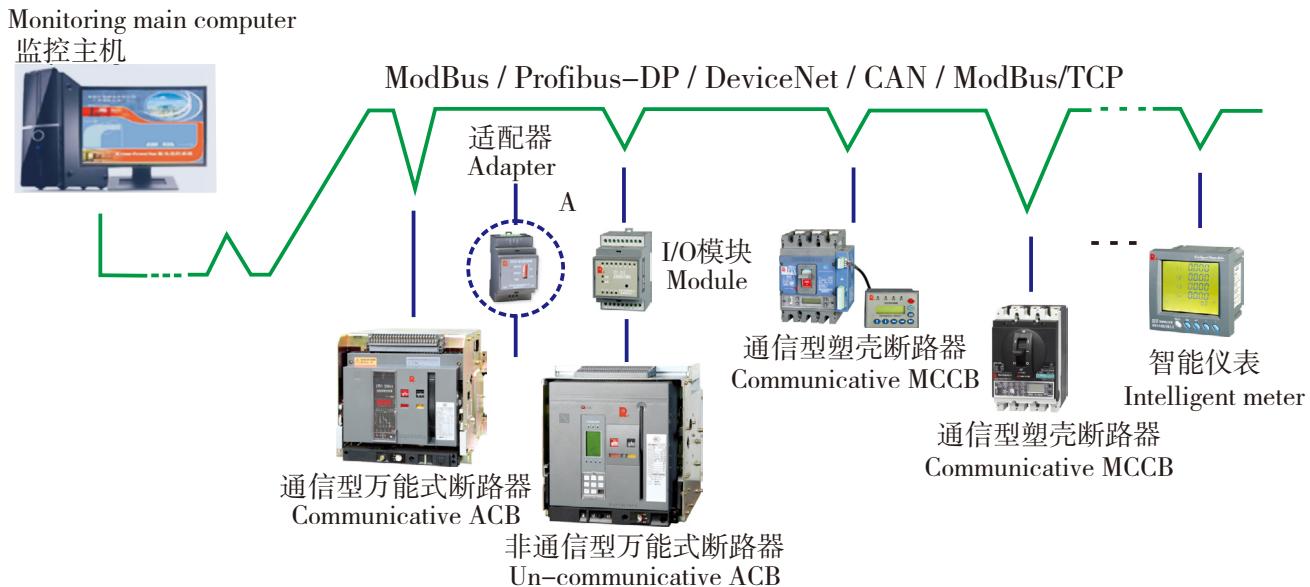

NoteA:The communicative compents of my company adopts standard ModBus-RTU protocol, may be connected ModBus field bus. if adopting other protocol, using communicative adapters changover.



● 通信适配器 Communication adaptor



FTM61



CN1DP-MD



CN1DP-MP



CN1DP-MC



CN1EG/10

FTM61、CN1DP-MD、CN1DP-MP、CN1DP-MC和CN1EG/10为具有通信转换功能的适配器，与本公司具有标准ModBus-RTU协议接口的通信型智能产品连接，实现不同协议的转换，使通信型智能产品能在DeviceNet、Profibus-DP、CAN现场总线上或以太网TCP/IP网络上实现遥信、遥调、遥控及遥测功能。

FTM61通信模块实现从ModBus-RTU协议向IEC61850协议的转换。

CN1DP-MD通信适配器实现从ModBus-RTU协议向DeviceNet协议的转换；

CN1DP-MP通信适配器实现从ModBus-RTU协议向Profibus-DP协议的转换；

CN1DP-MC通信适配器实现从ModBus-RTU协议向CAN总线协议的转换；

CN1EG/10以太网适配器实现ModBus协议在串行链路和以太网TCP/IP网络间进行数据传输；

CN1DP-MD、CN1DP-MP只支持单台设备通信，CN1EG/10、CN1DP-MC最多可支持32台设备通信。

CN1DP-MD,CN1DP-MP,CN1DP-MC and CN1EG/10 are four types of adapters which have the function of communicative transformation. They can be connected to our company's communicative intelligent products which have the standard ModBus-RTU protocol interface to achieve the transformation of different protocols, and further to make the communicative intelligent product achieve tele-communication, tele-adjustment tele-control and tele-detection function on DeviceNet, Profibus-DP, CAN field bus or Ethernet TCP/IP network.

FTM61 communicative module achieves the transformation from ModBus-RTU protocol to IEC61850 protocol.

CN1DP-MD communicative adaptor achieves the transformation from ModBus-RTU protocol to DeviceNet protocol;

CN1DP-MP communicative adaptor achieves the transformation from ModBus-RTU protocol to Profibus-DP protocol.

CN1DP-MC communicative adaptor achieves the transformation from ModBus-RTU protocol to CAN bus protocol

CN1EG/10 Ethernet adaptor make ModBus protocol transmit data between the serial chain circuit and the Ethernet TCP/IP network.

CN1DP-MD、CN1DP-MP can only support single equipment communication, CN1EG/10、CN1DP-MC can support 32 equipment's communication at most.



- 短消息通知模块
short message alarm module



FDM3短消息通知模块采用标准RS485通信方式直接连接一台或多至16台可通信断路器，当断路器发生预先设置的事件时，通过GSM网络发送短消息到一部或多至10部手机提示用户及时处置，预设的事件可以是各种故障脱扣和电力参数异常报警。用户可通过我公司提供的计算机配置软件对短消息通知模块进行配置，包括通信参数、手机号码、设备名称、报警类型等，运行时无需计算机。


FDM3 short message informing module adopts the standard RS485 communication method to connect one or at most 16 communicative circuit breaker directly. When the circuit breaker encounter an incident previously set, the module sends short message to one or at most ten mobile phones through GSM network to cue the users to handle in time. The previously set incident can be all kinds of failure release and electric parameter abnormal alarm. The users can configure the short message informing module with the computer configuration software offered by our company, including communication parameter, mobile phone number, equipment name, alarm type and so on. When working, no need of computer.

- 智能配电一体机
intelligent power distribution monitor



CEPA3智能配电一体机是我公司专门为设备数量不多的用户研发的高性价比监控解决方案，也同样适用于大型分布式配电监控系统中。

CEPA3 intelligent power distribution monitor is a high cost-effective monitor solution specially developed for users have less devices, it also suit for large-scale power distribution monitor

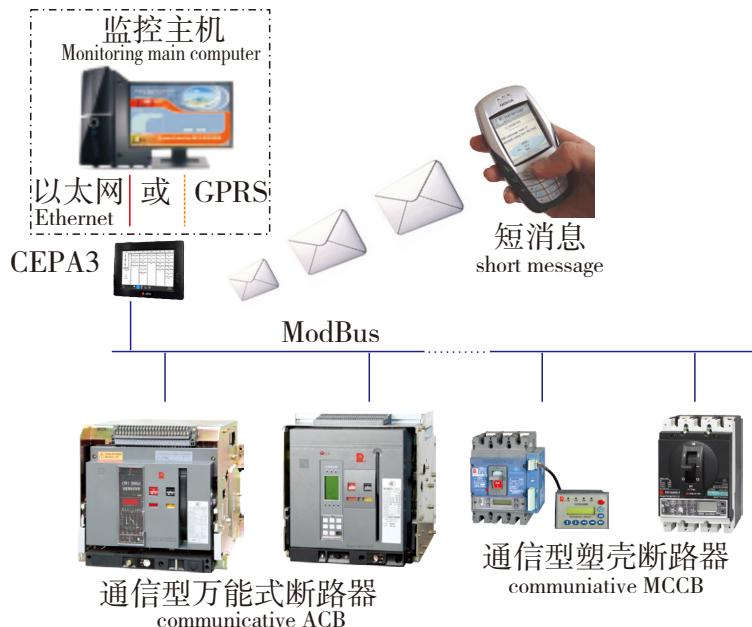

CEPA3是软硬件一体的产品，集监控主机、监控软件、数据采集器和Modbus TCP网关为一体，用户只需将我公司的智能化元器件与CEPA3相连接，然后经过简单的设置即可投入运行，实现“遥信、遥测、遥调、遥控”功能，用户无需编程也无需另外购买及安装软件。

CEPA3智能配电一体机与我公司智能通信型产品通过RS-485总线连接，最多支持128台设备，支持我公司大部分智能通信型产品。CEPA3具有7寸、10寸彩色液晶触摸屏，无按键设计，图形化操作界面，简洁明了，是一种低成本高效率的配电监控方案。

CEPA3 is a software and hardware integration product which integrated master computer monitoring、software monitoring、data collecting and Modbus TCP into one. User only need to connect our intelligent components to CEPA3, then it can be put into operation and it can provide "tele-comunication、tele-detection、tele-adjustment and tele-control" after some simple set-up.

There is no need for user to program or buy additional software.


CEPA3 intelligent power distribution monitor can connect to our intelligent communication products via RS-485 bus, it supports most of our intelligent communication products, maximum capacity can be 128. CEPA3 has 7inch or 10inch color liquid touch screen, no button design and graphic operation interface make operation simpler, it is also a low-cost and high-efficiency power distribution solution.



- WiFi通信模块 WiFi communicative module

FWF1 WiFi通信模块通过Modbus总线下连通信型断路器，通过WiFi无线信号上连路由器组建无线局域网模式或连接至互联网组建云服务模式。用户可通过WiFi无线方式远程监测断路器运行状态和参数，并可在局域网模式下实现遥测、遥信、遥调、遥控的四遥功能，在云模式下实现遥测、遥信功能。

FWF1 WiFi communicative module are connected down communicative breaker by modbus bus, and are connected upper router by WiFi wireless signal to build wireless local area network or cloud services mode. user remotely monitor breaker's state and parameter by WiFi wireless mode. and achieve tele-communication, tele-detection, tele-adjustment and tele-control at local area network or achieve tele-communication, tele-detection.

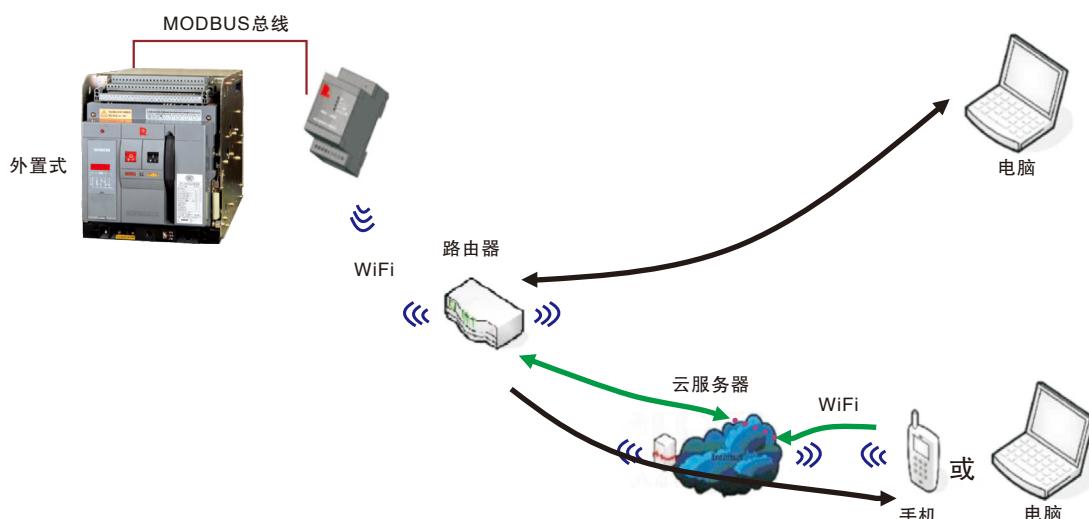



- 远程智能I/O模块



CI1系列远程智能I/O模块是一种简洁实用可靠的可通信监控模块，通过标准RS485接口、ModBus-RTU协议可实现系统的遥信、遥控及遥测功能。用户使用非通信型断路器时，可以通过该模块实现对相应配电回路的监测。用户能远程监测该回路电流、断路器合分闸状态、故障状态等重要的信息。

CI1-SCM423具有4路共端开关量输入、2路继电器输出、3路5A电流输入。用户通过它并且配合断路器的输入输出及线路中的标准电流互感器，能知道馈电线路的3相电流和4路开关量（如：开关合分闸状态，故障状态等）。

CI1-S12具有12路共端开关量输入。用户通过它可以了解到最多12台断路器的合分闸状态，或者6台断路器的合分闸状态、故障状态。

CI1-C8具有4组8路继电输出，可以控制4台断路器的合分闸。

CI1-SC64具有6路开关量输入和4路继电输出，可以在控制断路器的同时，对其重要状态进行监测。

CI1 series remote intelligent I/O module is a convenient, practical and reliable communication monitoring module. It can achieve the system's tele-communication, tele-control and tele-detection function through standard RS485 interface, ModBus-RTU protocol. When the users use the uncommunication circuit breaker, the monitoring of respective distributing circuit can be achieved by the module. The users can monitor the current of the circuit, the switching -on or -off state, failure state and other important information remotely.

CI1-SCM423 has four-circuit co-terminal switching times output, two-circuit 5A current input. The users can be informed of the feeder's three-phase current and four-circuit switching times (for example: switching -on and -off state, failure state and so on) through CI1-SCM423 and with the help of circuit breaker's input, output and standard current mutual inductor in the circuit.

CI1-S12 has twelve-circuit co-terminal switching times input. The users can know the switching -on or -off state of at most twelve circuit breakers or six circuit breakers' switching -on or -off state, failure state by it

CI1-C8 has four groups of eight-circuit relay output and it can control the switching -on or -off of four circuit breakers.

CI1-SC64 has six-circuit switching times input and four relay output. It not only controls the circuit breaker, but also monitors circuit breaker's state at the same time.



温度监测可采用二种方式：

①FWD1温度上传模块+FRG热传感器

②FWX1无线温度测量模块

The temperature monitor can be achieved by two modes:

a.FWD1 temperature upload module + FRG heat sensor

b.FWX1 wireless temperature measuring module

● FWD1温度上传模块

FWD1温度上传模块采用FRG热传感器直接安装在连接点位置在线检测温度，最多监测4路连接位置温度(热传感器连接至上传模块的输入端子分别为1T、2T、3T、4T)。采用Modbus-RTU协议，通过RS485接口将温度信息上传到监控主机，实现温度的网络监测。

● FWD1 temperature upload module


FWD1 temperature upload module's FRG thermal sensor is installed directly at connecting position to monitor the temperature online, it can monitor up to 4 connecting positions(the input terminal which connect to upload module of thermal sensor are 1T、2T、3T、4T respectively). Modbus-RTU protocol used it uploads temperature information to computer by RS485 interface and network monitoring is achieved.

温度上传模块参数
temperature upload module parameters


测温范围 temperature detection range	0~150℃
精度 precision	± 5℃
热时间常数 precision	≤ 7s
传感器绝缘耐压 sensor insulation withstand voltage	AC3500V/1min
测温点数 temperature detection points	最多4路 4 points at most
工作电源 operating current	AC230V, 范围range195~253V
输出触头容量 output contact capacity	3A/AC250V (AC-15), 3A/DC24V (DC-13)
工作温度 operating temperature	- 20℃~+70℃



温度模块 TEMPERATURE MODULE

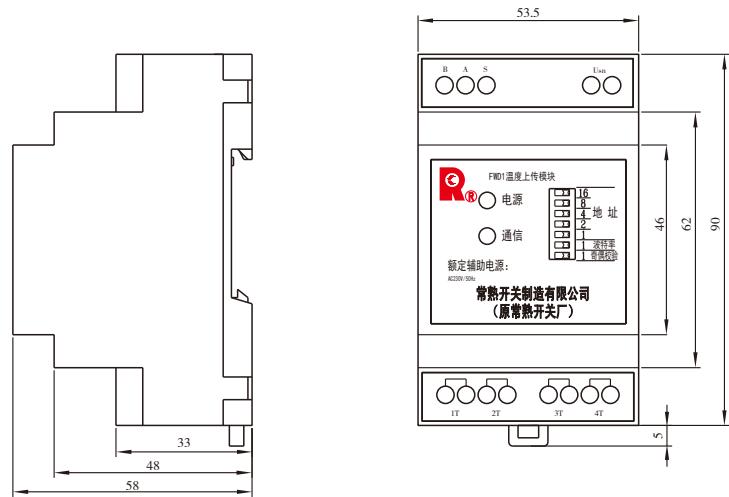

● FRG热传感器 FRG heat sensor

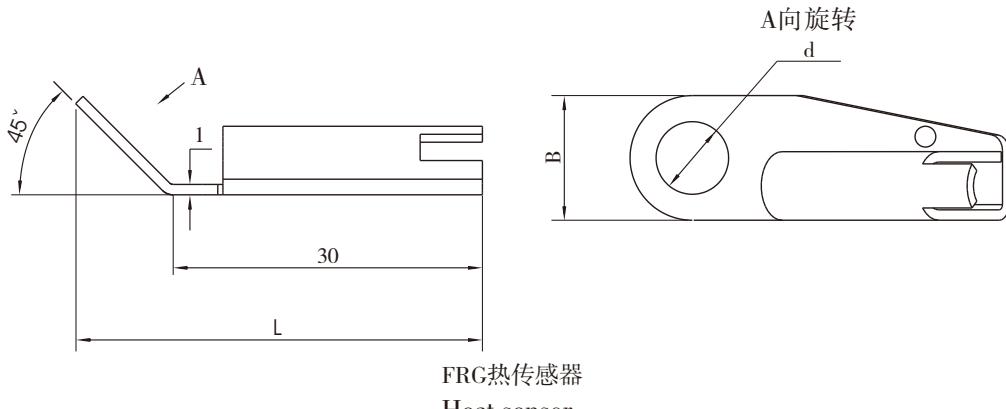

FRG热传感器尺寸
heat sensor dimensions

热传感器型号 heat sensor type	B (mm)	L (mm)	d (mm)
FRG-7	12	40	Φ 7
FRG-9	14	41	Φ 9
FRG-11	16	42	Φ 11
FRG-13	18	44	Φ 13
FRG-17	22	47	Φ 17



● FWX1无线温度测量模块

FWX1无线温度测量模块由FWX1-C无线温度传感器和FWX1-J接收显示单元组成，传感器用于测量主回路温度并以无线通信方式发送至接收显示单元，接收显示单元显示接收到的温度实测值并通过RS485通信接口上传至监控主机，同时当接收显示单元接收到的温度实测值大于整定值时，输出报警接点信号。

FWX1 wireless temperature measuring module


FWX1 wireless temperature measuring module is made up of FWX1-C wireless temperature sensor and FWX1-J receiving and display unit. The sensor measures main loop circuit temperature and sends information to receiving and display unit by wireless communication. The receiving and display unit displays receiving temperature measuring value and uploads to computer by RS485 communicative interface. And receiving and display unit outputs alarm signal when measuring temperature value received is more than value set .

无线温度测量模块参数
wireless temperature measuring module parameters


无线温度传感器 wireless temperature sensor	温度测量范围 temperature measuring range	0℃ ~ 130℃, 在130℃ ~ 150℃范围内, 传感器能稳定运行30min。 At 130℃ ~ 150℃ range, the sensor can service 30min.
	精度 precision	± 4℃
	分辨率 resolution	0.1℃
	温度测量周期 temperature measuring cycle	60s
	供电方式 supply mode	自供电, 启动电流100A, 启动时间≤10min self-supply, starting current 100A, starting time≤10min
	通信方式 communicative mode	Zigbee,2.4GHz
	工作温度 operating temperature	-25℃ ~ +70℃, 被测点温度 measured point temperature≤150℃
接收显示单元 receiving and display unit	温度报警整定值 temperature alarm setting values	90℃ ~ 130℃, 步长step1℃
	报警复位温度 alarm reset temperature	(报警整定值-4)℃ alarm setting value
	可连接传感器数 connecting sensor number	20
	输出接点容量 output contact capacity	1NO,AC-15:5A/250VAC;DC-13:5A/30VDC
	工作电源 operating supply	DC24V ± 10%
	通信方式 communicative mode	与传感器 with sensor
		Zigbee,2.4GHz
		与上位机 with computer
	功耗 power loss	≤5W
	工作温度 operating temperature	-10℃ ~ +60℃



温度模块 TEMPERATURE MODULE

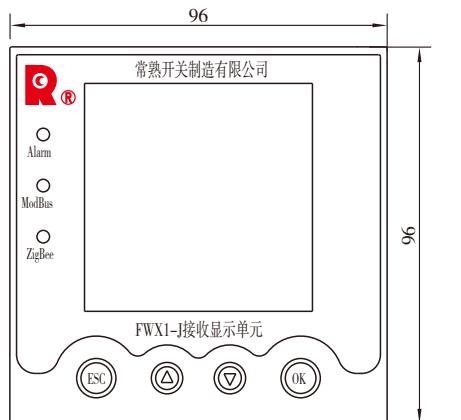



正面
Front view

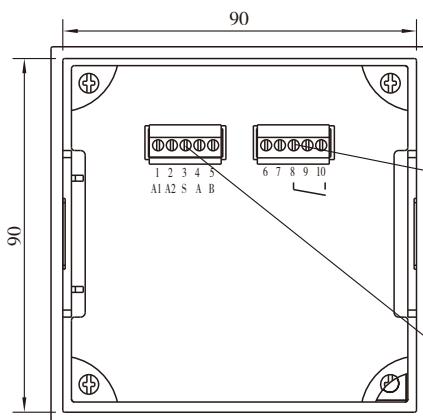

6:空 void
7:空 void
8:报警输出13 alarm output 13
9:空 void
10:报警输出14 alarm output 14


1:DC24V+
2:DC24V-
3:屏蔽地(S) shielded ground
4:接收/发送数据(A) receive/send data(A)
5:接收/发送数据(B) receive/send data(B)

背面
Back view

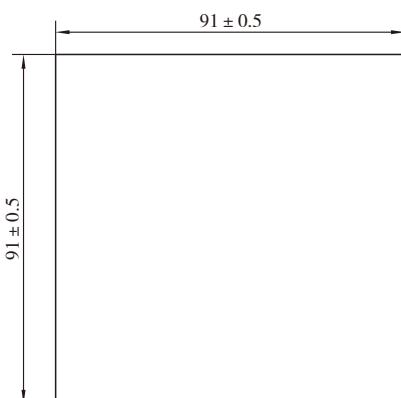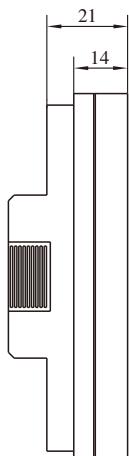


左视
left view


参考开孔尺寸
Reference cutout dimensions

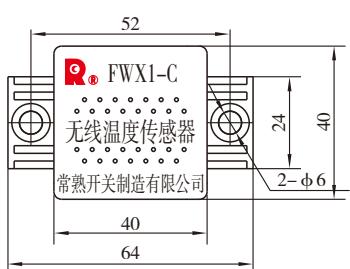

正面
Front view

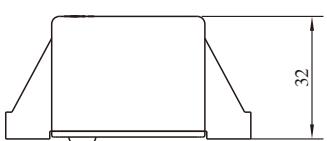

侧面
Side view

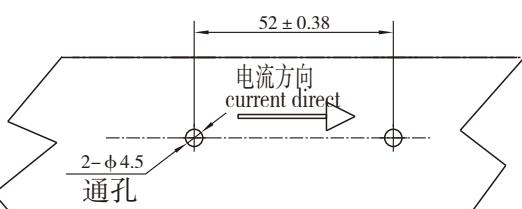

母排参考开孔尺寸 (使用配套螺钉)
Reference cutout dimensions of busbar
(using matching screws)

注：传感器需按图示方向安装。

Note: sensor must be mounted by diagram form.



断路器订货规范

(一) 用户务必确认对本产品技术资料已有详细了解，并应根据断路器将来使用的场合，按“订货规范”表订货。

(二) 如用户订货时对智能控制器保护参数不作要求，本公司将按“智能控制器出厂整定值”表配置。

断路器订货规范

(请在□填上数字, □打√)

用户单位	订货台数				订货日期				
型 号	CW2- □ / □(极数、三极可不标)				额定电压	<input type="checkbox"/> AC400V <input type="checkbox"/> AC690V*			
用 途	□ 陆用	□ 湿热带型 (TH型)			额定电流	In= □ A			
连 接	固定式	□ 水平(后置)	□ 垂直(后置)						
	抽屉式	□ 水平(后置)	□ 垂直(后置)						
智 能 控 制 器	类型选择	□ L25型	<input type="checkbox"/> M25型 (LED显示)	<input type="checkbox"/> M26型 (LED显示)	<input type="checkbox"/> H26型 (LED显示)	□ P26型	<input type="checkbox"/> P25型		
			<input type="checkbox"/> MY25型 (LCD显示)	<input type="checkbox"/> MY26型 (LCD显示)	<input type="checkbox"/> HY26型 (LCD显示)				
	基 本 功 能	过载长延时保护 Ir1 □ t1 □		短路短延时保护 Ir2 □ t2 □		短路瞬时保护 Ir3 □			
		接地故障保护 Ir4 □ t4 □							
		过载长延时保护曲线				过载长延时保护曲线			
		通用反时限 (I ² t)				<input type="checkbox"/> 通用反时限 (I ² t) <input type="checkbox"/> 非常反时限 (It) <input type="checkbox"/> 高压熔丝型 (I ⁴ t)			
		<input type="checkbox"/> 50%In <input type="checkbox"/> 100%In (N线整定电流选择)				<input type="checkbox"/> OFF <input type="checkbox"/> 50%In <input type="checkbox"/> 100%In <input type="checkbox"/> 200%In (200% In为三极断路器+外接中性线互感器且CW2-6300无)			
	选 择 功 能		<input type="checkbox"/> 电压显示功能 (M25、M26可选, H26标配) <input type="checkbox"/> ZSI功能 <input type="checkbox"/> 负载监控功能: <input type="checkbox"/> 方式一 <input type="checkbox"/> 方式二 <input type="checkbox"/> 电流不平衡/断相保护 <input type="checkbox"/> 功率表功能 (MY25、MY26可选, HY26标配, 此功能含电压显示) <input type="checkbox"/> 通信功能 <input type="checkbox"/> 谐波表 <input type="checkbox"/> 电流不平衡显示						
			CW2-2000及以上	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V				<input type="checkbox"/> DC220V <input type="checkbox"/> DC110V (需选配DC24V电源模块)	
			CW2-1600	<input type="checkbox"/> DC24V		<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		(需必选专用电源模块)	
标 配 附 件	FFT分励脱扣器	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V <input type="checkbox"/> DC220V <input type="checkbox"/> DC110V							
	FHD合闸电磁铁	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V <input type="checkbox"/> DC220V <input type="checkbox"/> DC110V							
	FDC电动操作机构	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V <input type="checkbox"/> DC220V <input type="checkbox"/> DC110V							
	FFC辅助开关	<input type="checkbox"/> 标准型式 <input type="checkbox"/> 4组转换触头 <input type="checkbox"/> 特殊型式 <input type="checkbox"/> 4常开4常闭 <input type="checkbox"/> 6常开2常闭 <input type="checkbox"/> 2常开6常闭							
选 择 附 件	□ FQT欠电压脱扣器	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V			<input type="checkbox"/> 光伏专用型 <input type="checkbox"/> AC220V <input type="checkbox"/> AC380V				
		<input type="checkbox"/> 欠电压瞬时脱扣器			<input type="checkbox"/> 欠电压瞬时脱扣器				
		<input type="checkbox"/> 欠电压延时脱扣器 <input type="checkbox"/> 0.5s <input type="checkbox"/> 1s <input type="checkbox"/> 2s <input type="checkbox"/> 3s			<input type="checkbox"/> 欠电压0-10s延时脱扣器 (出厂默认设定值3s)				
	□ FFS“分闸”锁定装置	<input type="checkbox"/> 一台断路器 <input type="checkbox"/> 一锁一钥匙							
		<input type="checkbox"/> 二台断路器 <input type="checkbox"/> 二锁一钥匙							
		<input type="checkbox"/> 三台断路器 <input type="checkbox"/> 三锁二钥匙							
	□ FLS机械联锁	<input type="checkbox"/> 二台断路器 <input type="checkbox"/> 钢缆联锁			<input type="checkbox"/> 联杆联锁				
		<input type="checkbox"/> 三台断路器 <input type="checkbox"/> 钢缆联锁方式三 <input type="checkbox"/> 联杆联锁方式一 <input type="checkbox"/> 联杆联锁方式二 <input type="checkbox"/> 联杆联锁方式三							
		<input type="checkbox"/> 外接中性线N电流互感器 <input type="checkbox"/> FDH-60 <input type="checkbox"/> FDH-80b <input type="checkbox"/> FDH-80 <input type="checkbox"/> FDH-120 <input type="checkbox"/> FDH-260							
	<input type="checkbox"/> FWZ抽屉座位置电气指示装置 <input type="checkbox"/> FXG相间隔板						<input type="checkbox"/> FAN按钮锁定装置		
	<input type="checkbox"/> FHM合闸准备就绪电气指示模块						<input type="checkbox"/> FJS计数器		
	<input type="checkbox"/> 通信功能选件 <input type="checkbox"/> FCT抽屉座通信模块组件 <input type="checkbox"/> FHX合闸准备就绪信号 <input type="checkbox"/> FQX欠电压信号 <input type="checkbox"/> FGT故障脱扣信号								
<input type="checkbox"/> FDY专用电源模块 <input type="checkbox"/> AC230V <input type="checkbox"/> AC400V									
<input type="checkbox"/> FDY/WT直流电源模块 <input type="checkbox"/> DC220V <input type="checkbox"/> DC110V						<input type="checkbox"/> FDY/W2T DC24V电源模块			
<input type="checkbox"/> FZZ两路电源自动电源转换系统						<input type="checkbox"/> 电子型自动转换控制器 <input type="checkbox"/> R型 <input type="checkbox"/> S型 <input type="checkbox"/> F型 <input type="checkbox"/> 智能型自动转换控制器 <input type="checkbox"/> ZR型 <input type="checkbox"/> ZS型 <input type="checkbox"/> ZF型 <input type="checkbox"/> 智能可通信自动转换控制器 <input type="checkbox"/> ZTR型 <input type="checkbox"/> ZTS型 <input type="checkbox"/> ZTF型			
<input type="checkbox"/> FLZ两进线—母联自动电源转换系统						<input type="checkbox"/> 智能型自动转换控制器 <input type="checkbox"/> WTT3型 <input type="checkbox"/> 智能型带并联转换自动转换控制器 <input type="checkbox"/> WTB3型	<input type="checkbox"/> 通信		
<input type="checkbox"/> FLZ三电源自动转换系统						<input type="checkbox"/> 智能型自动转换控制器WTT5	<input type="checkbox"/> 通信		
备 注									

注1：所有电源模块电压均为输入电压，输出均为DC24V，用户应根据自己提供的电源电压选择相应的电源模块。若断路器选择了电源模块，则智能控制器的电源电压不作选择。

注2：工作电压大于AC400V需电压显示功能时，请配接配置的电压转换模块，并准确按400V侧输出接至相应接线图的端子上。

注3：可供提供CW2-1600、2000C、2000、2500、4000、6300低温至-40℃断路器。

注4：选择FLZ自动电源转换系统时断路器标配FAN按钮锁定装置。

注5：选择FZZ、FLZ自动电源转换系统时，智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压均为AC230V。

*注：CW2-6300用于AC690V IT配电系统时，请与公司联系。



断路器订货规范

下列内容为均可供货的项目，需要时请在□打√

母线连接方式	固定式 <input type="checkbox"/> 上水平下垂直（后置） <input type="checkbox"/> 下水平上垂直（后置）	注：固定式上水平下垂直（后置）仅供Inm=1600A、2000A断路器	
	抽屉式 <input type="checkbox"/> 上水平下垂直（后置） <input type="checkbox"/> 下水平上垂直（后置）		
特殊形式长期工作型 FFT分励脱扣器	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		
FFC辅助开关	<input type="checkbox"/> 5常开5常闭 <input type="checkbox"/> 6常开6常闭 <input type="checkbox"/> 6组转换触头		
FQT欠电压脱扣器	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		
	<input type="checkbox"/> 欠电压延时脱扣器 <input type="checkbox"/> 4s <input type="checkbox"/> 5s <input type="checkbox"/> 9s		
FFS“分闸”锁定装置	<input type="checkbox"/> 一台断路器 <input type="checkbox"/> 二锁（二相同锁） <input type="checkbox"/> 二锁（二不同锁）		
注：对智能控制器、分励脱扣器、合闸电磁铁和电动操作机构的控制电源电压为AC110V、200V等规格等级要求，请咨询本公司。			



ORDER FORM OF BREAKER

1. Users should make sure of their detailed acquaintance of the products' technological materials and make order by the "ordering notice" in terms of future applicable situations of the circuit breakers.

2. The company would configure by "Factory's setting values of the intelligent release" if users had no requirements of protection parameters when making order.

Order form of breaker

(Please fill numbers in or mark in)

Name					Order amount		Order data		
Type	CW2- <input type="text"/> / <input type="text"/> (poles, omit for three poles)				Rated voltage	<input type="checkbox"/> AC400V <input type="checkbox"/> AC690V*			
Usage	<input type="checkbox"/> On Land <input type="checkbox"/> Humid tropical(TH)				Rated current	In= <input type="text"/> A			
Connection	Fixed <input type="checkbox"/> Horizontal(back set) <input type="checkbox"/> Vertical (back set)								
	Draw-out <input type="checkbox"/> Horizontal(backset) <input type="checkbox"/> Vertical(back set)								
Intelligent controller	Type selection	<input type="checkbox"/> Type L25	<input type="checkbox"/> Type M25 (LED)	<input type="checkbox"/> Type M26 (LED)	<input type="checkbox"/> Type H26	<input type="checkbox"/> Type P26	<input type="checkbox"/> Type P25		
		<input type="checkbox"/> Type MY25 (LCD)	<input type="checkbox"/> Type MY26 (LCD)	<input type="checkbox"/> Type HY26 (LCD)	<input type="checkbox"/> Type HY26 (LCD)	<input type="checkbox"/> Type HY26 (LCD)	<input type="checkbox"/> Type HY26 (LCD)		
	Basic function	Long-time delay overload protection Ir1 <input type="text"/> t1 <input type="text"/>		Short-time delay short circuit protection Ir2 <input type="text"/> t2 <input type="text"/>		Instantaneous short circuit protection Ir3 <input type="text"/>			
						<input type="checkbox"/> Ground-fault protection Ir4 <input type="text"/> t4 <input type="text"/>			
		Long-time delay overload protection				Long-time delay overload protection			
		General inverse time delay (I ² t)				<input type="checkbox"/> General inverse time delay (I ² t) <input type="checkbox"/> Special inverse time delay(It) <input type="checkbox"/> High-voltage fuse type (I ⁴ t)			
		<input type="checkbox"/> 50%In <input type="checkbox"/> 100%In (Select setting current of N line)				<input type="checkbox"/> OFF <input type="checkbox"/> 50%In <input type="checkbox"/> 100%In <input type="checkbox"/> 200%In (200% In for three-pole breaker + neutral line transformer CW2-6300 except)			
	Selective function	Contact wearing indication				Fault memory		Self-diagnosis	
		<input type="checkbox"/> Indication of voltage (selecting for M25、M26, fitting for H26)							
		<input type="checkbox"/> ZSI function <input type="checkbox"/> Load-monitoring function: <input type="checkbox"/> Pattern one <input type="checkbox"/> Pattern two <input type="checkbox"/> Current unbalance/loss phase Note: choosing either of the two							
Voltage of the intelligent controller	CW2-2000 and above <input type="checkbox"/> AC230V <input type="checkbox"/> AC400V				<input type="checkbox"/> DC220V <input type="checkbox"/> DC110V				
	CW2-1600 <input type="checkbox"/> DC24V Need be selectively equipped with DC24V power supply module	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V Need be selectively equipped power supply module						Need be selectively equipped with DC power supply module	
Normally-deployed accessories	FFT Shunt release	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC110V		<input type="checkbox"/> DC220V			
	FHD Switching-on electromagnet	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC110V		<input type="checkbox"/> DC220V			
	FDC Power-driven operation mechanism	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC110V		<input type="checkbox"/> DC220V			
	FFC Auxiliary switch	Standard pattern <input type="checkbox"/> Four groups of changeover contacts							
		Exceptional pattern <input type="checkbox"/> Four pieces of normally-opened contacts (NO) and four pieces of normally-closed contacts(NC)	<input type="checkbox"/> Six pieces of normally-opened contacts (NO) and two pieces of normally-closed contacts(NC)		<input type="checkbox"/> Six pieces of normally-opened contacts (NO) and two pieces of normally-closed contacts(NC)				
Choice of accessories	FQT Under-voltage release	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V							
		<input type="checkbox"/> Under-voltage instantaneous release <input type="checkbox"/> Under-voltage time delay release		<input type="checkbox"/> 0.5s <input type="checkbox"/> 1s <input type="checkbox"/> 2s <input type="checkbox"/> 3s		<input type="checkbox"/> Specical for PV <input type="checkbox"/> AC220V <input type="checkbox"/> AC380V <input type="checkbox"/> under-voltage instantaneous release <input type="checkbox"/> under-voltage 0~10s delay-time release (facting set 3s)			
	FFS "Switching-off lock mechanism	One sets of circuit breakers <input type="checkbox"/> One lock and one key							
		Two sets of circuit breakers <input type="checkbox"/> Two lock and one key							
		Three sets of circuit breakers <input type="checkbox"/> Three lock and two key							
	FLS Mechanical interlock	Two sets of circuit breakers <input type="checkbox"/> Steel lock interlock		<input type="checkbox"/> Link rod interlock					
		<input type="checkbox"/> Steel lock interlock <input type="checkbox"/> Pattern one of rod interlock		<input type="checkbox"/> Pattern two of rod interlock		<input type="checkbox"/> Pattern three of rod interlock			
	<input type="checkbox"/> Current mutual inductor with the neutral line N connected externally <input type="checkbox"/> FDH-60 <input type="checkbox"/> FDH-80b <input type="checkbox"/> FDH-80 <input type="checkbox"/> FDH-120 <input type="checkbox"/> FDH-260								
	<input type="checkbox"/> FWZ Electrical indication mechanism of draw-out socket position <input type="checkbox"/> FXG Isolation plate between phases <input type="checkbox"/> FAN "Button" locking device								
	<input type="checkbox"/> FHM Electrical module for indication of ready-for switching on <input type="checkbox"/> FJS Counter								
Communication function choice of accessories	<input type="checkbox"/> FCT Components of draw-out socket communication module		<input type="checkbox"/> FHX Signal of ready-for-switching on		<input type="checkbox"/> FOX Signal of under-voltage		<input type="checkbox"/> FGTSignal of fault release		
	<input type="checkbox"/> FDY Special supplu module <input type="checkbox"/> AC230V <input type="checkbox"/> AC400V								
	<input type="checkbox"/> FDY/WT DC power supply module <input type="checkbox"/> DC220V <input type="checkbox"/> DC110V				<input type="checkbox"/> FDY/W2T DC24V power supply module				
	<input type="checkbox"/> FZZ two supply automatic power supply switch system		<input type="checkbox"/> Electronic automatic switch controller <input type="checkbox"/> R type <input type="checkbox"/> Intelligent automatic switch controller <input type="checkbox"/> ZR type		<input type="checkbox"/> S type <input type="checkbox"/> F type <input type="checkbox"/> ZS type <input type="checkbox"/> ZF type				
			<input type="checkbox"/> Intelligent communicative automatic switch controller <input type="checkbox"/> ZTR type		<input type="checkbox"/> ZTS type <input type="checkbox"/> ZTF type				
	<input type="checkbox"/> FLZ two incoming one couple automatic power supply switch		<input type="checkbox"/> Intelligent automatic switch controller <input type="checkbox"/> WTT3 type <input type="checkbox"/> Intelligent in parallel automatic switch controller <input type="checkbox"/> WTB3 type		<input type="checkbox"/> communication				
	<input type="checkbox"/> FLZ three supply automatic power supply switch		<input type="checkbox"/> Intelligent automatic switch controller <input type="checkbox"/> WTT5 type		<input type="checkbox"/> communication				
Note									

Note1:The voltage of all supply modules is input voltage,it's output voltage is DC24V,user may selecting module by providing voltage. If selecting supply module, voltage of intelligent controller is not selected.

Note2:When there has voltage display function and the input voltage id higher than AC400V,there should have this module

Note3:CW2-1600、2000C、2000、2500、4000、6300 breakers can be provided temperature down to -40℃.

Note4:FAN"button" locking device is standardly fitted when selecting FLZ two incoming one couple automatic power supply switch.

Note5:When selecng FZZ、FLZ, voltage is AC230V for intelligent controller, shunt release, switching-oneelectromagnet, power-drcven operation mechanism.

*Note:When order the IT power distribution system breakers of CW2-6300 used in AC690V,please call us.



ORDER FORM OF BREAKER

Items may be provided under table,please signning √ in □

Bar connecting type	Fixed <input type="checkbox"/> Upper horizontal-down vertical(back) <input type="checkbox"/> Down horizontal-upper vertical(back)	To fixed breaker upper horizontal-down vertical (back) is only for Inm=1600A、2000A
	Draw-out <input type="checkbox"/> Upper horizontal-down vertical(back) <input type="checkbox"/> Down horizontal-upper vertical(back)	
FFT Special type shunt release for longtime working	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V	
FFC Auxiliary switch	<input type="checkbox"/> 5NO5NC <input type="checkbox"/> 6NO6NC <input type="checkbox"/> Six pairs of chang over contacts	
FQT Under voltage release	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V <input type="checkbox"/> Under voltage time delay release <input type="checkbox"/> 4s <input type="checkbox"/> 5s <input type="checkbox"/> 9s	
FFS Off lock device	One breaker <input type="checkbox"/> Two lockes(two same lockes) <input type="checkbox"/> Two lockes(two different lockes)	
Note: when order control supply voltage of AC110V or 200V and so on for intelligent controller、shunt release、closing magnet and motor driven mechanism,please call us.		



智能控制器出厂整定值
Factory's setting values of intelligent controller

过载长延时 Overload long-time delay	电流整定值Ir ₁ Setting values of current	In			
	延时时间整定值t ₁ Setting values of delay time	480s			
	P25、P26长延时特性 Overload long-time delay of P25 and P26	I ² t			
短路短延时 Short circuit short-time delay	电流整定值Ir ₂ Setting values of current	6Ir ₁			
	延时时间整定值t ₂ Setting values of delay time	0.2s			
短路瞬时电流整定值Ir ₃ Setting values of short circuit instantaneous current		15In (对In≤1000A) 15In (for In ≤1000A) 12In (对In=1250A,1600A) 12In (for In =1250A,1600A) 10In (对In≥2000A) 10In (for In ≥2000A)			
接地故障 (L25、M25/MY25、P25型无) Ground-fault (Not for L25、M25/MY25、P25)	电流整定值Ir ₄ Setting values of current	CW2-1600	CW2-2000C CW2-2000 CW2-2500	CW2-4000	CW2-6300
		0.8In或1000A (取小者) To select the minimum	0.8In或1200A (取小者) To select the minimum	0.6In或1600A (取小者) To select the minimum	2000A
	延时时间整定值t ₄ Setting values of delay time	0.4s			
负载监控 (L25型无, M25/MY25、M26/MY26、H26HY26、P25、P26型为可选项) Load-monitoring(Not for type L25,optional for type M25/MY25,M26/MY26,H26/HY26,P25and P26)	监控电流I _{LC1} Monitoring current	In			
	监控电流I _{LC2} Monitoring current	In			
电流不平衡 Current unbalance	不平衡整定值 ε I ₁₁ Unbalance value	60%			
	整定时间t ₅ Setting time t ₅	40s			
断相 Loss phase	断相整定值 ε I ₁₂ Loss phase setting	95%			
	整定时间t ₆ Setting time	3s			



CW2系列断路器AC1000V产品主要技术指标及说明
CW2 SERIES CIRCUIT BREAKER AC1000V PRODUCT PRIMARY TECHNICAL INDICATORS AND INSTRUCTION

● 主要技术指标 Primary technical indicators

型 号 Type		CW2-2000			CW2-4000					
壳架等级额定电流Imm (A)Rated frame current		2000			4000					
额定电流In (A)	Rated working current	630、800、1000、 1250、1600、2000			2000、2500、2900、 3200、3600、4000					
额定工作电压Ue (V) Rated working voltage		AC50Hz/60Hz,1000								
额定绝缘电压Ui (V) Rated insulation voltage		1000								
额定冲击耐受电压Uimp (kV) Rated impulse withstand voltage		12								
工频耐受电压U (V) 1min Working frequency withstand voltage		3500								
极数 Pole number		3、4								
N极额定电流IN (A) Rated current of N pole		100%In								
额定极限短路分断能力Icu(kA)(有效值) Limiting rated short circuit breaking capacity (effective value)		36			50					
额定运行短路分断能力Ics(kA) (有效值) Operating /Rated short circuit breaking capacity (effective value)		36			50					
额定短路接通能力Icm(kA) (峰值) Rated short time connecting capacity (peak value)		75.6			105					
额定短时耐受电流Icw(kA) (有效值) Rated short time withstand current (effective value)		36/1s			50/1s					
分断时间 (ms) Breaking time		< 30								
闭合时间 (ms) Closing time		< 70								
智能控制器 Intelligent controller	M25/MY25型 Type M25/MY25		○							
	M26/MY26型 Type M26/MY26		○							
	H26/HY26型 Type H26/HY26		○							
操作性能 Operational performance	电气寿命 Electrical life		1000			500				
	机械寿命 Mechanical life	免维护 Non-maintainance		5000			2000			
		有维护 Maintanance		10000			4000			
外形尺寸 Outline dimensions	宽×高×深 W × H × D (mm) Width × height × depth		W × H × D			W × H × D				
	抽屉式 Draw-out	水平连接 Horiz-ontal	3P	后置 Back set	347	438	390	401	438	395
			4P	后置 Back set	442	438	390	514	438	395
		垂直连接 Vertical	3P	后置 Back set	347	438	390	401	438	395
			4P	后置 Back set	442	438	390	514	438	395
	固定式 Fixed	水平连接 Horiz-ontal	3P	后置 Back set	362	395	290	414	395	290
			4P	后置 Back set	457	395	290	527	395	290
		垂直连接 Vertical	3P	后置 Back set	362	395	290			
			4P	后置 Back set	457	395	290			



● 应用说明

- AC1000V断路器为特殊型断路器（不适用IT系统），主要用于矿山、化工厂等场合。
- AC1000VCW2断路器配备的智能控制器型号仅为M25/MY25、M26/MY26、H26/HY26型六种规格。具体订货按CW2系列断路器AC1000V产品订货规范。
- 当订购电压显示功能时，相应配置电压转换模块(标配)，模块输入端接至主回路，输出端接至相应的断路器电压输入二次端子17、18、19、20（见P36）。

● Application Note:

- AC1000V circuit breaker is special-breaker(don't suit for IT system), mainly for the mining, chemical plants and so on.
- The intelligent controllers matched for AC1000V CW2 circuit breaker are only M25/MY25、M26/MY26 and H26/HY26 six types. Making order please according to CW2 series circuit breaker AC1000V products order norms.
- When ordering voltage display function, the corresponding distribution of voltage converting modules (Standard), the module input terminals connect to the main circuit, the output terminals connect to corresponding circuit breaker voltage input second terminals 17、18、19 and 20 (see page P36).



CW2系列断路器AC1000V订货规范

(请在□填上数字, □打√)

用户单位			订货台数		订货日期							
型 号	CW2- □ / □(极数、三极可不标)		额定电压	□ AC1000V								
用 途	□ 陆用	□ 湿热带型 (TH型)	额定电流	In= □ A								
连 接	固定式	□ 水平 (后置)	□ 垂直 (后置)									
	抽屉式	□ 水平 (后置)	□ 垂直 (后置)									
智 能 控 制 器	类型选择	□ M25型 (LED显示)	□ M26型 (LED显示)	□ H26型 (LED显示)								
		□ MY25型 (LCD显示)	□ MY26型 (LCD显示)	□ HY26型 (LCD显示)								
	基 本 功 能	过载长延时保护 Ir1 □ t1 □	短路短延时保护 Ir2 □ t2 □	短路瞬时保护 Ir3 □								
			接地故障保护 Ir4 □	t4 □								
		□ 50%In	□ 100%In (N线整定电流选择)									
	选 择 功 能	□ 电压显示功能 (M25、M26可选, H26标配)										
		□ ZSI功能	□ 负载监控功能:	□ 方式一	□ 方式二	注: 负载监控和电流不平衡/断相两选一						
		□ 电流不平衡/断相保护										
	□ 功率表功能 (MY25、MY26可选, HY26标配, 此功能含电压显示)											
	智 能 控 制 器 电 压	□ AC230V	□ AC400V	□ DC220V	□ DC110V	(需选配直流电源模块)						
标 配 附 件	FFT分励脱扣器	□ AC230V	□ AC400V	□ DC220V	□ DC110V							
	FHD合闸电磁铁	□ AC230V	□ AC400V	□ DC220V	□ DC110V							
	FDC电动操作机构	□ AC230V	□ AC400V	□ DC220V	□ DC110V							
	FFC辅助开关	标准型式	□ 4组转换触头									
		特殊型式	□ 4常开4常闭	□ 6常开2常闭	□ 2常开6常闭							
选 择 附 件	FQT欠电压脱扣器	□ AC230V	□ AC400V	光伏专用型	□ AC220V	□ AC380V						
		□ 欠电压瞬时脱扣器		□ 欠电压瞬时脱扣器								
		□ 欠电压延时脱扣器	□ 0.5s □ 1s □ 2s □ 3s	□ 欠电压0~10s延时脱扣器 (出厂默认设定值3s)								
	FFS “分闸” 锁定装置	一台断路器	□ 一锁一钥匙									
		二台断路器	□ 二锁一钥匙									
		三台断路器	□ 三锁二钥匙									
	FLS机械联锁	二台断路器	□ 钢缆联锁	□ 联杆联锁								
		三台断路器	□ 钢缆联锁方式三	□ 联杆联锁方式一	□ 联杆联锁方式二	□ 联杆联锁方式三						
	外接中性线N电流互感器	□ FDH-80b	□ FDH-80	□ FDH-120	□ FDH-260	□ FXG相间隔板						
	FWZ抽屉座位置电气指示装置						□ FAN按钮锁定装置					
	FHM合闸准备就绪电气指示模块						□ FJS计数器					
	通信功能选件	□ FCT抽屉座通信模块组件	□ FHX合闸准备就绪信号	□ FQX欠电压信号	□ FGT故障脱扣信号							
	FDY/WT直流电源模块	□ DC220V	□ DC110V									
	FZZ两路电源自动电源转换系统	电子型自动转换控制器 智能型自动转换控制器 智能可通信自动转换控制器		□ R型	□ S型	□ F型	□ ZR型	□ ZS型	□ ZF型	□ ZTR型	□ ZTS型	□ ZTF型
FLZ两进线一母联自动电源转换系统	智能型自动转换控制器		□ WTT3型	智能型带并联转换自动转换控制器			□ WTB3型	□ 通信				
FLZ三电源自动转换系统	智能型自动转换控制器		WTT5					□ 通信				
备注												

注1: 对电压显示, 请配接配置的电压转换模块, 并准确按400V侧输出接至相应接线图的端子上。

注2: 选择FLZ自动电源转换系统时断路器标配FAN按钮锁定装置。

注3: 可提供CW2-2000、4000低温至-40℃断路器。

注4: 选择FZZ、FLZ自动电源转换系统时, 智能控制器、分励脱扣器、合闸电磁铁、电动操作机构电压均为AC230V。



Order notice of CW2 series circuit breaker AC1000V product

(Please fill numbers in □ or mark √ in □)

Name			Order amount		Order data		
Type	CW2- □ / □ (poles, omit for three poles)		Rated voltage	<input type="checkbox"/> AC1000V			
Usage	<input type="checkbox"/> On Land	<input type="checkbox"/> Humid tropical(TH)	Rated current	In= □ A			
Connection	Fixed	<input type="checkbox"/> Horizontal(back set)	<input type="checkbox"/> Vertical (back set)				
	Draw-out	<input type="checkbox"/> Horizontal(backset)	<input type="checkbox"/> Vertical(back set)				
Intelligent controller	Type selection	<input type="checkbox"/> Type M25 (LED) <input type="checkbox"/> Type MY25 (LCD)	<input type="checkbox"/> Type M26 (LED) <input type="checkbox"/> Type MY26 (LCD)	<input type="checkbox"/> Type H26 (LED) <input type="checkbox"/> Type HY26 (LCD)			
	Basic function	Long-time delay overload protection Ir1 □ t1 □		Short-time delay short circuit protection Ir2 □ t2 □	Instantaneous short circuit protection Ir3 □		
					Ground-fault protection Ir4 □ t4 □		
		Long-time delay overload protection <input type="checkbox"/> 50%In <input type="checkbox"/> 100%In (Select setting current of N line)		Long-time delay overload protection			
		Selective function	<input type="checkbox"/> Indication of voltage (selecting for M25、M26, fitting for H26)				
	<input type="checkbox"/> ZSI function		<input type="checkbox"/> Load-monitoring function: <input type="checkbox"/> Pattern one <input type="checkbox"/> Pattern two <input type="checkbox"/> Current unbalance/loss phase				
						Note: choosing either of the two	
	Voltage of the intelligent controller	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC220V <input type="checkbox"/> DC110V Need be selectively equipped with DC power supply module			
	FFT Shunt release	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC110V <input type="checkbox"/> DC220V			
	FHD Switching-on electromagnet	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC110V <input type="checkbox"/> DC220V			
FDC Power-driven operation mechanism	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V		<input type="checkbox"/> DC110V <input type="checkbox"/> DC220V				
FFC Auxiliary switch	Standard pattern <input type="checkbox"/> Four groups of changeover contacts						
	Exceptional pattern	<input type="checkbox"/> Four pieces of normally-opened contacts (NO) and four pieces of normally-closed contacts(NC)		<input type="checkbox"/> Six pieces of normally-opened contacts (NO) and two pieces of normally-closed contacts(NC)		<input type="checkbox"/> Six pieces of normally-opened contacts (NO) and two pieces of normally-closed contacts(NC)	
□ FQT Under-voltage release	<input type="checkbox"/> AC230V <input type="checkbox"/> AC400V						
	<input type="checkbox"/> Under-voltage instantaneous release					Special for PV <input type="checkbox"/> AC220V <input type="checkbox"/> AC380V <input type="checkbox"/> under-voltage instantaneous release <input type="checkbox"/> under-voltage 0~10s delay-time release (factory set 3s)	
	<input type="checkbox"/> Under-voltage time delay release		<input type="checkbox"/> 0.5s <input type="checkbox"/> 1s <input type="checkbox"/> 2s <input type="checkbox"/> 3s				
□ FFS "Switching-off" lock mechanism	One sets of circuit breakers		<input type="checkbox"/> One lock and one key				
	Two sets of circuit breakers		<input type="checkbox"/> Two lock and one key				
□ FLS Mechanical interlock	Three sets of circuit breakers		<input type="checkbox"/> Three lock and two key				
	<input type="checkbox"/> Steel lock interlock		<input type="checkbox"/> Pattern one of rod interlock	<input type="checkbox"/> Pattern two of rod interlock	<input type="checkbox"/> Pattern three of rod interlock		
<input type="checkbox"/> Current mutual inductor with the neutral line N connected externally		<input type="checkbox"/> FDH-80b <input type="checkbox"/> FDH-80 <input type="checkbox"/> FDH-120 <input type="checkbox"/> FDH-260					
<input type="checkbox"/> FWZ Electrical indication mechanism of draw-out socket position		<input type="checkbox"/> FXG Isolation plate between phases		<input type="checkbox"/> FAN "Button" locking device			
<input type="checkbox"/> FHM Electrical module for indication of ready-for switching on				<input type="checkbox"/> FJS Counter			
Communication function choice of accessories	<input type="checkbox"/> FCT Components of draw-out socket communication module		<input type="checkbox"/> FXH Signal of ready-for-switching on		<input type="checkbox"/> FQX Signal of under-voltage		<input type="checkbox"/> FGT Signal of fault release
□ FDY/WT DC power supply module	<input type="checkbox"/> DC220V		<input type="checkbox"/> DC110V				
□ FZZ Automatic power supply switch system	Automatic switch controller		<input type="checkbox"/> R type	<input type="checkbox"/> S type	<input type="checkbox"/> F type		
□ FLZ two incoming one couple automatic power supply switch	Intelligent automatic switch controller		<input type="checkbox"/> WTT3 type			<input type="checkbox"/> communication	
□ FLZ three supply automatic power supply switch	Intelligent automatic switch controller		<input type="checkbox"/> WTT5 type				<input type="checkbox"/> communication

Note1: When there has voltage display function and the input voltage is higher than AC400V, there should have this module.

Note2: FAN "button" locking device is standardly fitted when selecting FLZ two incoming one couple automatic power supply switch.

Note3: CW2-2000、4000 breakers can be provided temperature down to -40°C.

Note4: When selecting FZZ、FLZ, voltage is AC230V for intelligent controller, shunt release, switching-on electromagnet, power-driven operation mechanism.



CW2系列断路器AC1000V产品出厂整定值

Factory's setting values of CW2 series circuit breaker AC1000V product

项目 Item	特性参数 Characteristic values	整定值范围 Setting range	出厂整定值 Factory's setting values
过载长延时 Overload long-time delay	电流整定值Ir ₁ (A) Setting values of current	(0.4~1) In	In
	延时时间整定值t ₁ (s) Setting values of delay time	15、30、60、120、240、480	480
短路短延时 Short circuit short-time delay	电流整定值Ir ₂ (A) Setting values of current	(0.4~8) In	6Ir ₁
	延时时间整定值t ₂ (s) Setting values of delay time	0.1、0.2、0.3、0.4 反时限或定时限 Inverse or definite	0.2
短路瞬时电流整定值Ir ₃ (kA) Setting values of short circuit instantaneous current		CW2-2000:2~25 CW2-4000:4~40	15In (对forIn≤1000A) 12In (forIn =1250A, 1600A) 8In (对forIn > 2000A)
接地故障 (M25/MY25无) Ground-fault(Not for M25/MY25)	电流整定值Ir ₄ (A) Setting values of current	CW2-2000:0.2In或160A (取大者) ~ 0.8In或1200A (取小者) CW2-4000:0.2In ~ 0.6In或1600A (取小者)	CW2-2000:0.8In或1200A (取小者) CW2-4000:0.6In或1600A (取小者)
	延时时间整定值t ₄ (s) Setting values of delay time	0.1、0.2、0.3、0.4	0.4
负载监控 (为可选项) Load-monitoring (optional)	监控电流I _{c1} (A) Monitoring current	(0.2~1) In	In
	监控电流I _{c2} (A) Monitoring current	(0.2~1) In	In
电流不平衡 Current unbalance	不平衡整定值 ε I ₁₁ Unbalance value		60%
	整定时间t ₅ Setting time t ₅		40s
断相 Loss phase	断相整定值 ε I ₁₂ Loss phase setting		95%
	整定时间t ₆ Setting time t ₆		3s



通信可选元件及温度模块订货规范

通信可选元件订货规范

用户单位		订货日期	
产品型号	订货数		
通信转接器（Ⅱ）			
CN1通信适配器	FTM61		
	CN1DP-MD		
	CN1DP-MP		
	CN1DP-MC		
	CN1EG/10		
FDM3短消息通知模块			
FWF1 WiFi通信模块			
CEPA3智能配电一体机	本体		
	可选模块： 短消息扩展模块		
CI1远程智能I/O模块	CI1-SCM423		
	CI1-S12		
	CI1-C8		
	CI1-SC64		

温度模块订货规范

请在□内填上数字

用户单位		订货日期				
FWD1温度上传模块 □ +	热传感器 <input type="checkbox"/>	FRG-7	FRG-9	FRG-11	FRG-13	FRG-17
	数量	<input type="checkbox"/>				
FWX1无线温度测量模块 <input type="checkbox"/>	1只 FWX1-J接收显示单元+□ FWX1-C无线温度传感器					



ORDER FORM OF COMMUNICATION COMPONENT AND TEMPERATURE MODULE

Order form of Communication Component

User		order date	
product type		order amount	
Communication changover device			
CN1 communicative adapter	FTM61		
	CN1DP-MD		
	CN1DP-MP		
	CN1DP-MC		
	CN1EG/10		
FDM3 message notify module			
FWF1 wifi communicative module			
CEPA3 intelligent distribution monitor	Main body		
	Selecting module : short message extend module		
CI1 remote intelligent I/O module	CI1-SCM423		
	CI1-S12		
	CI1-C8		
	CI1-SC64		

Order Form of temperature module

please fill number in

User		order date					
FWD1 temperature upload module <input type="checkbox"/> +	Heat sensor <input type="checkbox"/>	FRG-7	FRG-9	FRG-11	FRG-13	FRG-17	
FWX1 wireless temperature <input type="checkbox"/> measuring module	One FWX1-J receiving and display unit+ <input type="checkbox"/> FWX1-C wireless temperature sensor						



本公司可提供不带智能控制器的断路器，符合GB/T14048.2附录L的CBI-Y要求，断路器无过电流保护功能，其主要技术指标、二次回路接线图、订货规范分别如下。

Can provide breakers without intelligent controllers ,compliance with GB/T14048.2 annex L CBI-Y demands.The breakers are not fulfilling the requirements for overcurrent protection.Main technical index,wiring diagram of secondary circuit and order form,please seeing follow.

● 主要技术指标

Main technical index

型号 Type	CW2-1600	CW2-2000C/2000	CW2-2500	CW2-4000	CW2-6300
壳架等级额定电流Inm(A) Rated frame current	1600	2000	2500	4000	6300
额定电流In(A) Rated working current	200,400,630,800, 1000,1250,1600	630,800,1000, 1250,1600,2000	1250,1600,2000, 2500	2000,2500,2900, 3200,3600,4000	4000,5000,6300
额定工作电压Ue(V) Rated working voltage	AC50Hz/60Hz,400、690				
额定绝缘电压Ui(V) Rated insulation voltage	1000				
额定冲击耐受电压Uimp(kV) Rated impulse withstand voltage	12				
工频耐受电压U(V)1min Working frequency withstand voltage	3500				
极数 Pole number	3,4				
N极额定电流In(A) Rated current of N pole	100%In				
额定限制短路电流 Icc(kA)(有效值) Rated conditional short circuit current (effective value)	AC400V	42	66	65	85
	AC690V	25	40	50	75
					85




CW2系列无过电流保护断路器

CW2 SERIES BREAKERS NOT FULFILLING THE REQUIREMENTS FOR OVERCURRENT PROTECTION

● 二次回路接线图 Wiring diagram of secondary circuit

图 CW2-1600 无过电流保护断路器二次回路接线图
Wiring diagram of secondary circuit of CW2-1600 not fulfilling the requirements for overcurrent protection

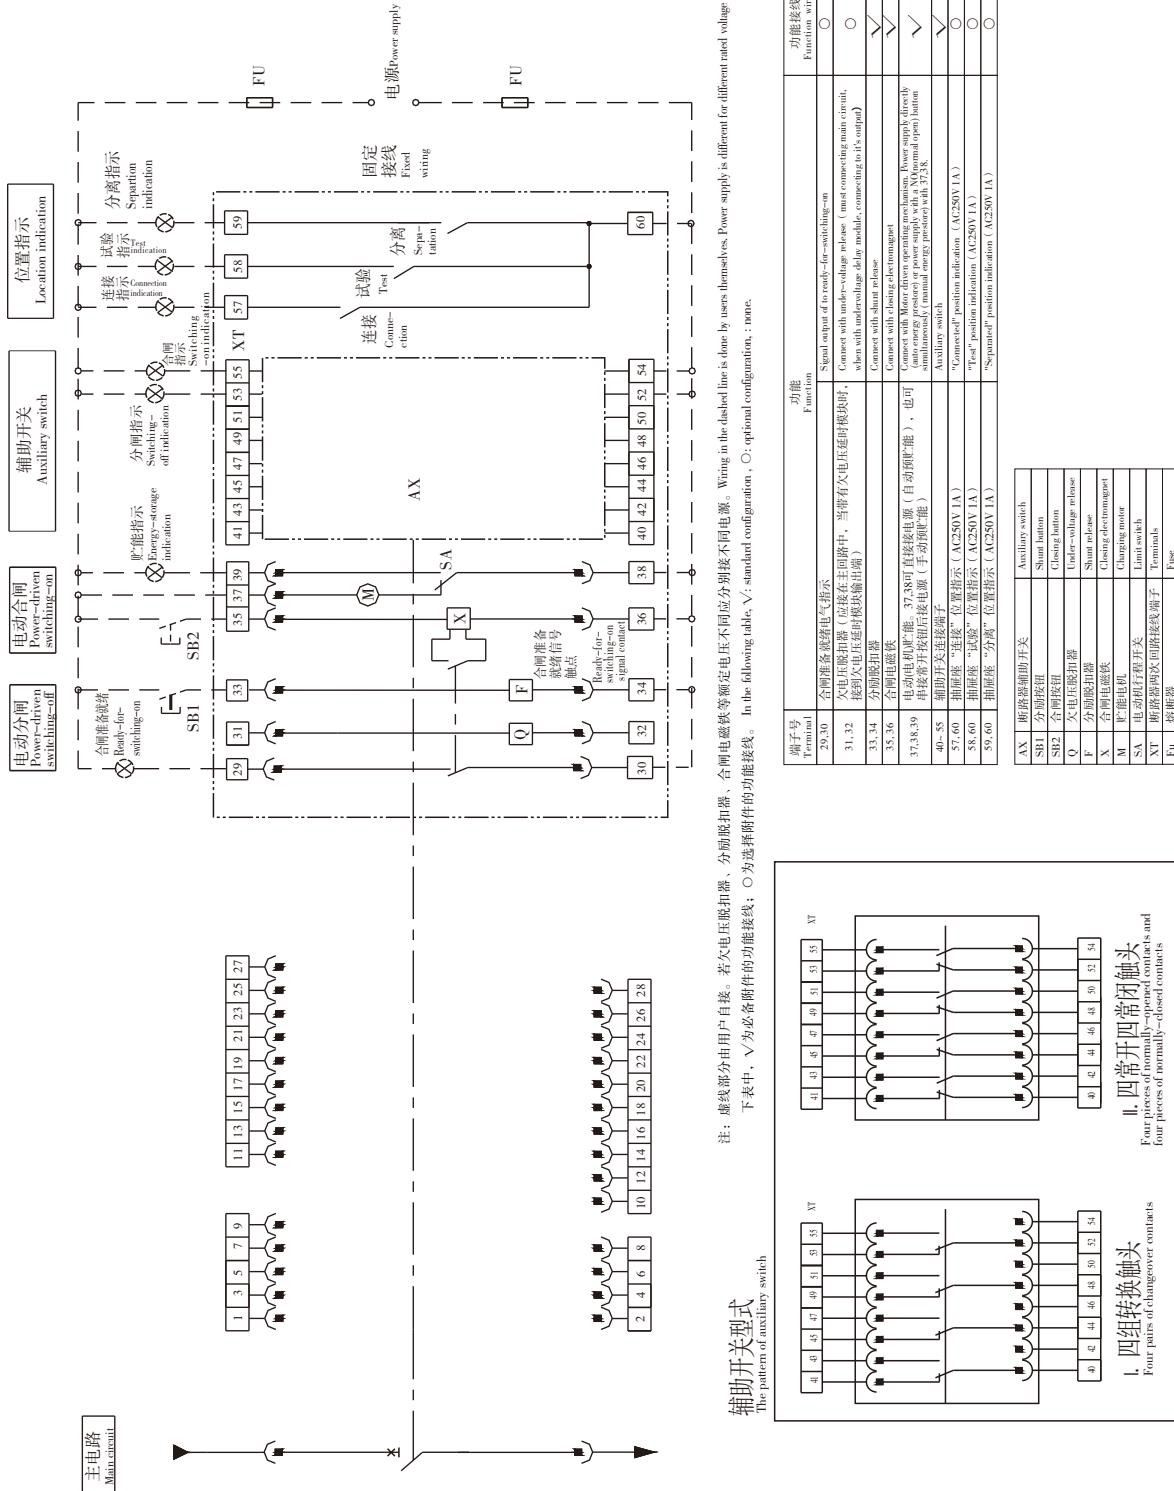




CW2系列无过电流保护断路器


CW2 SERIES BREAKERS NOT FULFILLING THE REQUIREMENTS FOR OVERCURRENT PROTECTION

图 CW2-2000C~6300无过电流保护断路器二次回路接线图
Wiring diagram of secondary circuit of CW 2-2000C~6300 not fulfilling the requirements for overcurrent protection.

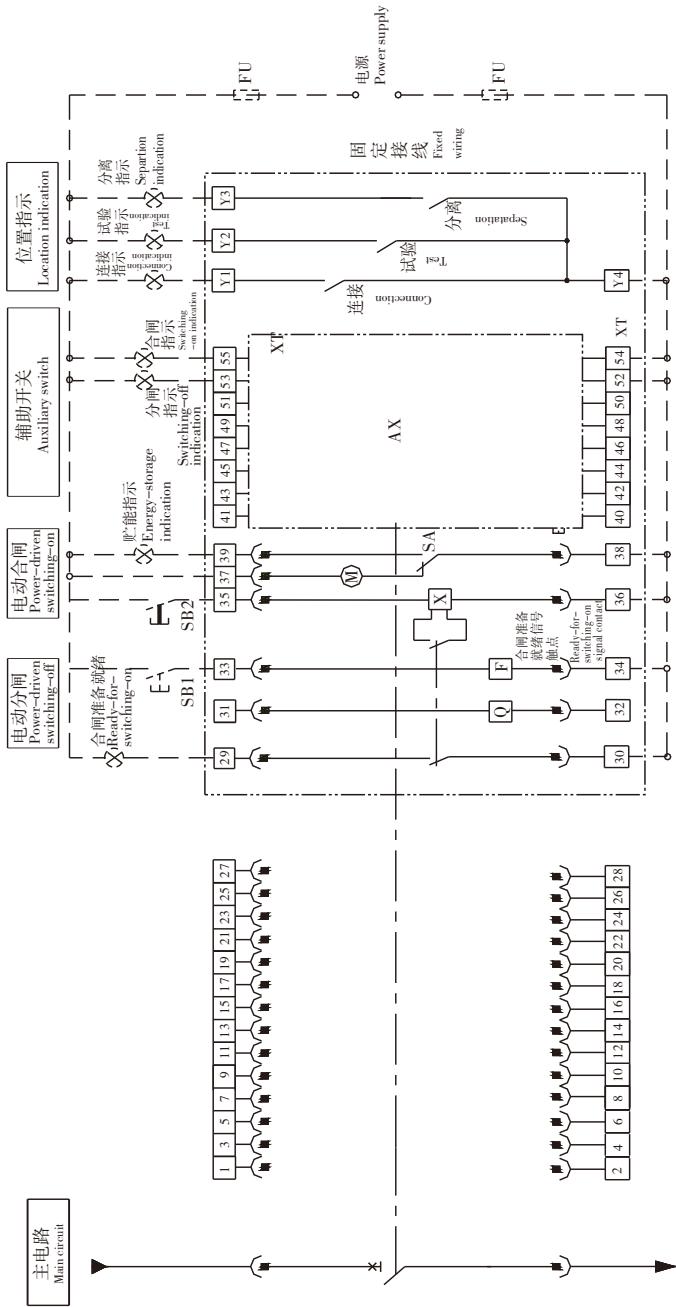

注：虚线部分由用户自接。若次电压脱扣器、分励脱扣器、合闸电磁铁等额定电压不对应分别接不同电源。Wiring in the dashed line is done by users themselves. Power supply is different for different rated voltage of controller, Q, FX etc.

辅助开关型式
The pattern of auxiliary switch

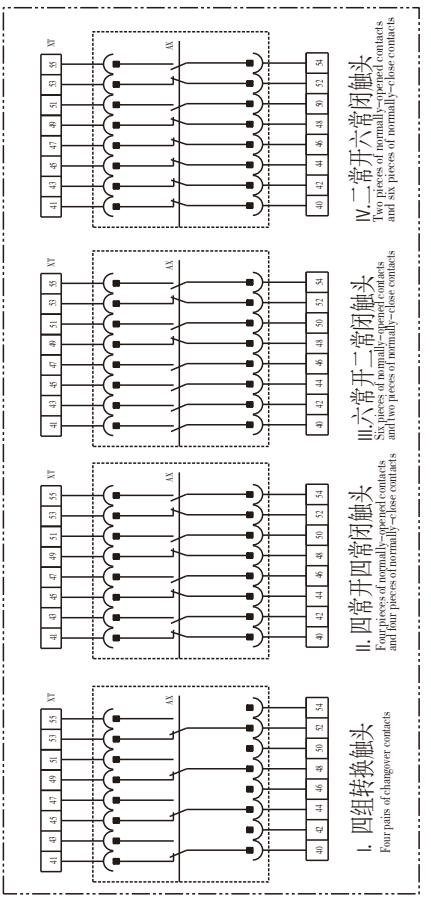

端子号 Terminal	功能 Function	功能接线 Function wiring
25,30	合闸准备继电器指示 Signal output of ready-for-switching-on	○
31,32	欠电压脱扣器 应接在主回路中当带有欠电压时脱扣输出端 Connect with under-voltage release	○
33,34	分励脱扣器 Connect with shunt release	✓
35,36	合闸电磁铁 Connect with closing electromagnet	✓
37,38,39	电动机脱扣 37,38引自接触电源（手动脱扣） 39引自接触电源（自动脱扣） Motor driven mechanism, power supply with a (Normal open) button (manual release) or a (Normal open) button (auto release) with Y38, Y39	○
Y1,Y4	抽屉隔板“试验”位置指示 (AC250V 1A) "Test" position indication (AC250V 1A)	○
Y2,Y4	抽屉隔板“准备”位置指示 (AC250V 1A) "Prepared" position indication (AC250V 1A)	○
Y3,Y4	抽屉隔板“分离”位置指示 (AC250V 1A) "Separated" position indication (AC250V 1A)	○

端子号 Terminal	功能 Function	功能接线 Function wiring
25,30	合闸准备继电器指示 Signal output of ready-for-switching-on	○
31,32	欠电压脱扣器 应接在主回路中当带有欠电压时脱扣输出端 Connect with under-voltage release	○
33,34	分励脱扣器 Connect with shunt release	✓
35,36	合闸电磁铁 Connect with closing electromagnet	✓
37,38,39	电动机脱扣 37,38引自接触电源（手动脱扣） 39引自接触电源（自动脱扣） Motor driven mechanism, power supply with a (Normal open) button (manual release) or a (Normal open) button (auto release) with Y38, Y39	○
Y1,Y4	抽屉隔板“试验”位置指示 (AC250V 1A) "Test" position indication (AC250V 1A)	○
Y2,Y4	抽屉隔板“准备”位置指示 (AC250V 1A) "Prepared" position indication (AC250V 1A)	○
Y3,Y4	抽屉隔板“分离”位置指示 (AC250V 1A) "Separated" position indication (AC250V 1A)	○



CW2系列无过电流保护断路器

CW2 SERIES BREAKERS NOT FULFILLING THE REQUIREMENTS FOR OVERCURRENT PROTECTION

● 订货规范

无过电流保护断路器订货规范 (请在□内填上数字, □打√)

用户单位			订货台数		订货日期		
型号		CW2- <input type="text"/> / <input type="checkbox"/> (极数、三极可不标) / CBI	额定电压	<input type="checkbox"/> AC400V <input type="checkbox"/> AC690V			
用途		<input type="checkbox"/> 陆用 <input type="checkbox"/> 湿热带型 (TH型)	额定电流	In= <input type="text"/> A			
连接		固定式 <input type="checkbox"/> 水平(后置) <input type="checkbox"/> 垂直(后置)					
		抽屉式 <input type="checkbox"/> 水平(后置) <input type="checkbox"/> 垂直(后置)					
标配附件	FFT分励脱扣器	<input type="checkbox"/> AC230V <input type="checkbox"/> AC 400V <input type="checkbox"/> DC 220V <input type="checkbox"/> DC 110V					
	FHD合闸电磁铁	<input type="checkbox"/> AC230V <input type="checkbox"/> AC 400V <input type="checkbox"/> DC 220V <input type="checkbox"/> DC 110V					
	FDC电动操作机构	<input type="checkbox"/> AC230V <input type="checkbox"/> AC 400V <input type="checkbox"/> DC 220V <input type="checkbox"/> DC 110V					
	FFC辅助开关	标准型式 <input type="checkbox"/> 4组转换触头					
特殊型式 <input type="checkbox"/> 4常开4常闭 <input type="checkbox"/> 6常开2常闭 <input type="checkbox"/> 2常开6常闭							
选择附件	□FQT欠电压脱扣器	<input type="checkbox"/> AC230V <input type="checkbox"/> AC 400V					
		□欠电压瞬时脱扣器					
		□欠电压延时脱扣器 <input type="checkbox"/> 0.5s <input type="checkbox"/> 1s <input type="checkbox"/> 2s <input type="checkbox"/> 3s					
	□FFS “分闸”锁定装置	一台断路器 <input type="checkbox"/> 一锁一钥匙					
		二台断路器 <input type="checkbox"/> 二锁一钥匙					
		三台断路器 <input type="checkbox"/> 三锁二钥匙					
	□FLS机械连锁	二台断路器 <input type="checkbox"/> 钢缆连锁 <input type="checkbox"/> 联杆连锁					
		三台断路器 <input type="checkbox"/> 钢缆连锁 <input type="checkbox"/> 联杆联锁方式一 <input type="checkbox"/> 联杆联锁方式二 <input type="checkbox"/> 联杆联锁方式三					
	<input type="checkbox"/> FXG相间隔板		<input type="checkbox"/> FAN按钮锁定装置				
	<input type="checkbox"/> FWZ抽屉座位置电气指示装置		<input type="checkbox"/> FJS计数器				
<input type="checkbox"/> FHM合闸准备就绪电气指示模块							

Order form of breakers not fulfilling the requirement for overcurrent protection

(Please fill numbers in □ or mark √ in □)

Name	Order amount			Order data			
Type	CW2- <input type="text"/> / <input type="checkbox"/> (poles、omit for three poles) /CBI			Rated voltage	<input type="checkbox"/> AC400V AC690V		
Usage	<input type="checkbox"/> On Land <input type="checkbox"/> Humid tropical(TH)			Rated current	In= <input type="text"/> A		
Connection	Fixed	<input type="checkbox"/> Horizontal(back set)		<input type="checkbox"/> Vertical (back set)			
	Draw-out	<input type="checkbox"/> Horizontal(backset)		<input type="checkbox"/> Vertical(back set)			
Normally-deployed accessories	FFT Shunt release	<input type="checkbox"/> AC230V	<input type="checkbox"/> AC400V	<input type="checkbox"/> DC110V	<input type="checkbox"/> DC220V		
	FHD Switching-on electromagnet	<input type="checkbox"/> AC230V	<input type="checkbox"/> AC400V	<input type="checkbox"/> DC110V	<input type="checkbox"/> DC220V		
	FDC Power-driven operation mechanism	<input type="checkbox"/> AC230V	<input type="checkbox"/> AC400V	<input type="checkbox"/> DC110V	<input type="checkbox"/> DC220V		
	FFC Auxiliary switch	Standard pattern	<input type="checkbox"/> Four groups of changeover contacts				
		Exceptional pattern	<input type="checkbox"/> Four pieces of normally-opened contacts (NO) and four pieces of normally-closed contacts(NC)	<input type="checkbox"/> Six pieces of normally-opened contacts (NO) and two pieces of normally-closed contacts(NC)	<input type="checkbox"/> Six pieces of normally-opened contacts (NO) and two pieces of normally-closed contacts(NC)		
Choice of accessories	□FQT Under-voltage release	<input type="checkbox"/> AC230V	<input type="checkbox"/> AC400V				
		<input type="checkbox"/> Under-voltage instantaneous release					
		<input type="checkbox"/> Under-voltage time delay release <input type="checkbox"/> 0.5s <input type="checkbox"/> 1s <input type="checkbox"/> 2s <input type="checkbox"/> 3s					
	□FFS “Switching-off” lock mechanism	One sets of circuit breakers	<input type="checkbox"/> One lock and one key				
		Two sets of circuit breakers	<input type="checkbox"/> Two lock and one key				
		Three sets of circuit breakers	<input type="checkbox"/> Three lock and two key				
	□FLS Mechanical interlock	Two sets of circuit breakers	<input type="checkbox"/> Steel lock interlock		<input type="checkbox"/> Link rod interlock		
		<input type="checkbox"/> Steel lock interlock <input type="checkbox"/> Pattern one of rod interlock <input type="checkbox"/> Pattern two of rod interlock <input type="checkbox"/> Pattern three of rod interlock					
	<input type="checkbox"/> FXG Isolation plate between phases		<input type="checkbox"/> FAN “Button” locking device				
	<input type="checkbox"/> FWZ Electrical indication mechanism of draw-out socket position		<input type="checkbox"/> FJS Counter				
<input type="checkbox"/> FHM Electrical module for indication of ready-for switching on							

全国一级经销商明细表

北京

众业达电气(北京)有限公司 010-67315343
北京欣凯通机电有限公司 010-66126441
北京市北方森源电气有限责任公司 010-80823201

天津

天津众业达电气有限公司 022-86326008
天津市强强电器科技有限公司 022-83715526

河北

石家庄市众业达电气自动化有限公司 0311-68124241
石家庄市晓赛电气设备贸易有限公司 0311-67365598
河北华尔电气有限公司 0311-87227761
唐山众业达电气设备有限公司 0315-5772707

山西

山西常顺电器销售服务有限公司 0351-7023860
山西众业达电器有限公司 0351-6386456
山西三为电控设备成套有限公司 0351-6521630

内蒙古

包头市杰德自动化工程有限公司 0472-6180955
内蒙古宇欣机电科技有限公司 0471-6512281

江苏

众业达电气南京有限公司 025-85666651
南京扬力电器有限公司 025-84605256
南京兰珀电气工程有限公司 025-85283021
苏州苏新机电设备有限公司 0512-67571868
苏州华夏华通电气有限公司 0512-67702333
苏州市中信机电设备有限公司 0512-65114856
常熟市创达电气物资有限责任公司 0512-52876097
常熟市润源电气设备销售有限公司 0512-52110269
常熟市中通电力设备有限责任公司 0512-52853511
无锡众业达电器有限公司 0510-85431468
无锡智帆达商贸有限公司 0510-82736734
常州市中环电器有限公司 0519-88867161
镇江兆丰电器有限公司 0511-88320888
扬州易尔法电气有限公司 0514-82228758
连云港市希门自动化电器设备有限公司 0518-85452767
宿迁市常开电气有限公司 0527-88803336
海安巨龙工贸有限公司 0513-88839628
南通正源电气有限公司 18806292855
徐州泛得电子有限公司 0516-83861527

浙江

杭州华森电器有限公司 0571-86942811
杭州众业达电器有限公司 0571-88260899
杭州天源机电设备有限公司 0571-87244850
乐清市新格电气有限公司 0577-62727313
众业达电气温州有限公司 0577-88919098
杭州杭瑞电力科技有限公司 0577-89888099
宁波安能电气有限公司 0574-87239079
宁波众业达电器有限公司 0574-87052327
宁波市江东腾辉电器有限公司 0574-87890910
金华三变电气有限公司 0579-82363396
台州市壹衡电气设备有限公司 0576-85689988

安徽

众业达电气安徽有限公司 0551-65670231
合肥福瑞多电气有限公司 0551-62875829
合肥环亚机电贸易有限责任公司 0551-62871030
合肥皖为电气设备工程有限责任公司 0551-62884401

福建

众业达电气(厦门)有限公司 0592-5976058
厦门亿合电器有限公司 0592-5223466
福州众业达电器有限公司 0591-83374240
泉州市恒源电力设备有限公司 0595-22587087

江西

南昌众业达电气有限公司 0791-88218751
江西佳创实业有限公司 0791-86596001

山东

济南众业达电器有限公司 0531-81216270
济南中机亿万电气有限公司 0531-85869178
山东立博电气科技有限公司 0531-88950385
山东亘源电力工程有限公司 0531-86017733
淄博新能源机电设备有限公司 0533-2186118
青岛众业达电器有限公司 0532-55557512
莱芜汇鑫实业有限公司 13563400899
烟台信谊电气技术有限公司 0535-6105866

上海

上海众业达电器有限公司 021-56988198
上海森昊电气有限公司 021-54791857
上海企开电器设备有限公司 021-56319090
上海华启电气设备有限公司 021-56319090
上海斐格电气有限公司 021-24205696
上海泰耀机电设备有限公司 021-57428230

广东

广州市众业达电器有限公司 020-81279615
广州市友朋电气设备有限公司 020-34528950
众业达电气股份有限公司 0754-88739376
汕头市众业达机电设备有限公司 0754-88739167
广东新骊兴电气有限公司 0754-88680888-64
深圳市华冠电器销售有限公司 0755-83928001
众业达电气(深圳)有限公司 0755-25874404
东莞市运通泰电气科技有限公司 0769-22307818
众业达电气(东莞)有限公司 0769-88419110
佛山市君鹏机电设备有限公司 0757-83811990

广西

南宁市德控机电设备有限责任公司 0771-3212825
广西众业达电气有限公司 0771-3809472

海南

海南华胜电气设备有限公司 0898-66226803

河南

郑州众业达电器有限公司 0371-68775202
河南百望电气设备有限公司 0371-63329025
河南中电电器有限公司 0371-66965984
众业达电气洛阳有限公司 0379-65902689

湖北

武汉众业达机电设备有限责任公司 027-87929423
武汉万千新能源有限公司 027-87312243
武汉圣天科技有限公司 027-82706553
众业达电气襄阳有限公司 0710-3721585-808

湖南

长沙众业达电器有限公司 0731-85453248-822
长沙市康发电器有限公司 0731-84422858

辽宁

众业达电气(沈阳)有限公司 024-88505149
沈阳市新业物资实业公司 024-22734762
鞍山市耐特机电系统工程有限公司 0412-5230221
众业达电气(大连)有限公司 0411-86713497

吉林

长春市金蟾经贸有限公司 0431-84788961

黑龙江

哈尔滨北日月机电设备有限公司 0451-88390939
众业达电气哈尔滨有限公司 0451-83336581

陕西

陕西众业达电器有限公司 029-87452381-220
陕西新力源电气有限公司 029-33651903

甘肃

甘肃众业达电器有限公司 0931-8406069-603

宁夏

银川同正电气有限公司 0951-6014483

新疆

众业达新疆电气有限公司 18011837267

四川

成都众业达电器有限责任公司 028-87560470
成都慧永电器成套设备有限公司 028-68003527

贵州

贵阳德控机电设备有限责任公司 0851-83841170

重庆

重庆众业达电器有限公司 023-63056952
重庆商祺电气有限公司 023-68166686

云南

昆明众业达自动化设备有限公司 0871-68065589
昆明惠尔电气有限公司 0871-63835808